
WORLD MARKET Assembly Instructions

PALMERA RECTANGLE BENCH

SKU-585019

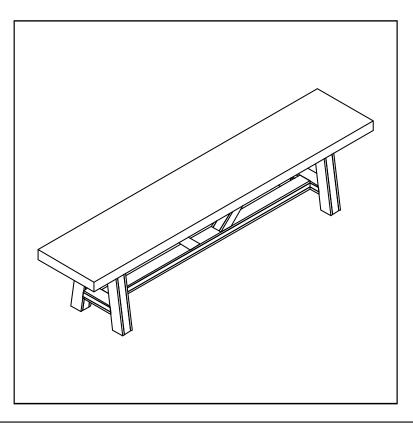

THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT NEAREST WORLD MARKET STORE. IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

NOT FOR COMMERCIAL USE.

Component List


LABEL	PICTURE	DESCRIPTION	QTY
А		Bench Top	1
В		Leg	2
С	····	Lower Wood Crossbar	1
D		Upper Wood Support Bar	2

Hardware

LABEL	PICTURE	DESCRIPTION	QTY
H-1		Short Allen Bolt M6x25mm	2
H-2		Medium Allen Bolt M8x70mm	4
Н-3	0	Barrel Nut M8	2
H-4		Long Allen Bolt M8x 90mm	8
Н-5	\bigcirc	Spring Washer M8 Ø 11.5 mm x 1.2 mm	8
Н-6	\bigcirc	Flat Washer M8 ∅ 19 mm x 1 mm	12
H-7		Allen Key(L=110MM)	2
H-8		Spare Allen Bolt (used temporarily)	1
H-9		Flat Washer M6 ∅ 14 mm x 1 mm	2

Assembly Preparation

Before Beginning:

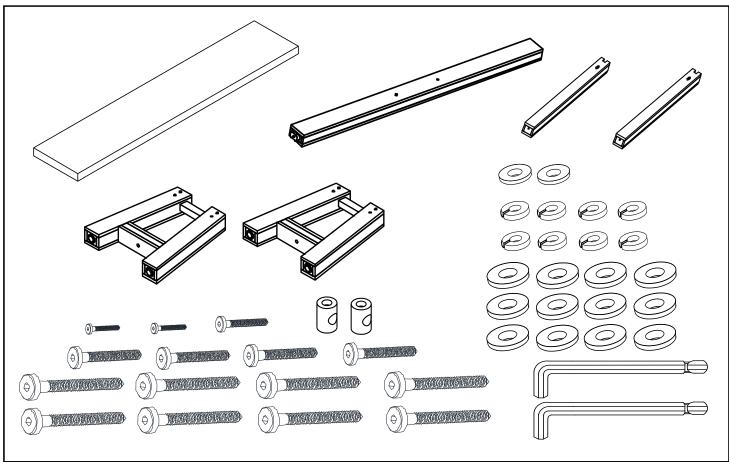

Unpack all hardware bags and components to ensure you have all parts-



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-
- In case of missing parts, please contact nearest World Market store or our customer service call center 877-967-5362.

Step 1


IMPORTANT: It is highly recommended to have a second person to assist during this product assembly. Do not fully tighten allen bolts until all components are in place. Do not over tighten allen bolts.

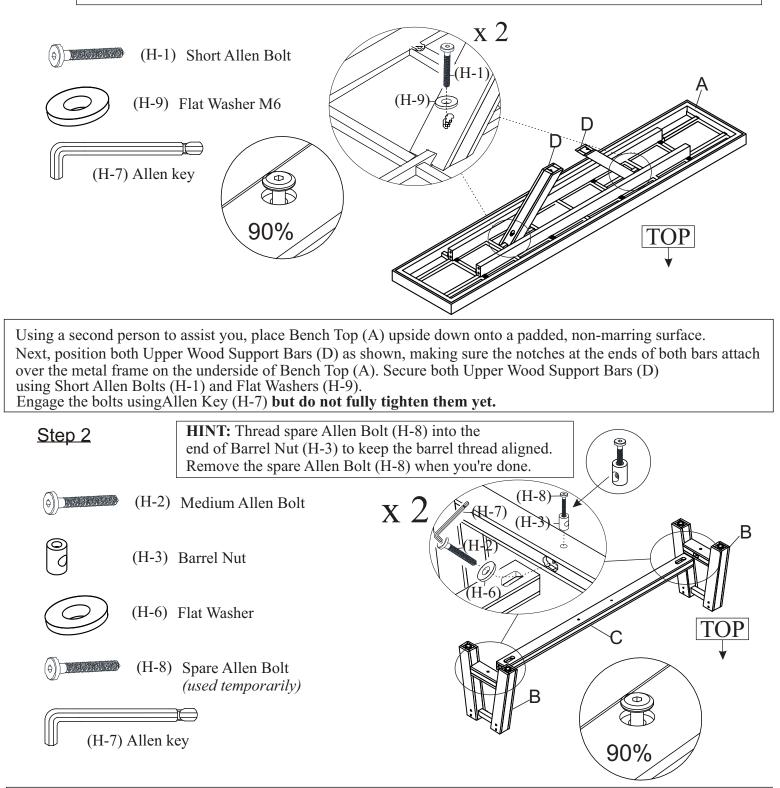

Arrange both Legs (B) with the tops facing downwards as shown. Attach Lower Wood Crossbar (C) to Legs (B) and secure both sides by attaching a Medium Allen Bolt (H-2) and Flat Washers (H-6) into a Barrel Nut (H-3). Use Spare Allen Bolt (H-8) threaded into Barrel Nut (H-3) to hold the threads aligned while engaging Medium Allen Bolt (H-2). Engage Medium Allen Bolts (H-2) using Allen Key (H-7) **but do not fully tighten them yet.** Once Barrel Nuts (H-3) have been engaged, remove the spare Allen Bolt (H-8).

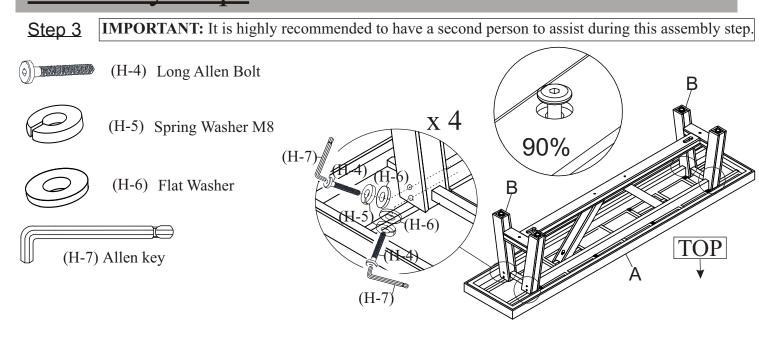


Using a second person to assist you, carefully lower the leg assembly (from Step 2) down onto the Bench Top (A) assembly (from Step 1). Align the holes on Legs (B) with the metal apron frame on Bench Top (A) and secure each leg to the frame using 2 Long Allen Bolts (H-4), Spring Washers (H-5) and Flat Washers (H-6). Engage the bolts using Allen Key (H-7) **but do not fully tighten them yet.**

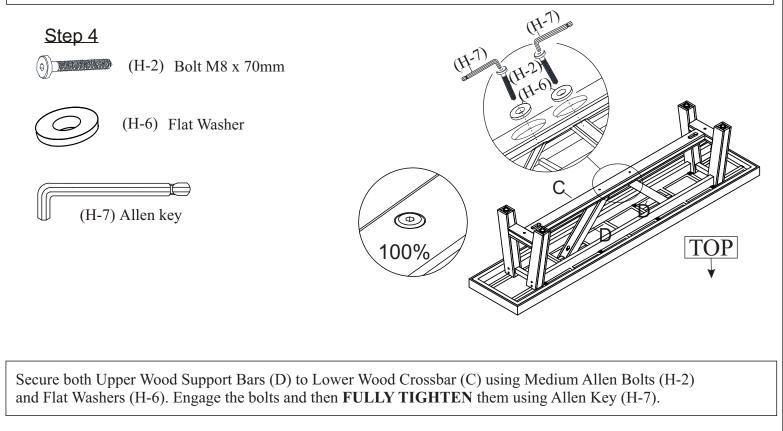


Step 5

(H-7) Allen key

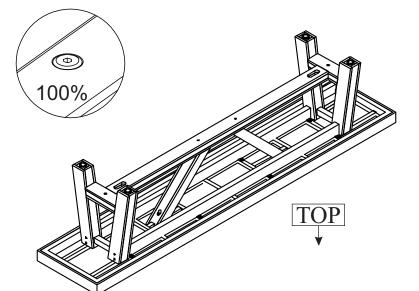


FULLY TIGHTEN all Allen Bolts from Steps 1-4 at this time using Allen Key (H-7).

Step 6

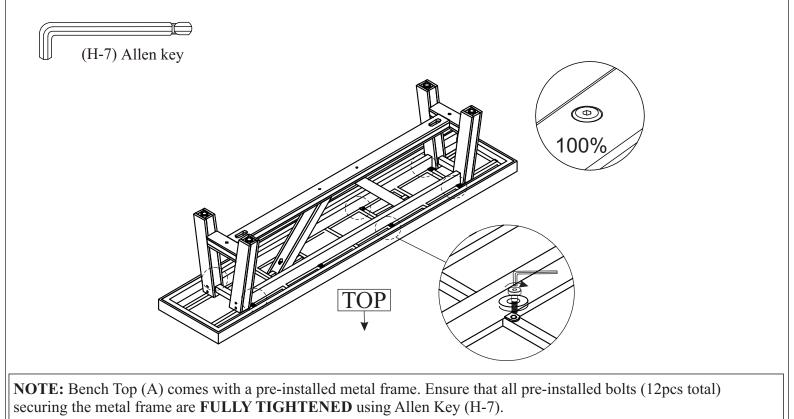


Step 7 IMPORTANT: It is highly recommended to have a second person to assist during this assembly step.

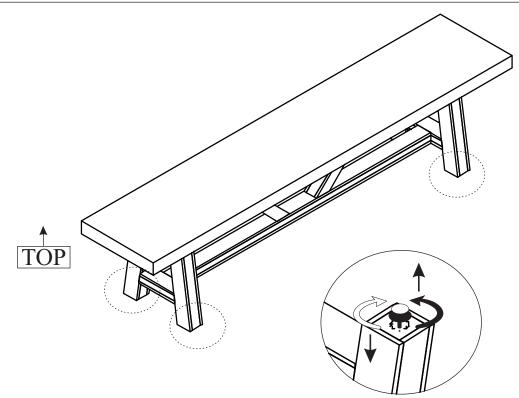

Using a second person to assist you, carefully turn the bench assembly upright. Position the table in its desired location before making any final adjustments using the adjustable floor levelers (if needed). Assembly is now complete and the bench is ready for use.

NOTE: Check that all bolts are fully tightened every 3 months to ensure stability.

Care & Maintenance

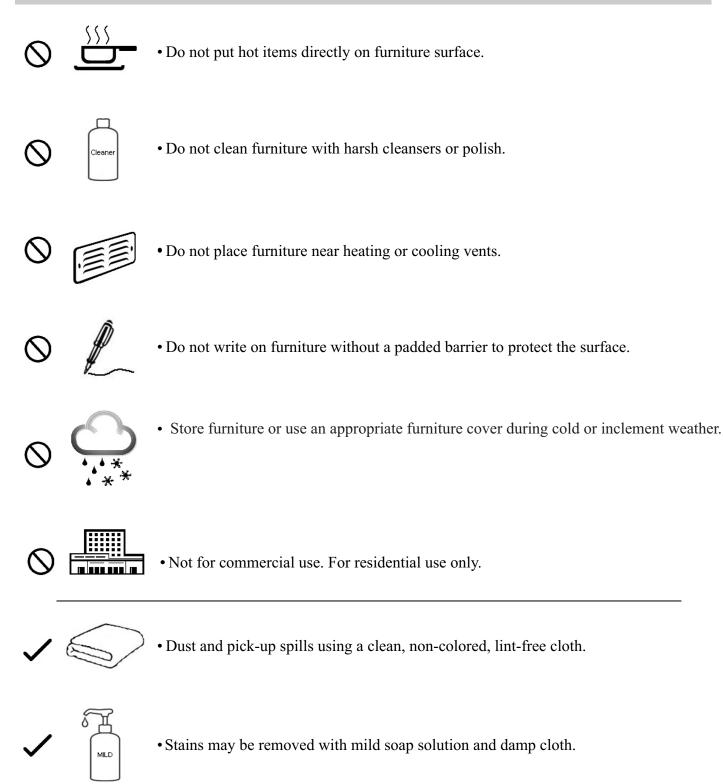

CAUTION: As with any wood, the color may fade if left in direct sunlight of inclement weather. Minor cracking may occur with age. These are naturally occurring features of wood and do not affect product performance.

We recommend using our Natural Outdoor Wood Furniture Finish (sold separately) to help preserve and protect the wood and finish. Do not apply any finish to the table top surface.