 


WORLD MARKET®

Assembly Instructions

Nadya Raffia Back Gallery Desk

 
 
 
 

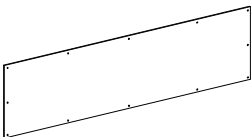 
SKU - 622516

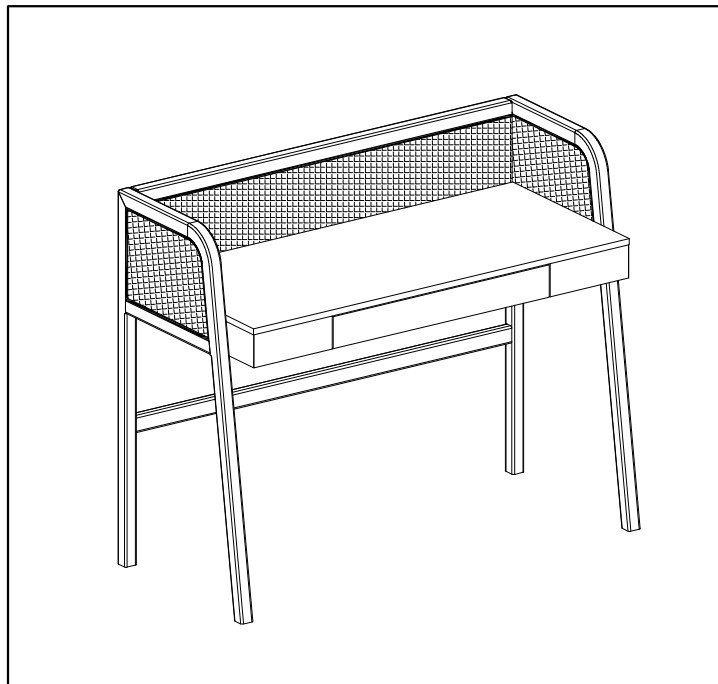

 

 
 

 

THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT THE NEAREST WORLD MARKET STORE. IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL CENTER TOLL FREE AT 877- 967- 5362 FOR ASSISTANCE.

All products sold at World Market are not for commercial use and are intended for residential use only.


 
Component List

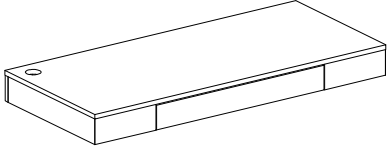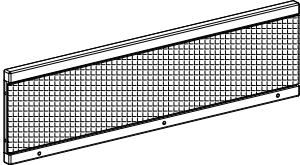LABEL		DESCRIPTION	QTY
A		Body	1
B		Right Leg Frame	1
C		Left Leg Frame	1
D		Back Frame	1
E		Stretcher	1
F		Back Panel	1

Hardware List


LABEL		DESCRIPTION	QTY
H-1		Screw Ø4 x 15mm	12
H-2		Dowel Ø10 x 30mm	4
H-3		Short Bolt M6 x 40mm	7
H-4		Long Bolt M6 x 75mm	6
H-5		Spring Washer M6 x 11mm	13
H-6		Small Flat Washer M6 x 13mm	6
H-7		Large Flat Washer M6 x 18mm	7

Tool List

LABEL		DESCRIPTION	QTY
T-1		Allen Key M4 x 30 x 110mm	1
T-2		Phillips Head Screwdriver (Not Included)	Not Included

Assembly Preparation

 
Before Beginning:

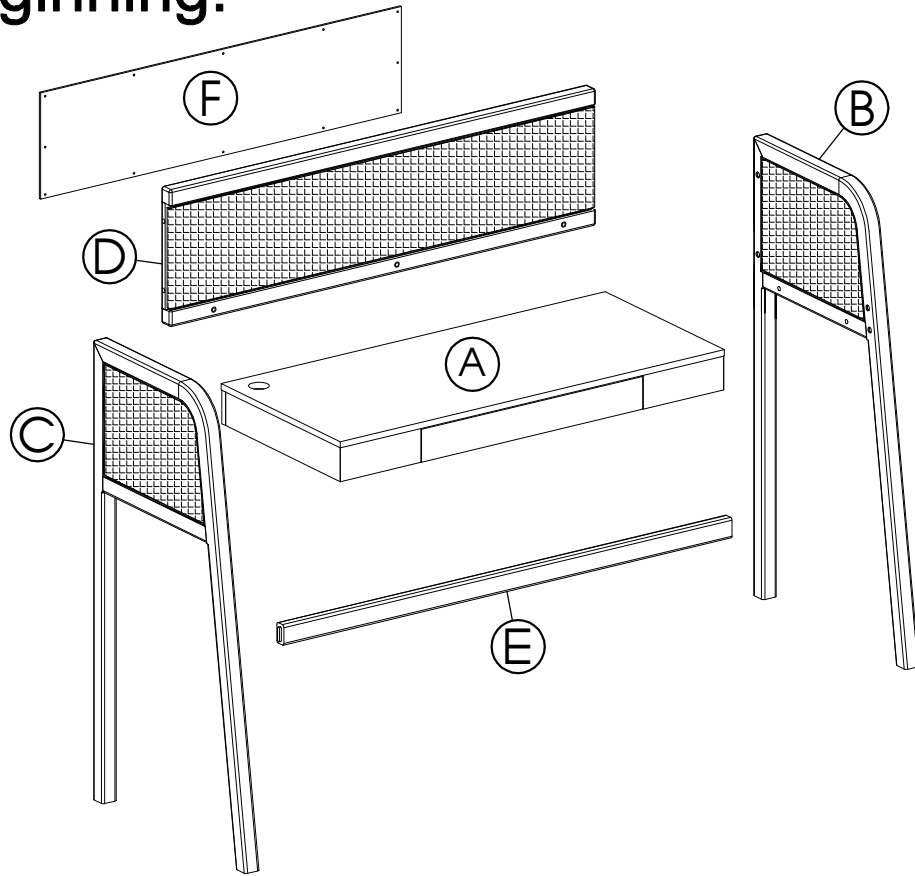


- Unpack all hardware bags and components to ensure you have all parts.
- Read instructions, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.
- In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.
- **WARNING:** Small parts are a choking hazard. Adult Supervision is required before, during, and after assembly.

Assembly Steps

Step 1:

(H-2)  Dowel Ø10 x 30mm 4 PCS

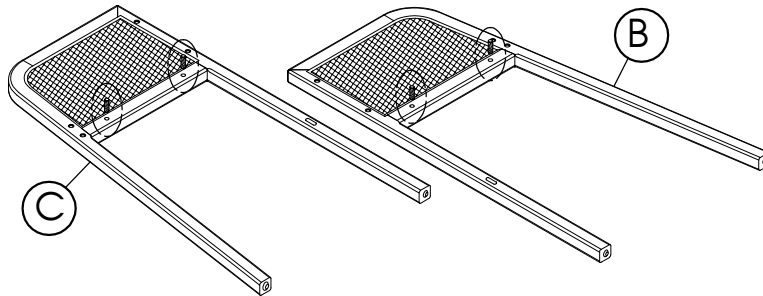

Lay both Leg Frames (B&C) onto a padded, non-marring surface with the holes facing up. Insert Dowels (H-2) into the holes as shown above.

Step 2:

(H-3)  Short Bolt M6 x 40mm 4 PCS


(H-4)  Long Bolt M6 x 75mm 2 PCS

(H-5)  Spring Washer M6 x 11mm 6 PCS


(H-6)  Small Flat Washer M6 x 13mm 2 PCS

(H-7)  Large Flat Washer M6 x 18mm 4 PCS

(T-1)  Allen Key M4 x 30 x 110mm 1 PC

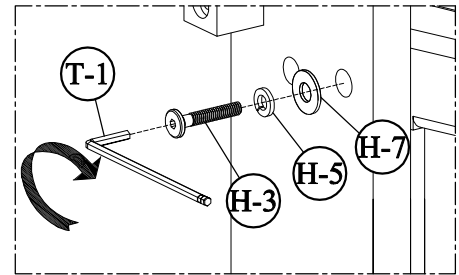



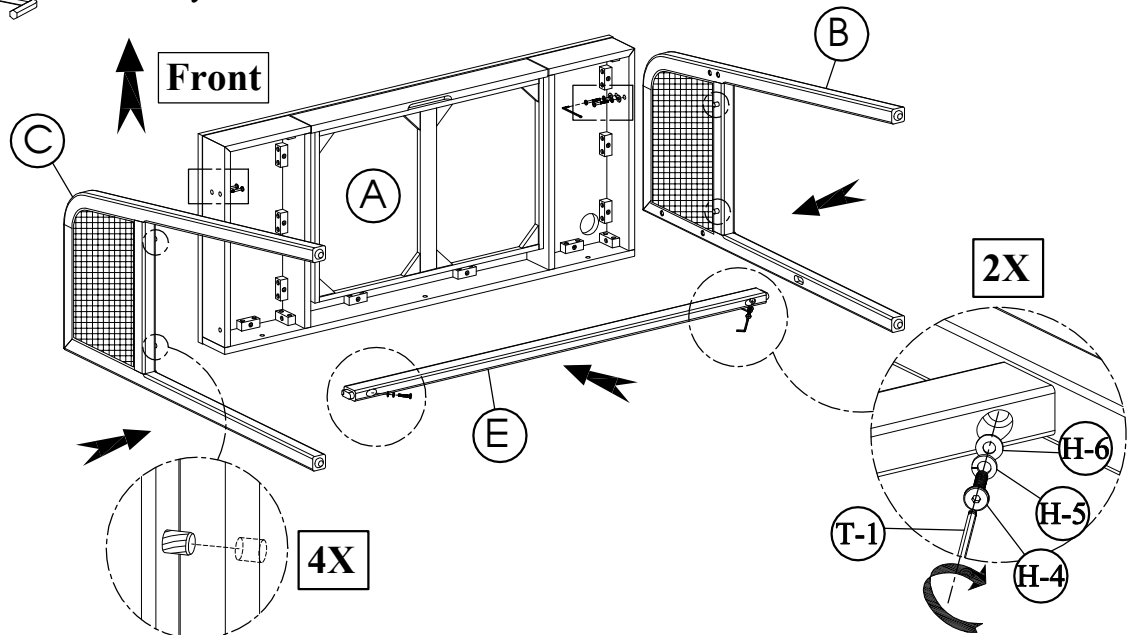



PLEASE MAKE NOTE OF THE DIFFERENT HARDWARE SIZES AND ENSURE YOU ARE USING THE CORRECT SIZE HARDWARE FOR EACH STEP.




Using a second person to assist you, place the Body (A) on its back as shown. Position the Left Leg Frame (C) with Body (A) by inserting previously installed Dowels (H-2) into receiving holes. Loosely secure connection with SHORT Bolts (H-3), Spring Washers (H-5), and LARGE Flat Washers (H-7) using provided Allen Key (T-1), stacking the hardware in the order as shown. Position Stretcher (E) with Left Leg Frame (C). Loosely secure connection with LONG Bolt (H-4), Spring Washer (H-5) and SMALL Flat Washer (H-6) using provided Allen Key (T-1), stacking the hardware in the order as shown. Repeat the same steps for Right Leg Frame (C). Do not yet fully tighten hardware.

Assembly Steps

Step 3:

(H-3)		Short Bolt M6 x 40mm	3 PCS
(H-4)		Long Bolt M6 x 75mm	4 PCS
(H-5)		Spring Washer M6 x 11mm	7 PCS
(H-6)		Small Flat Washer M6 x 13mm	3 PCS
(H-7)		Large Flat Washer M6 x 18mm	4 PCS
(T-1)		Allen Key M4 x 30 x 110mm	1 PC


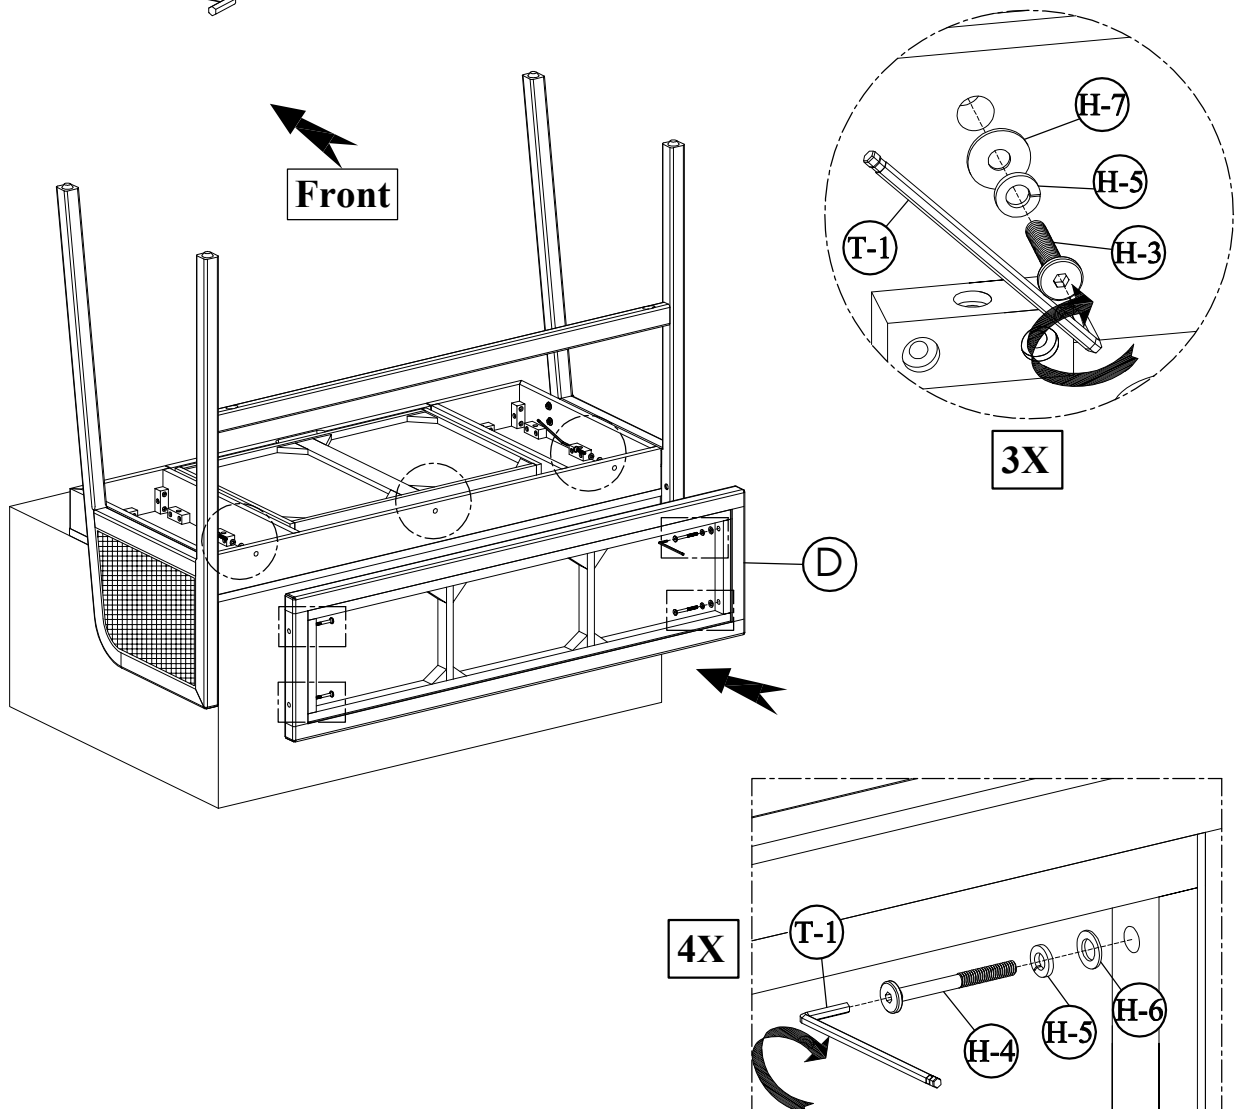


Using a second person to assist you, position the assembly upside down onto an elevated, padded surface, such as a table, so that the Body (A) rests on the surface. Position Back Frame (D) on the back of the assembly. Loosely secure connections between Back Frame (D) and Leg Frames (B&C) with LONG Bolts (H-4), Spring Washers (H-5) and SMALL Flat Washers (H-6) using provided Allen Key (T-1), stacking the hardware in the order as shown. Loosely secure the Back Frame (D) to the Body (A) with SHORT Bolts (H-3), Spring Washers (H-5) and LARGE Flat Washers (H-7) using provided Allen Key (T-1), stacking the hardware in the order as shown. Do not yet fully tighten hardware.

Assembly Steps


Step 4:

(T-1)  Allen Key M4 x 30 x 110mm 1 PC

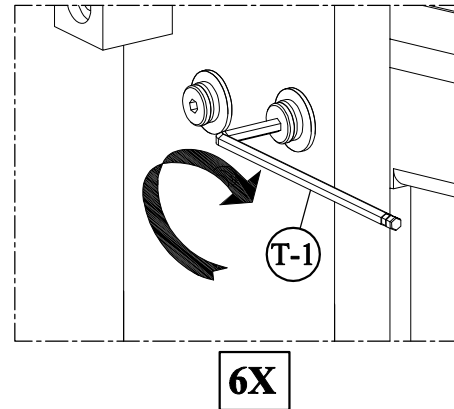
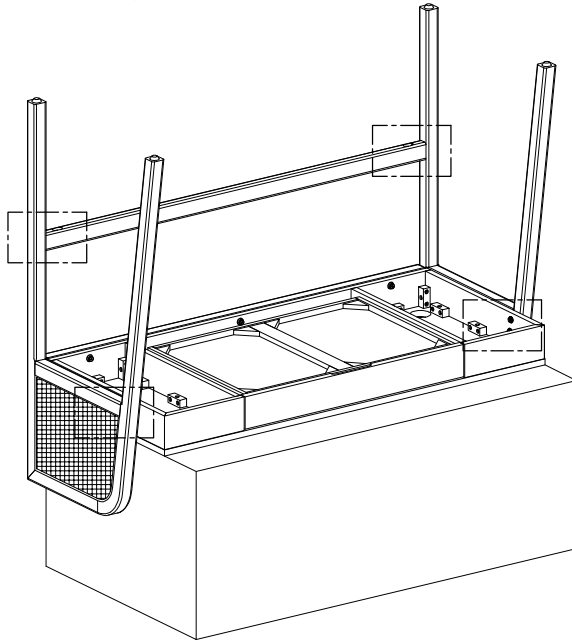


Using the provided Allen Key (T-1) fully tighten all bolts from previous steps. Do not over tighten.

 Step 5:

(H-1)  Screw Ø4 x 15mm 12 PCS

(T-2)  Phillips Head Screwdriver Not Included

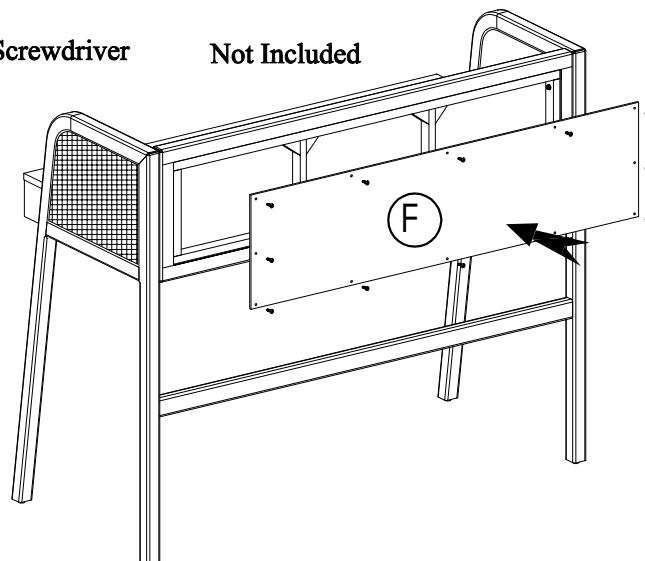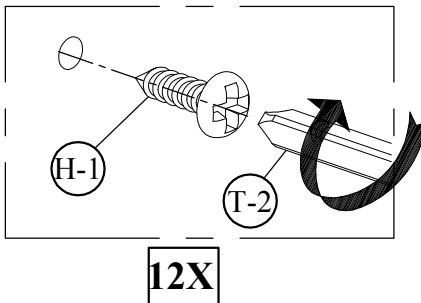


Using a second person to assist you, carefully set the assembly upright. Position and secure the Back Panel (F) to the Back Frame (D) by inserting Screws (H-1) into the pre-drilled holes and tightening using Phillips Head Screwdriver (T-2; not included). Do not use a power drill and do not over tighten, as doing so might cause damage.

Assembly Steps

Step 6:

The backboard on Nadya Gallery Desk can be used as a pin board to hang notes or pictures, using simple push pins to attach. NOTE: the backboard is non-healing and therefore may begin to show signs of wear with time and use. When adding or removing pins from the backboard, press firmly and evenly and try not to drag or twist the pins as damage to the raffia surface may occur.

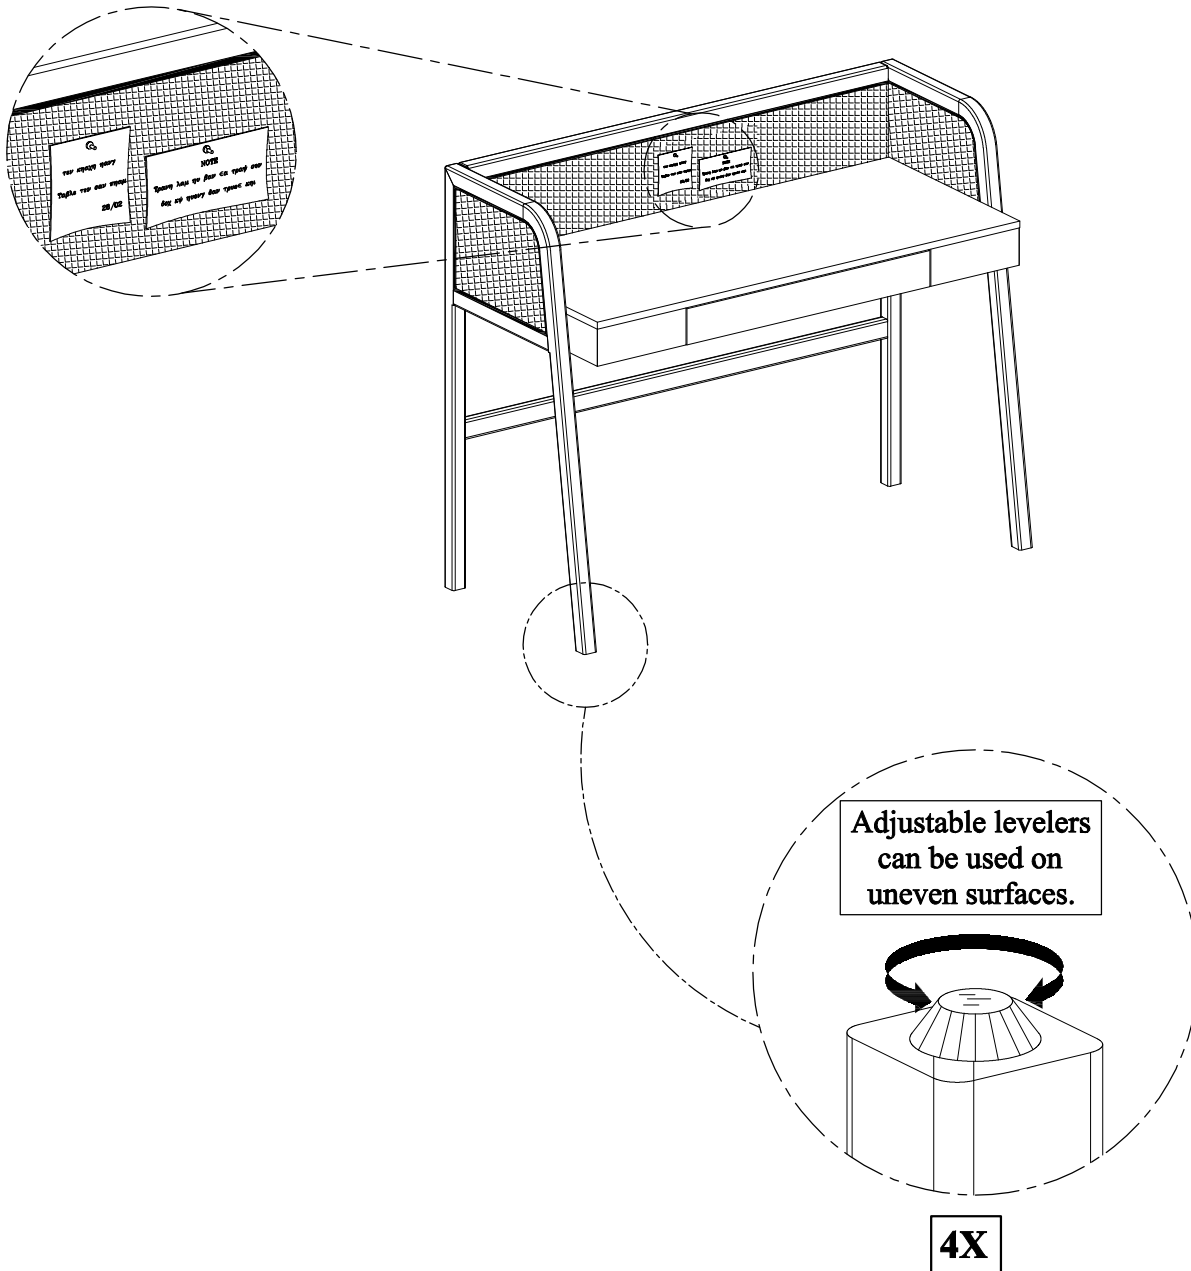

Ensure that all bolts have been fully tightened. Assembly is now complete and the table is ready for use. NOTE: Check that all bolts remained fully tightened every 3 months to ensure stability.

Anti-Tip Kit Installation

Warning - Children may be injured by tipping of furniture and the use of the Anti-Tip Kit is highly recommended. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware OR into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).


- Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly in the position illustrated above. Where possible, mark a drill hole position on the wall where there is a stud and use a drill or screwdriver (NOT INCLUDED) to attach Brackets (5) to the wall using Long Screws (3) in the location of the wall studs.

- In a case where there is no wall stud, hold Brackets (5) on wall and mark the drill hole positions so that they are roughly in the position illustrated above. Using a drill with a drill bit roughly the diameter of the plastic Wall Plugs (4), drill pilot holes in marked positions. Insert the plastic Wall Plugs (4) into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws (3) through Brackets (5) and into the corresponding Wall Plugs (4) in the wall using a phillips head screwdriver (NOT INCLUDED).

- Next, attach remaining two Brackets (5) to the back of the piece using Short Screws (2) so they align with Brackets installed on the wall. Loop Straps (1) through Brackets (5) on the furniture piece, then through Brackets (5) on the wall and tighten until snug. Installation is now complete.


- **IMPORTANT:** Check that the Wall Brackets are firmly screwed into the wall and the Straps are snug.

- If there is any hesitation, please consult a professional or your local hardware store.

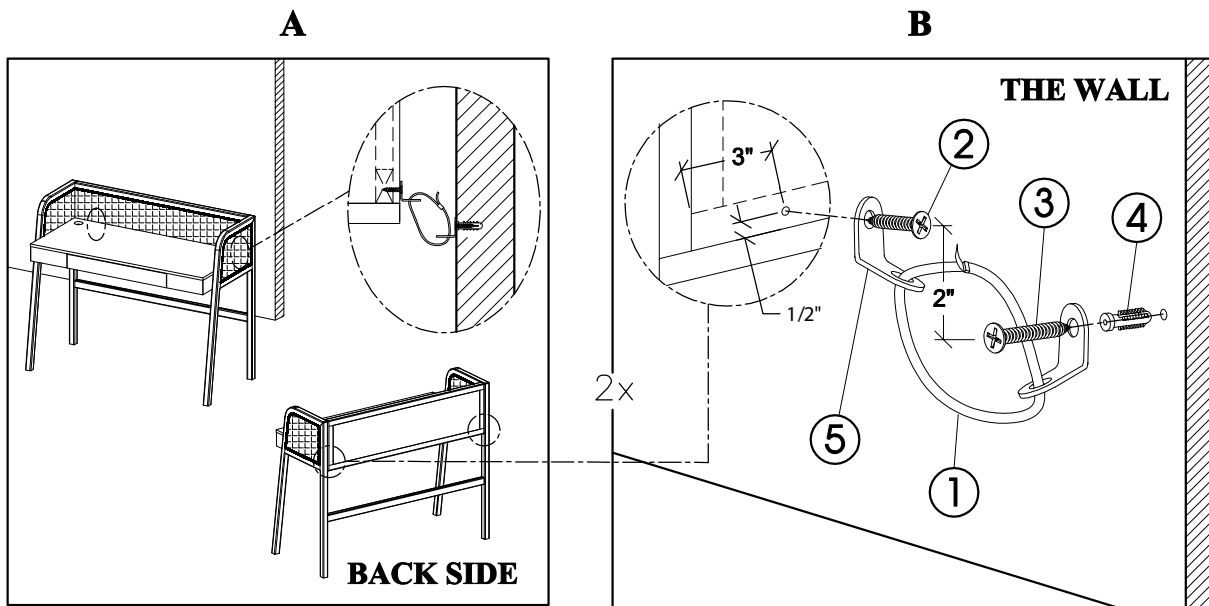

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>

Care & Maintenance

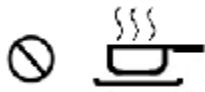

● Do not put hot items directly on furniture surface.



● Do not clean furniture with harsh cleansers or polish.



● Do not place furniture in direct sunlight.



● Do not place furniture near heating or cooling vents.



● Do not write on furniture without a padded barrier to protect the surface.



● Do not place furniture outside. For indoor use only.



● All products sold at World Market are not for commercial use and are intended for residential use only.



● Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of purchase. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.