WORLD MARKET®

Assembly Instructions

LILOH CANE WAVYSHADE TRIPOD FLOOR LAMP

SKU- 629090




THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS PERTAINING TO THE ASSEMBLY OF THIS FLOOR LAMP, PLEASE CONTACT THE NEAREST WORLD MARKET STORE. IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

> ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT FOR COMMERCIAL USE AND ARE INTENDED FOR RESIDENTIAL USE ONLY.

<u>Component Lis</u> t			
LABIL	PICTURE	DESCRIPTION	QTY
А		Fixed base leg	1
В		Detachable Base legs	2
С		Shade	1
D		Uno ring	1
Е		Bulb	1 Not included
<u>Hardware List</u>			
H-1		Small Flat Head Allen Bolt (M6 X 12mm)	2
H-2		Large Flat Head Allen Bolt (M6 X 25 mm)	2
<u>Tool List</u>			
T-1		Allen Key 4mm X 110 MM	1

Assembly Preparation

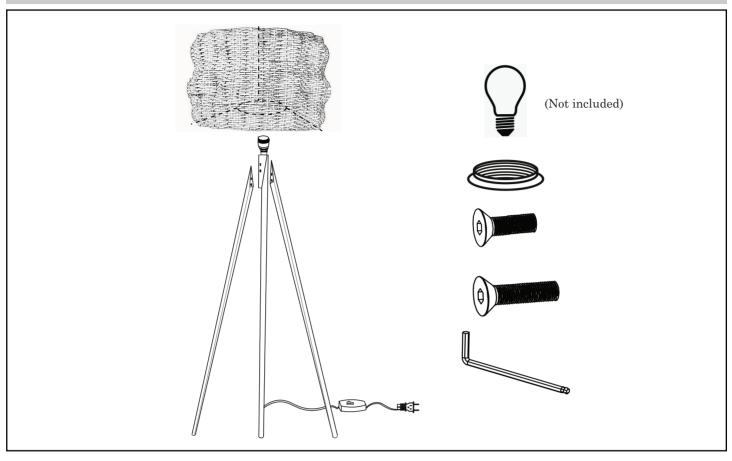



Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).



Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.



It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.



Assemble on a clean non-marring surface (such as the product's packing foam).



Do not discard any packaging until the product has been fully assembled.



In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.




WARNING: Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.

Assembly Steps

ELECTRICAL FITTING


Professional installation recommended.

FOR YOUR SAFETY : Do not plug the unit in until completely installed and assembled.

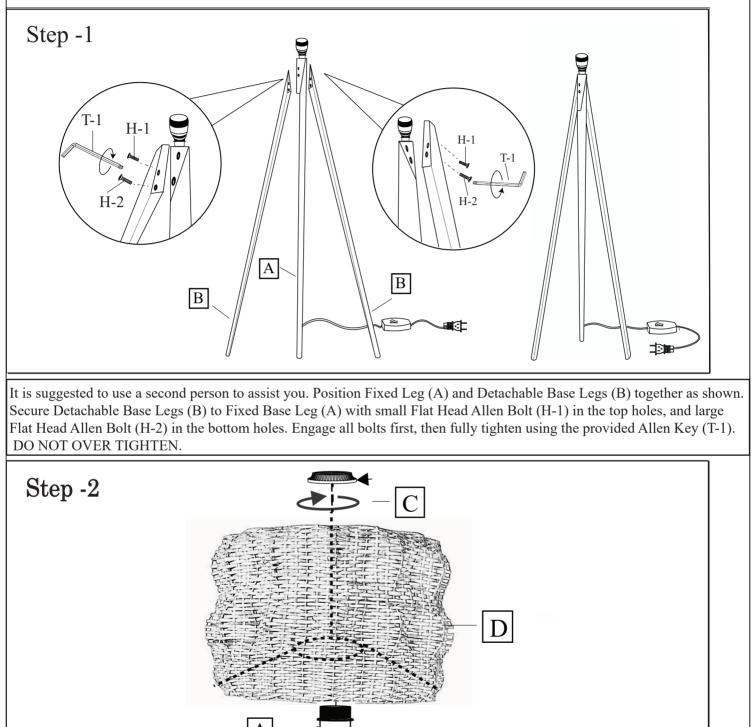

Remove Uno Ring (C) if it is pre-attached to light socket. Place Lamp Shade (D) onto the light socket on top of the assembly from Step 1. Secure by re-attaching Uno Ring (C) onto light socket. Tighten until snug. Remove any plastic wrapping on the Lamp Shade (D) before use.

Bulb Installation

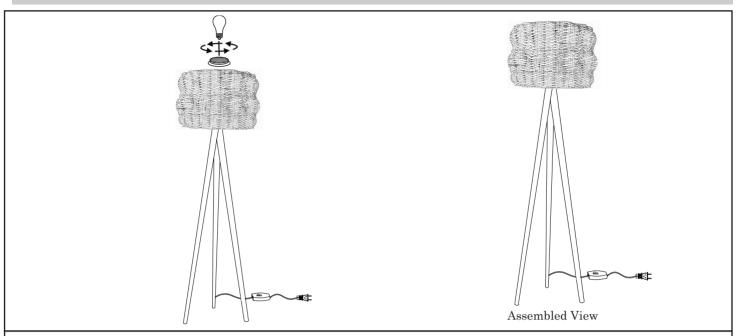

Insert Bulb (E; not included) into the light socket and rotate it clockwise to secure. Plug in lamp to a near socket and check for proper lighting operation. Assembly is not complete and the product is ready for use.

<u>Warnings</u>



All products sold at World Market are not for commercial use and are intended for commercial use and are intended for residential use only.

To prevent the risk of fire, DO NOT use light bulbs with wattage greater than (Vendor Supplied Bulb Recommendations) for this product. Bulbs sold separately.

Never turn on power to the lamp until light bulb has been installed and assembly is completed.

The recommended shade size for this lamp is 16' X 16' X 10' rise. If an alternate size is used, the measuremnt should be checked. As oversized shade may cause ficture to tip over.

Care & Maintenance



DO NOT clean furniture with harsh cleansers or polish.



DO NOT place fixture outside. For INDOOR USE ONLY.



Fixture can be dusted using a clean, non-colored, lint-free dry cloth.

NOTE: *If product has any reason to indicate handcrafted nature and detail within the design or finish, Please indicate that statement here and that any imperfections or variations are considered normal.