 


# WORLD MARKET®

## Assembly Instructions

Jagger Record Media Cabinet 60"

 
 
 
 
 
 
 
 
 
 
SKU 626729

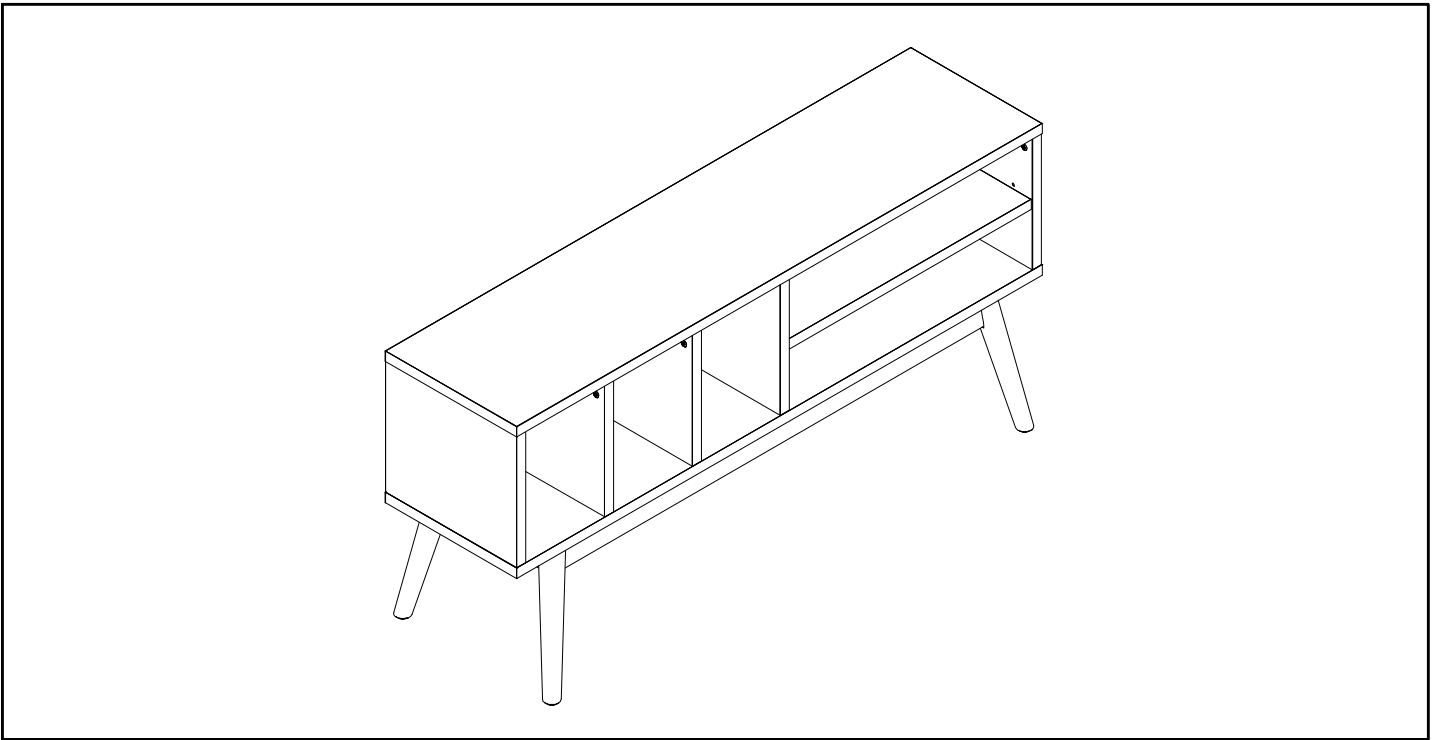


 
 

 

 
 
 
 
 
 
Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT  
FOR COMMERCIAL USE AND ARE INTENDED FOR  
RESIDENTIAL USE ONLY


 
 
 
# Component List

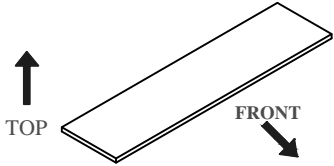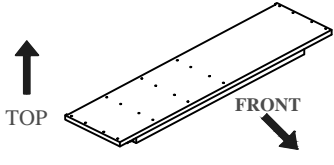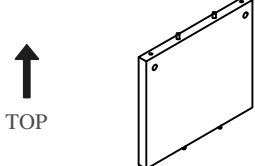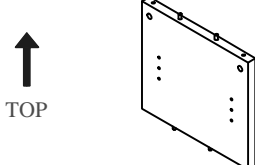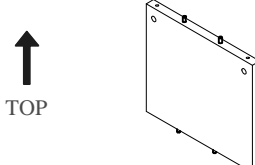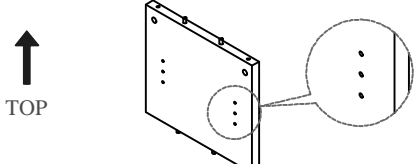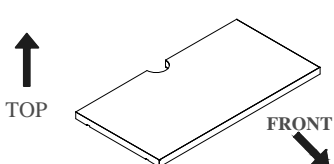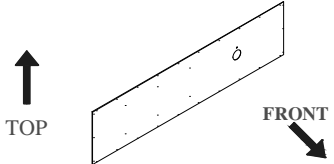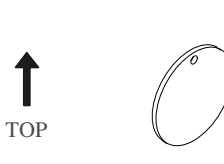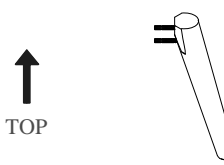LABEL	PICTURE	DESCRIPTION	Q.TY
A		Top Frame	1
B		Bottom Frame	1
C-1		Left Side Frame	1
C-2		Right Side Frame	1
D-1		Left Divider Frame	2
D-2		Mid Divider Frame	1
E		Adjustable Shelf	1
F		Back Panel	1
G		Lid	1
I		Leg	4

# Hardware List

 
 
LABEL	PICTURE	DESCRIPTION	Q.TY
H-1		Cam lock Ø15 mm	10
H-2		Cam Screw	10
H-3		Connecting Screw M7 x 50 mm	10
H-4		Pan head Screw M3.5 x 25 mm	32
H-5		Shelf Pin Ø6	4
H-6		Connector Bolt M6 x 10 mm (inside)	1
H-7		Allen Bolt M6 x 20 mm	1
H-8		Large Flat Washer Ø10 x Ø20 x T2 mm	1
H-9		Small Flat Washer Ø8 x Ø16 x T2 mm	8
H-10		Lock Washer Ø8 x Ø13 x T2 mm	8
H-11		Nut M8 x 13 mm	8
H-12		Anti Tip-kit	1

# Tool List

LABEL	PICTURE	DESCRIPTION	QTY
T-1		Allen Key 4 x 110 x 30 mm	1
T-2		Wrench 13 mm	1
T-3		Triangle	1
T-4		Phillips Screwdriver (Not Included)	1

# Assembly Preparation


## Before Beginning:

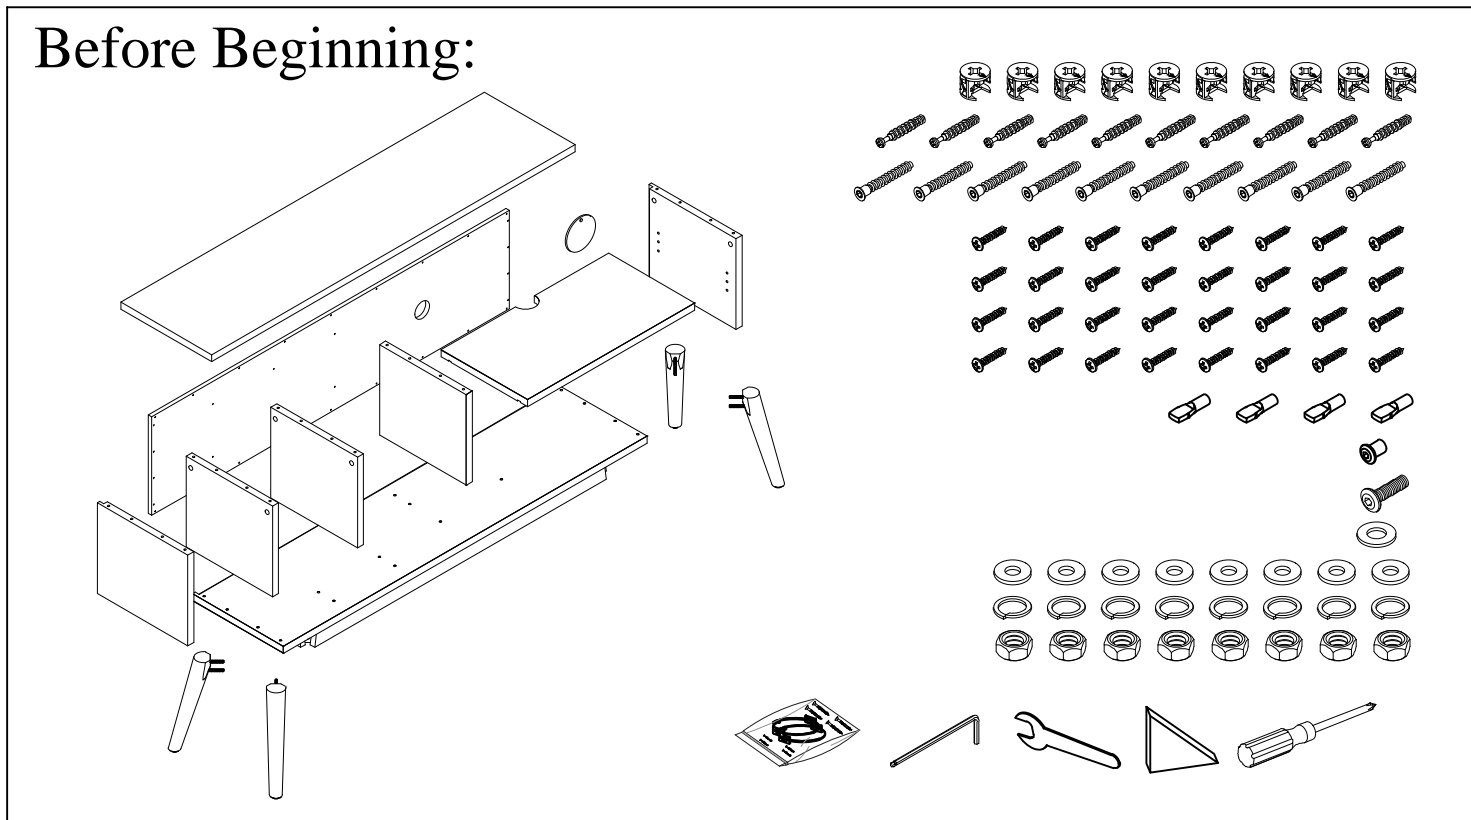

Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).




Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.

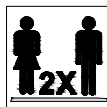


It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.

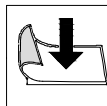

Assemble on a clean non-marring surface (such as the product's packing foam).

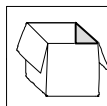

Do not discard any packaging until the product has been fully assembled.




In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.



**WARNING:** Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.


# Assembly Steps

## Step 1

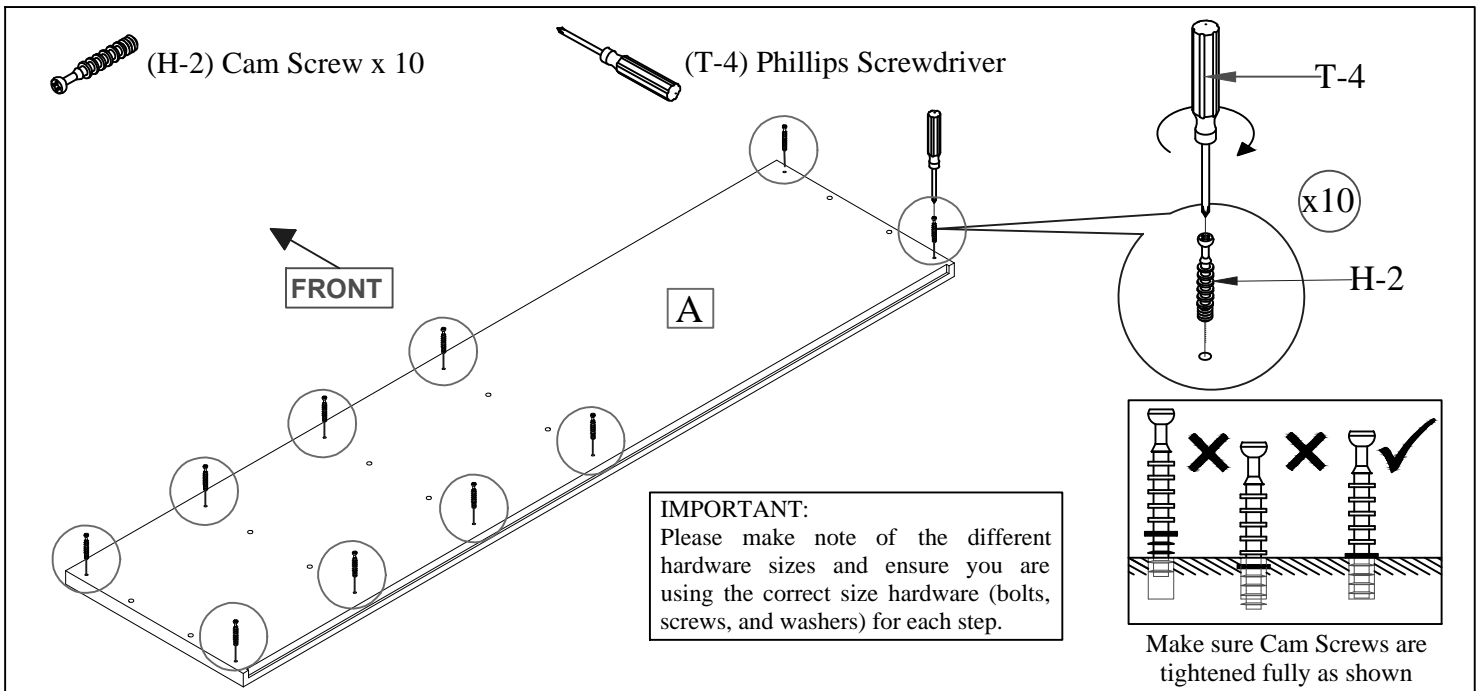


Place Top Frame (A) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top Frame (A) as shown. Fully tighten using a Phillips screwdriver (T-4, not included) per illustration above.

## Step 2

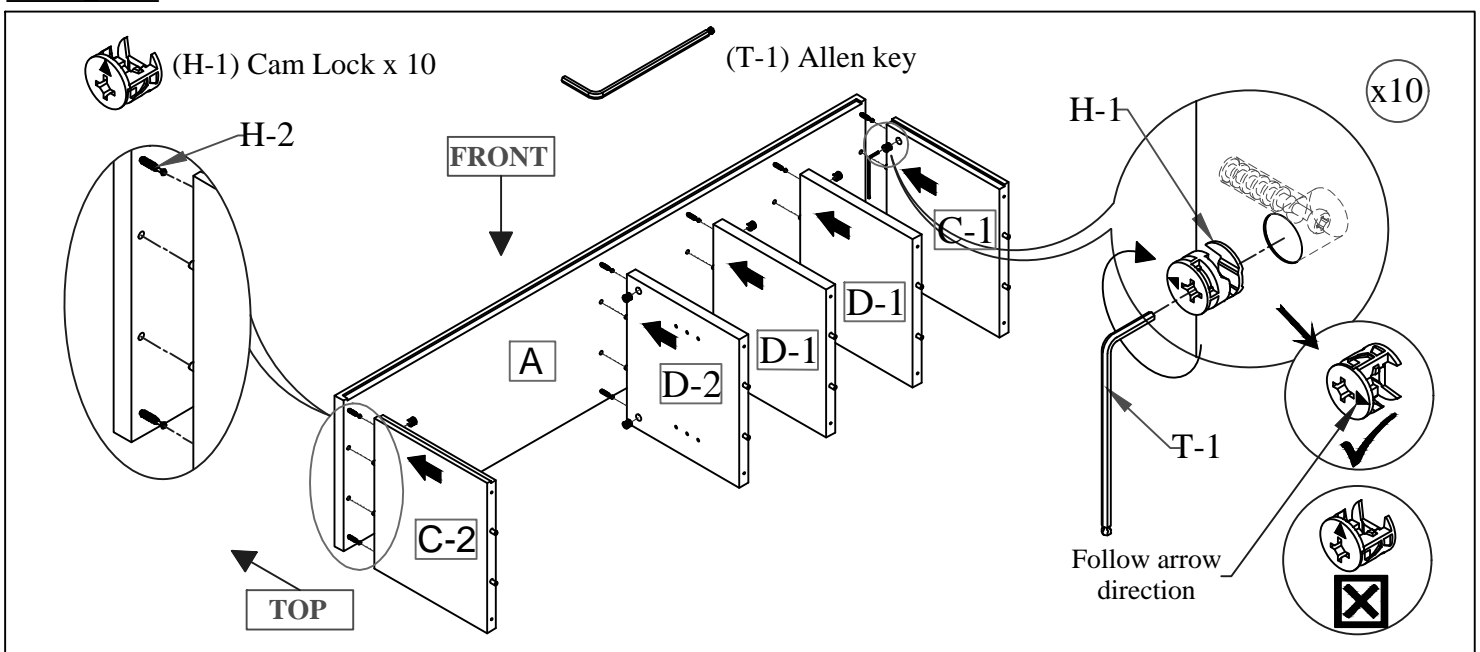


Using a second person to assist you, hold the Top Frame (A) on the front edge as illustrated. Position the Left/Right Side Frames (C-1/C-2) and the Left/Mid Divider Frames (D-1/D-2) with the Top Frame (A) so that the previously installed Cam Screws (H-2) and dowels are inserted into their corresponding holes. Note the position of the Cam Lock (H-1) holes. Install Cam Locks (H-1) into all components as illustrated above, ensuring the arrows point toward the corresponding Cam Screws (H-2). Once placed, fully tighten Cam locks (H-1) by turning clockwise using the provided Allen Key (T-1). Fully tighten but DO NOT over tighten. The assembly should now be able to stand on its own.

## Step 3

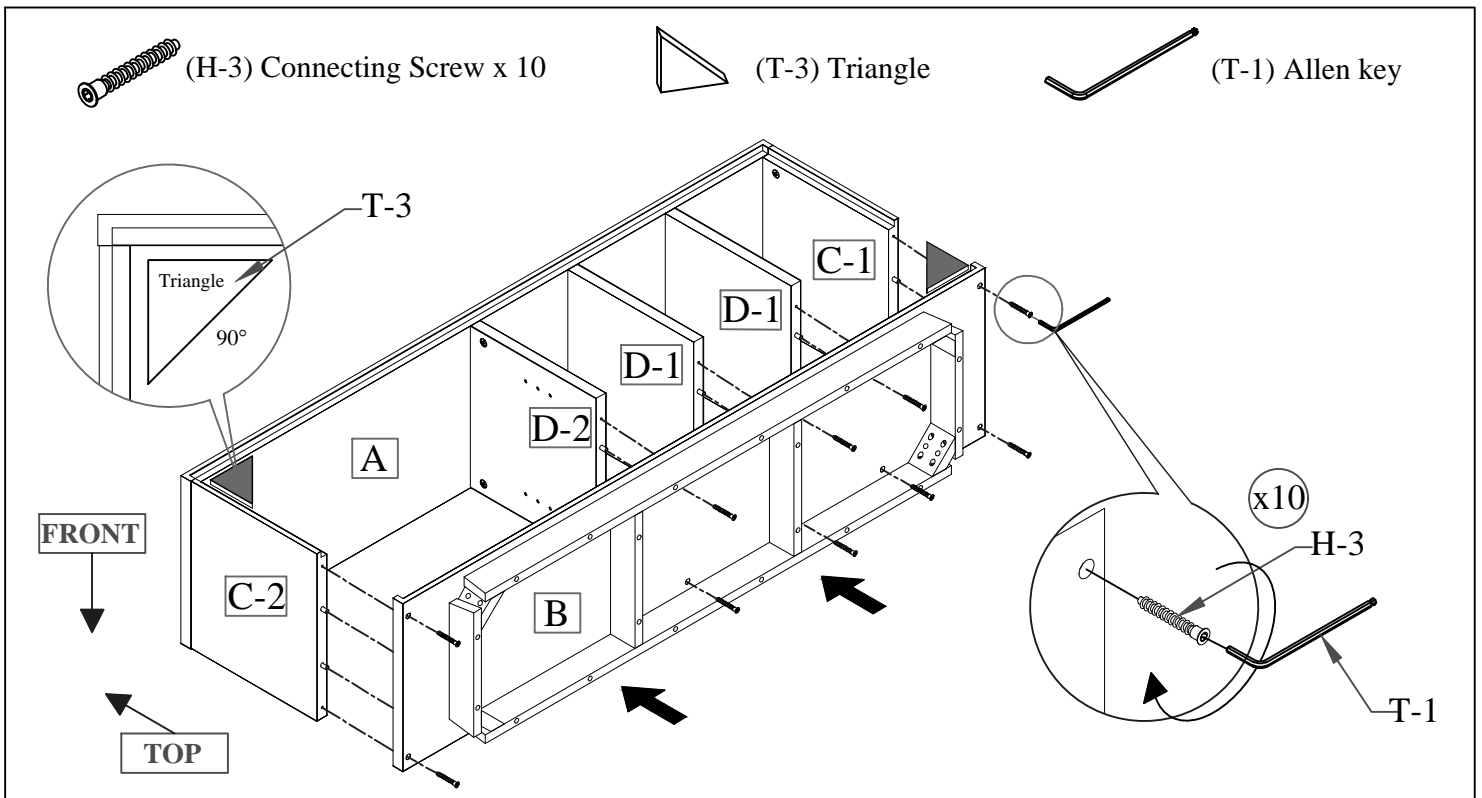


Using a second person to assist you, carefully position the Bottom Frame (B) with the assembly by inserting the dowels in Left/Right Side Frames (C-1/C-2) and Mid/Left Divider Frame (D-1/D-2) into their receiving holes in the Bottom Frame (B). Once engaged, use the provided 90 Degree Triangle (T-3) to ensure the assembly is square. If there is a gap between either edge of the Triangle (T-3), adjust the assembly until there are no gaps. Once satisfied, secure the connection by engaging all Connecting Screws (H-3) first by hand, then fully tightening using the provided Allen Key (T-1), as shown. Do not over tighten.

## Step 4

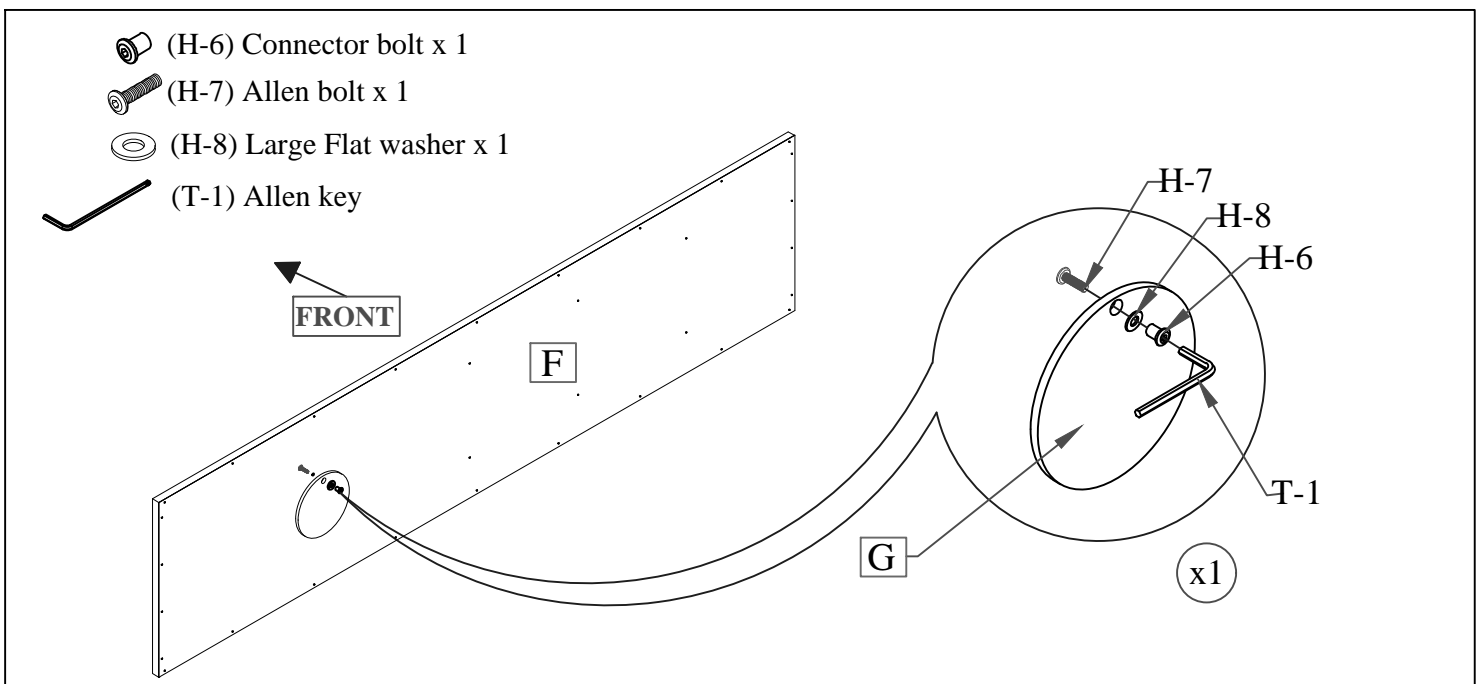


Position Lid (G) to Back Panel (F). Secure with Connector Bolt (H-6), Large Flat Washer (H-8) and Allen Bolt (H-7) using provided Allen Key (T-1), stacking the hardware through Back Panels in the order as shown. Engage all bolts first then fully tighten. **DO NOT** over tighten.

## Step 5

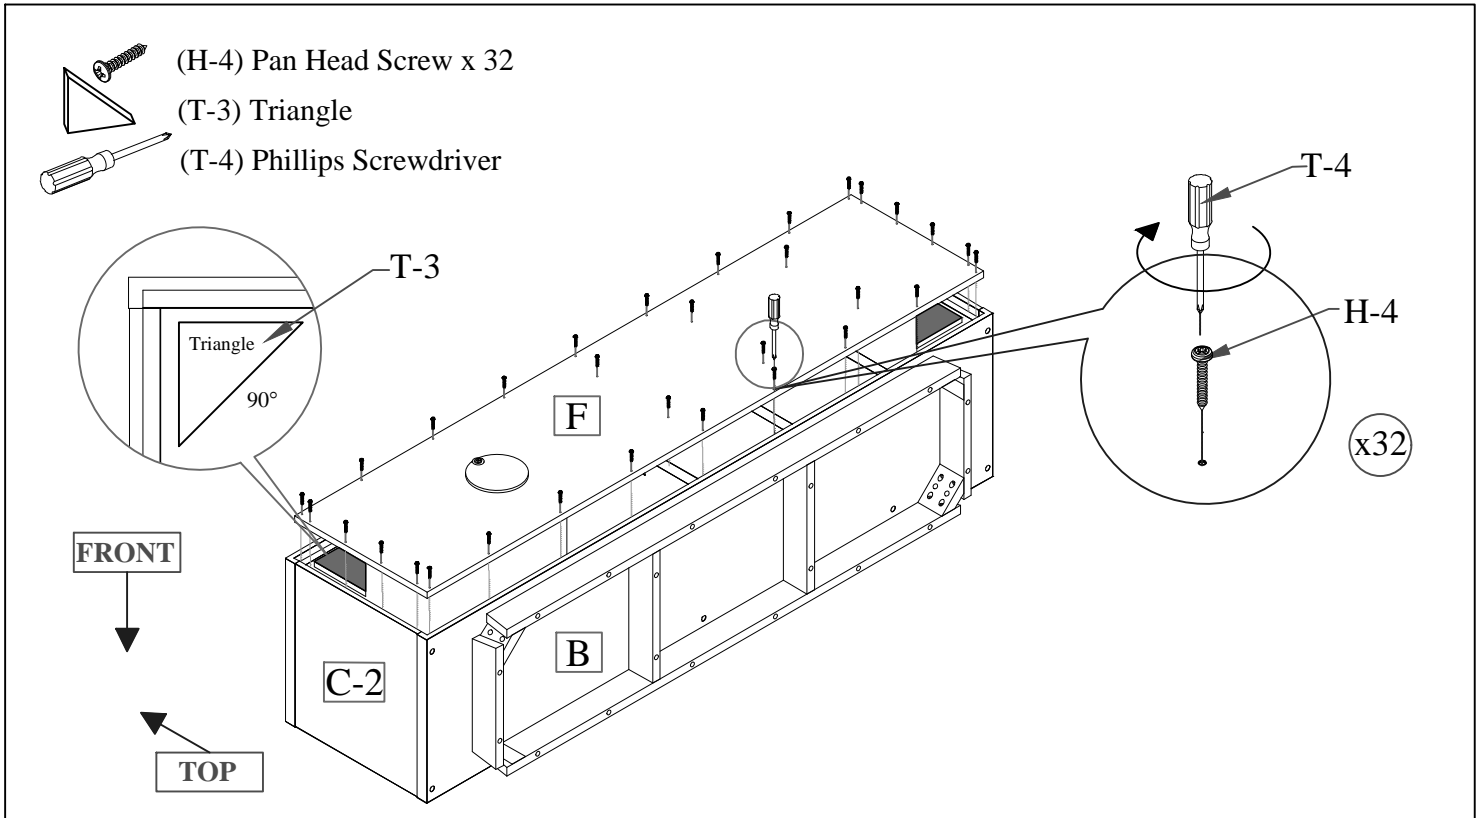

Check that the cabinet is square (90 degrees) using Triangle (T-3). Once square, position Back Panel (F) onto assembly as shown. Make sure panel is oriented correctly (Connecting Bolt from previous step should point toward the top). Secure around the perimeter of the cabinet with Pan Head Screws (H-4) using Phillips Screwdriver (T-4; not included). DO NOT over tighten.


## Step 6

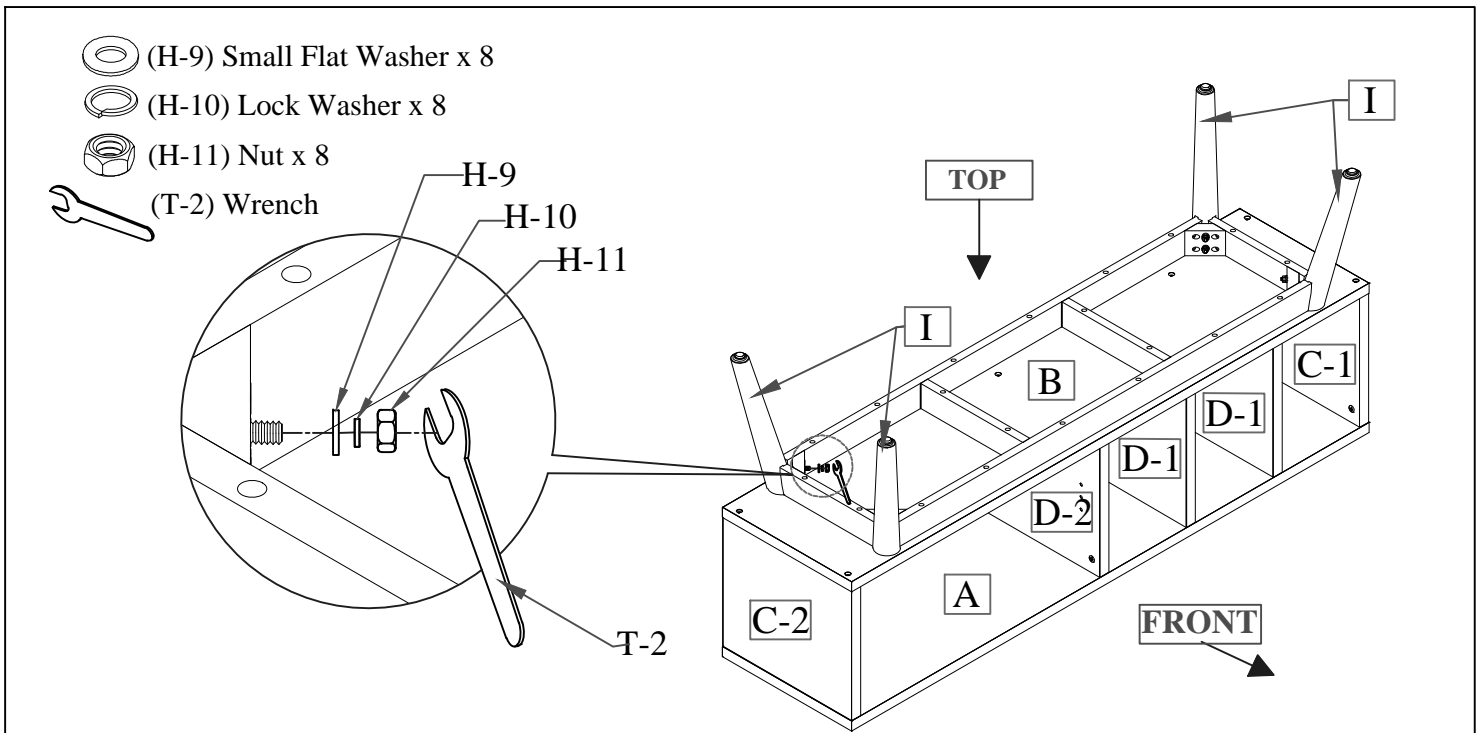

Using a second person to assist you, carefully turn the assembly upside down onto a padded, non-marring surface. Install and secure Legs (I) to Bottom Frame (B) with Small Flat Washers (H-9), Lock Washers (H-10) and Nuts (H-11) using provided Wrench (T-2), stacking the hardware in the order as shown. Engage all Nuts (H-11) first, then fully tighten. DO NOT over tighten.




## Step 7

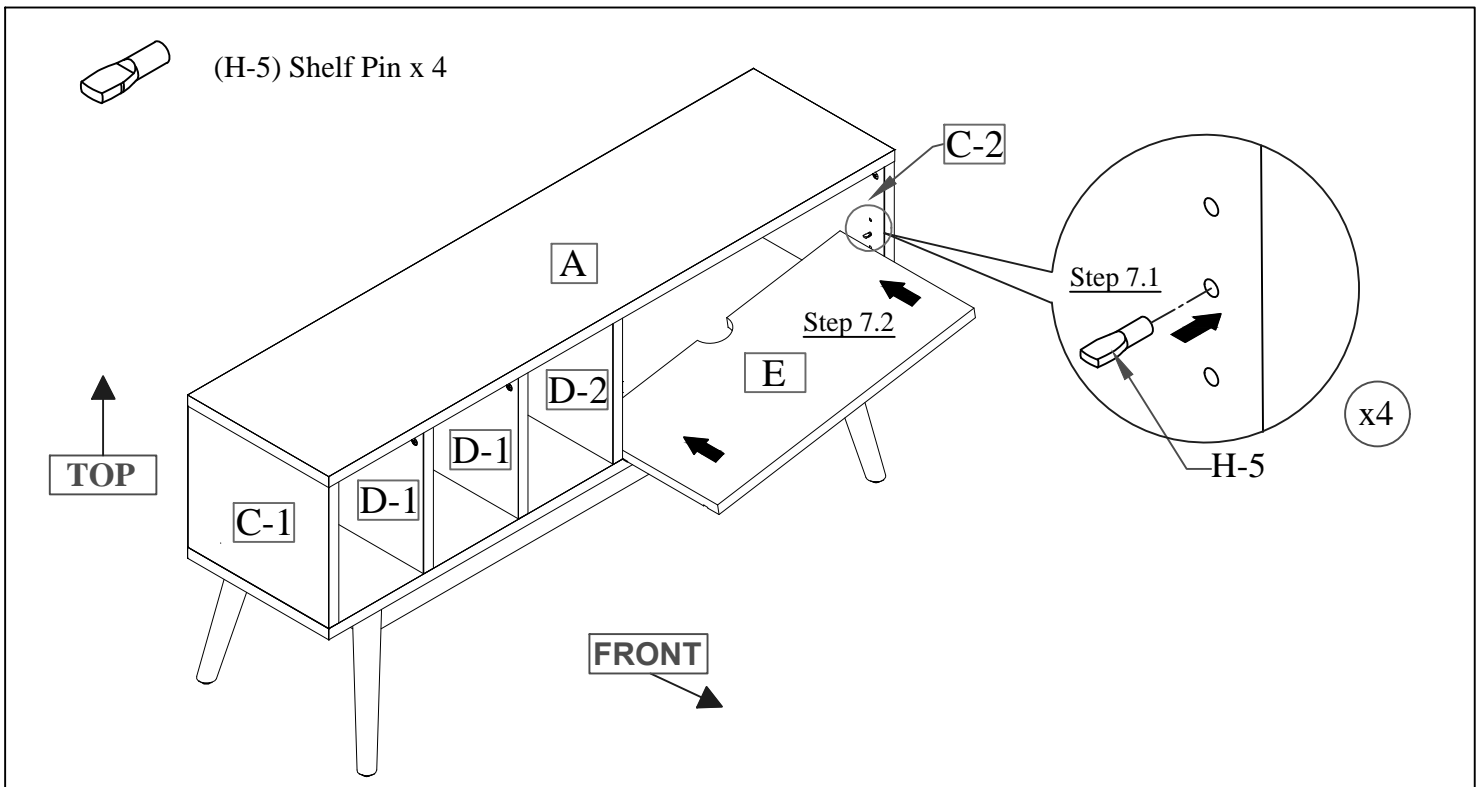

**Step 7.1:** Using a second person to assist you, carefully turn assembly upright. Insert Shelf Pins (H-5) into the desired hole locations on Right Side Frame (C-2) and Mid Divider Frames (D-2)

**Step 7.2:** Turn Adjustable Shelf (E) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-5). The cut out in each Shelf should be toward the back.

## Step 8

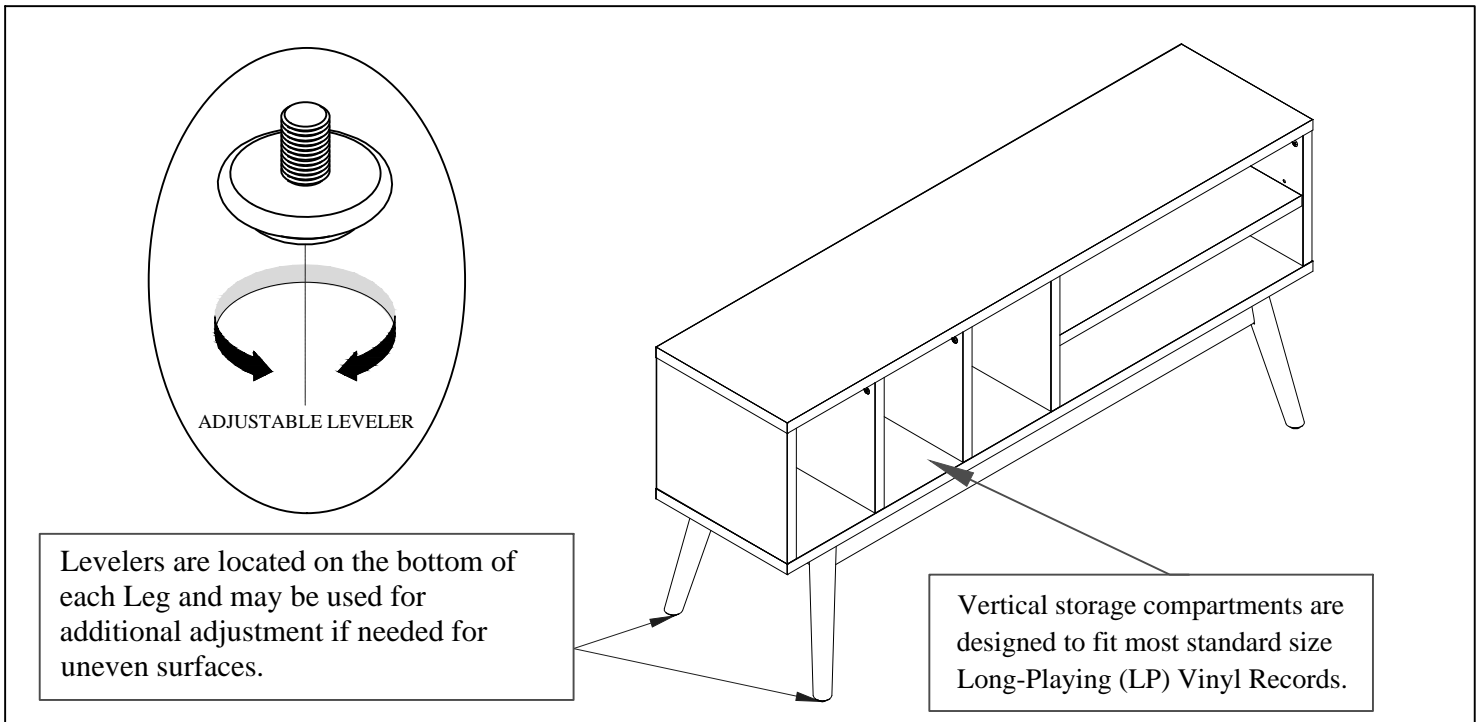


Assembly is now complete and the product is ready for use. Adjustable levelers are located on the bottom of each leg and may be adjusted by turning outwards, counter-clockwise to help account for uneven surfaces.

**NOTE:** Hardware may loosen over time. Periodically check that all connections remain tight and adjust as needed.


# Anti-Tip Measures

## ! WARNING

Furniture tip overs can result in death or serious injuries. To reduce the likelihood of tip over, this product should be used with the enclosed Anti-Tip Kit. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware **OR** into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

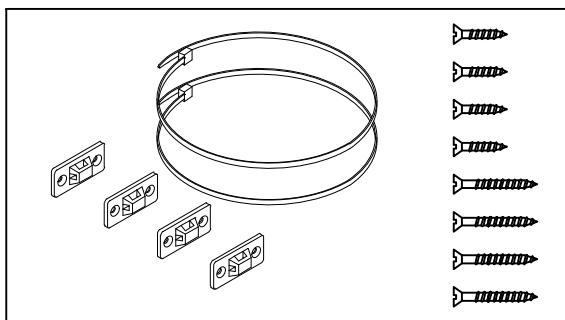

Anti-Tip kit contents

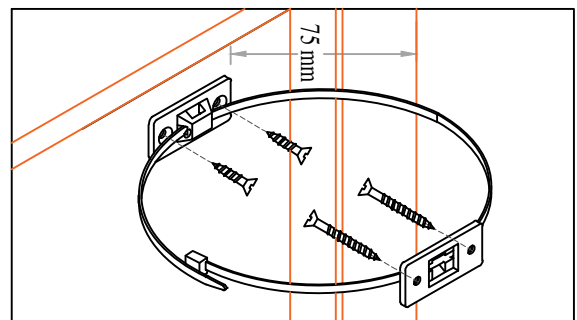

Anti-Tip kit installation

Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top. Where possible, mark a drill hole position on the wall where there is a stud and use a Drill or Screwdriver (NOT INCLUDED) to attach Wall Brackets to the wall using Long Screws in the location of the wall studs.

In a case where there is no wall stud, hold Brackets on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a Drill (NOT INCLUDED) with a drill bit roughly the diameter of the plastic Wall Plugs, drill pilot holes in marked positions. Insert the plastic Wall Plugs into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws through Brackets and into the corresponding holes in the wall using a Phillips Head Screwdriver (NOT INCLUDED).

Next, attach remaining 2 Brackets to the back of the piece using Short Screws so they align with Brackets installed on the wall. Loop Straps through Brackets (A) on the furniture piece, then through Brackets on the wall and tighten until snug. Installation is now complete.

**IMPORTANT:** Check that the Wall Brackets are firmly screwed into the wall and the Cable Ties are snug.

If there is any hesitation, please consult a professional or your local hardware store.

-Recommended maximum Flat Panel TV size of 45" or less, and maximum weight capacity of 100lbs.



**"WARNING - For use with televisions weighing 100 lbs (45kg) or less. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.**

Plasma/LCD-flat panel TV screen of various screen sizes to a maximum TV screen size of 45 inches.

All other support shelves should not be loaded more than 25 lbs.

**DO NOT EXCEED RECOMMENDED LOAD.** Use with products heavier than the maximum sizes and weights indicated may result instability causing possible injury.

 
Do not allow children under 10 year to move unit.

**DO NOT REMOVE THIS LABEL**

Manufactured for: World Market

SKU#: 626729

Manufactured date: June 2023

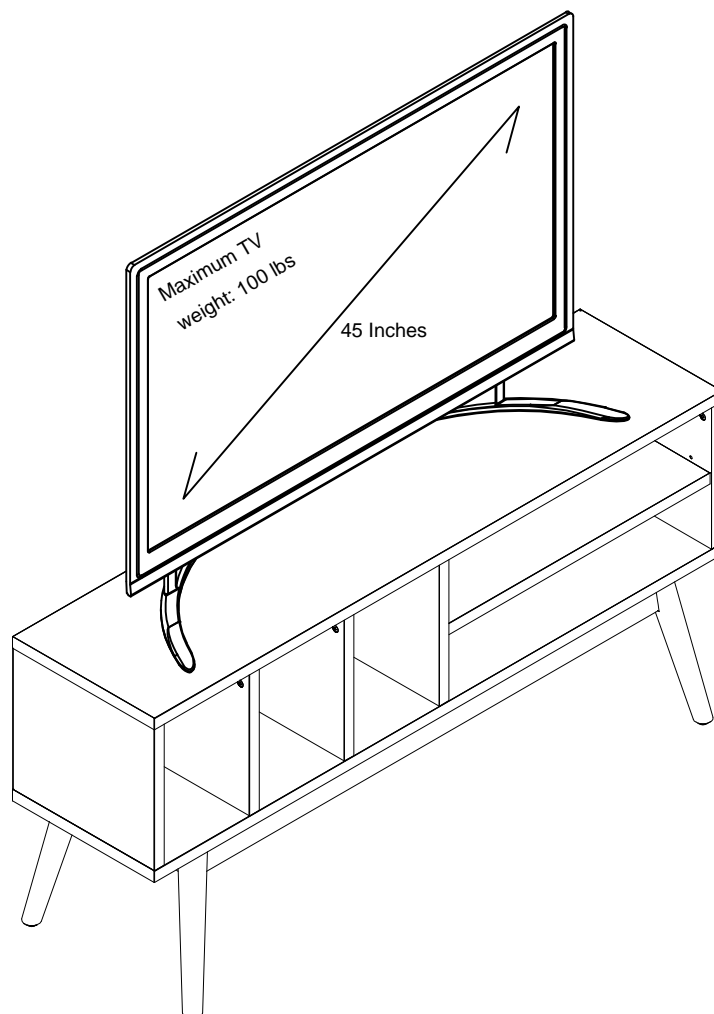

# Warnings

## ⚠ WARNING



**Children have died from furniture tip over. To reduce the risk of furniture tip over:**

- **ALWAYS** install Anti-Tip device provided.
- **DO NOT** exceed maximum TV size and weight limitations specified on the product label.
- **NEVER** allow children to stand, climb or hang on any drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- **Place heaviest items in the lowest drawers.**



Not intended for clothing storage use.



All products sold at World Market are not for commercial use and are intended for residential use only.

# Care & Maintenance



**DO NOT** put hot items directly on furniture surface.



**DO NOT** clean furniture with harsh cleansers or polish.



**DO NOT** place furniture in direct sunlight.



**DO NOT** place furniture near heating or cooling vents.



**DO NOT** write on furniture without a padded barrier to protect the surface.



**DO NOT** place furniture outside. For INDOOR USE ONLY.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth.

# **WORLD MARKET** LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

## **This LIMITED ONE-YEAR WARRANTY does NOT cover:**

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
  - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
  - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
  - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
  - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

**All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.**

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.