ASSEMBLY INSTRUCTION





Sunpan Product Name: LEDBURY DINING TABLE- 70.5"


PARTS LIST Before you begin, please layout all parts and ensure you have the correct count.					
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION		
А	Table Top	1			
В	Table Leg	2			
С	Table Support	1			
D	Screws (Ø8*70mm)	8			
E	S.Washer (5/16")	8			
F	F.Washer (5/16'')	1	0		
G	Allen Key M5	1			

н	Screws (Ø6*70mm)	2	
ı	Nut (Ø6*13mm)	2	A)
J	S.Washer (1/4")	2	
К	Allen Key M4	1	
L	Adjustable	4	
М	Dowel(Ø10*35mm)	1	

ASSEMBLY INSTRUCTIONS

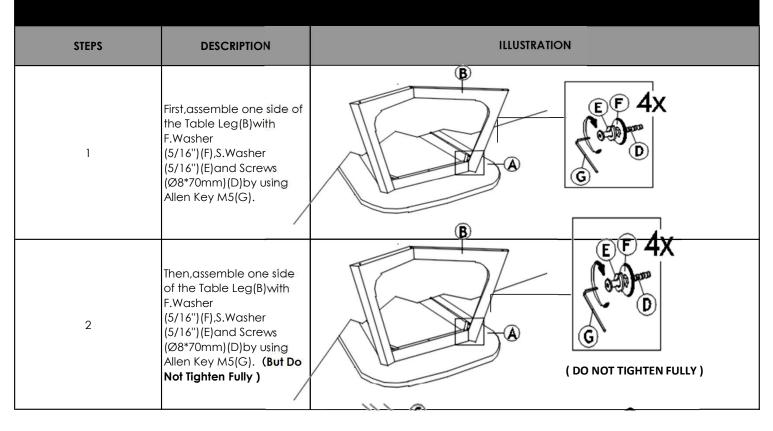

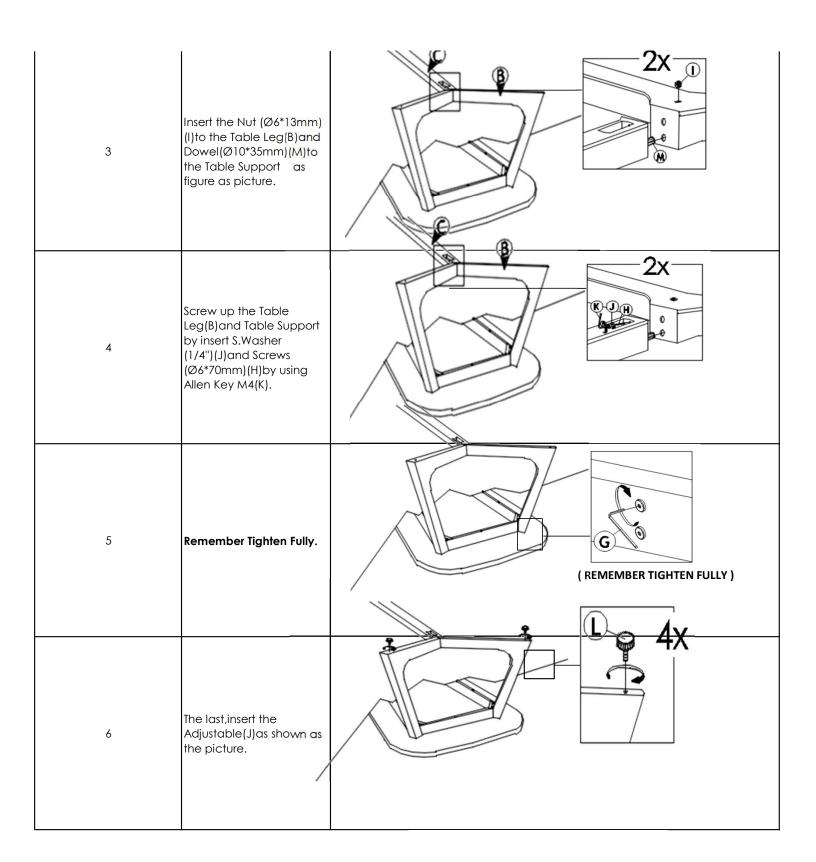

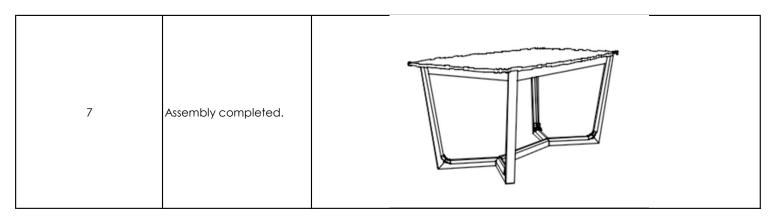

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.