 


WORLD MARKET®

Assembly Instructions

DAPHNE ARCH TOP BOOKCASE

 
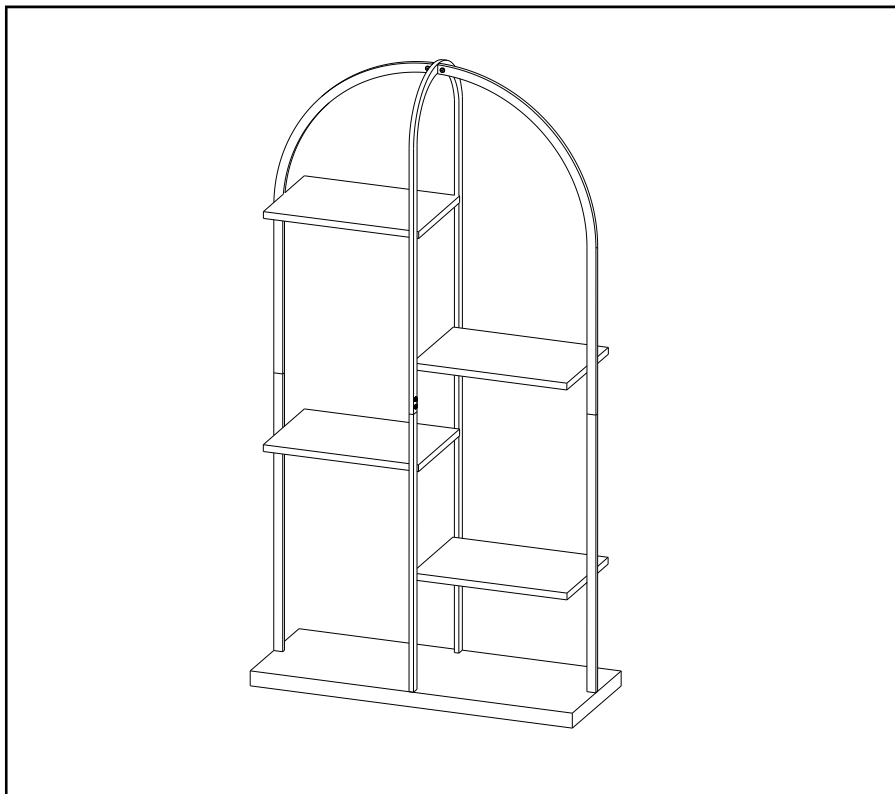 



 

 
SKU-622514



 

 
THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS
PERTAINING TO THE ASSEMBLY OF THIS PRODUCT, PLEASE CONTACT
THE NEAREST WORLD MARKET STORE.
IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL
CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

**ALL PRODUCTS SOLD AT WORLD MARKET
ARE NOT FOR COMMERCIAL USE AND ARE
INTENDED FOR RESIDENTIAL USE ONLY.**

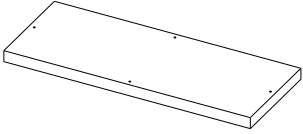
Component List

LABEL		DESCRIPTION	QTY
A		Metal Base	1
B		Wooden Shelf	4
C		Left Post L1	1
D		Left Frame L2	1
E		Right Post R1	1
F		Right Frame R2	1
G		Middle Post M1	2
H		Middle Frame M2	1

Hardware List


LABEL		DESCRIPTION	QTY
H-1		Short Allen Bolt (6 mm x 10 mm)	10
H-2		Long Allen Bolt (6 mm x 15 mm)	16
H-3		Flat Washer (16 mm)	10

Tool List

LABEL		DESCRIPTION	QTY
T-1		Allen Key (4 mm)	1

Assembly Preparation

 Before Beginning:

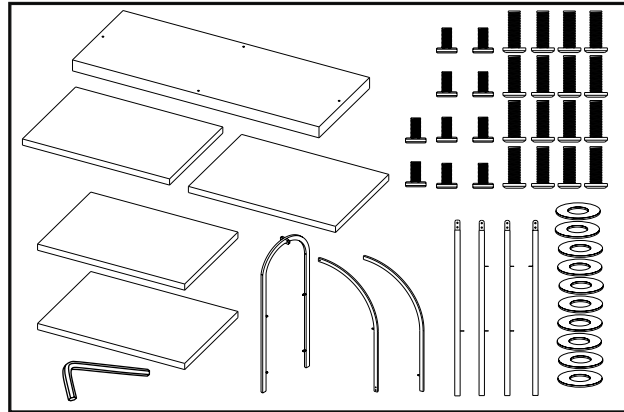

- Unpack all hardware bags and components to ensure you have all parts-



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-



- In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.

 


- **WARNING: Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.**

Assembly Steps


Step 1

PLEASE MAKE NOTE OF THE DIFFERENT BOLT SIZES AND ENSURE YOU ARE USING THE CORRECT SIZE BOLT FOR EACH STEP.

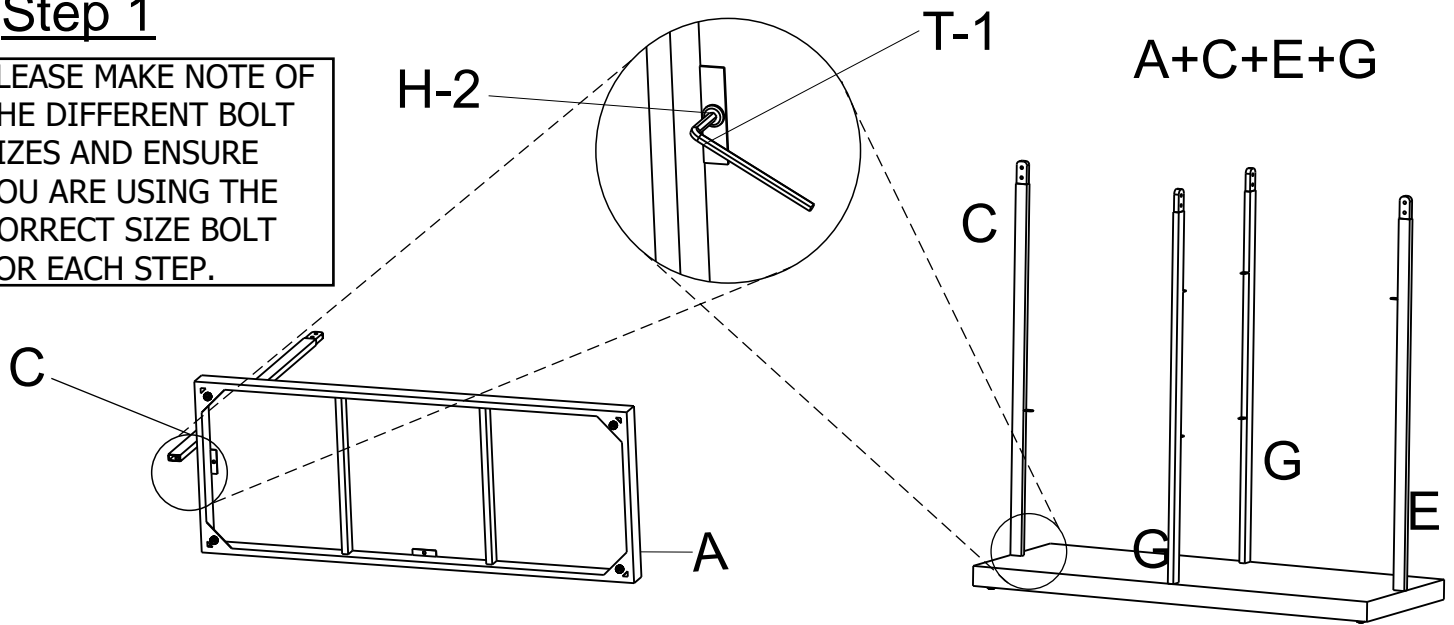

Place the Metal Base (A) onto a padded, non-marring surface as illustrated. Align the hole of Left Post L1 (C) with the pre-drilled hole underneath Metal Base (A). Secure connection using Long Allen Bolt (H-2), loosely tightening it with the provided Allen Key (T-1). Repeat the same steps to assembly other Posts (E&G). Now fully tighten all hardware with provided Allen Key (T-1). Do not over tighten. Using a second person to assist you, carefully turn the assembly upright.

 
Step 2

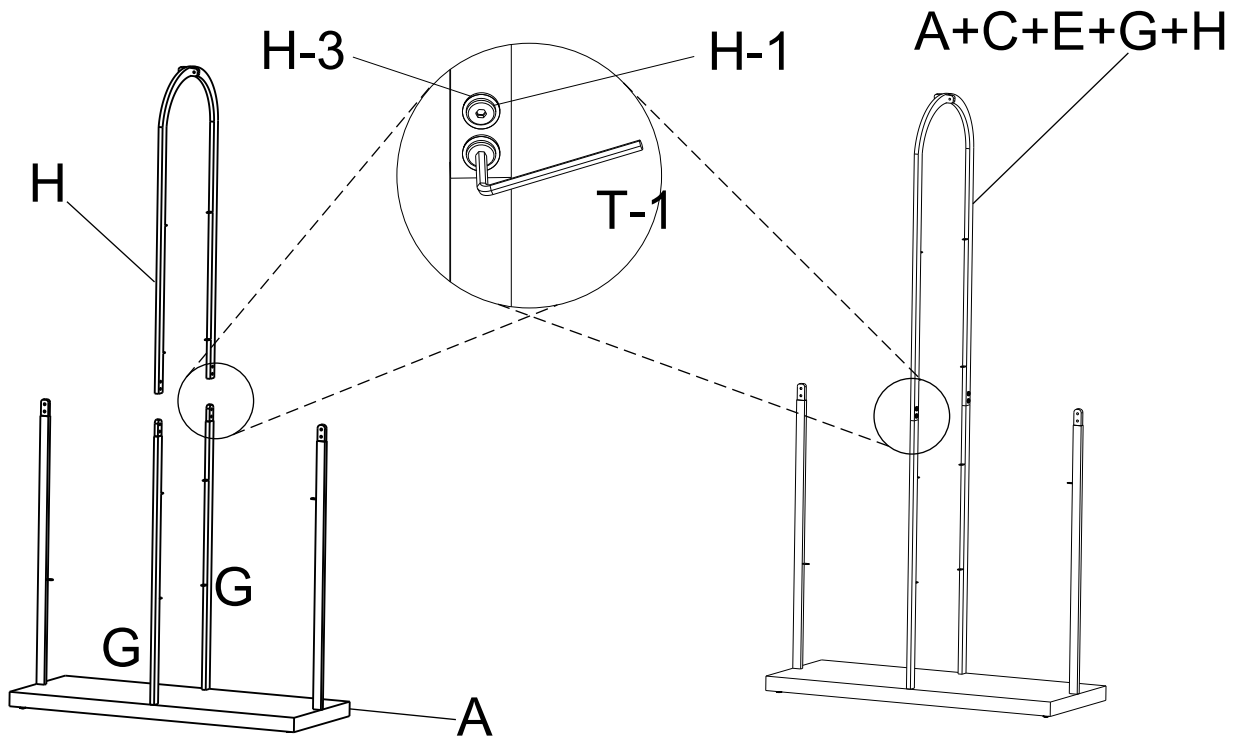

Position Middle Frame M2 (H) onto both Middle Posts M1 (G), aligning the holes on each component. Loosely secure connection with Short Allen Bolts (H-1) and Flat Washers (H-3) using Provided Allen Key (T-1), stacking the hardware in the order as shown. Do not yet fully tighten.


Assembly Steps

 Step 3

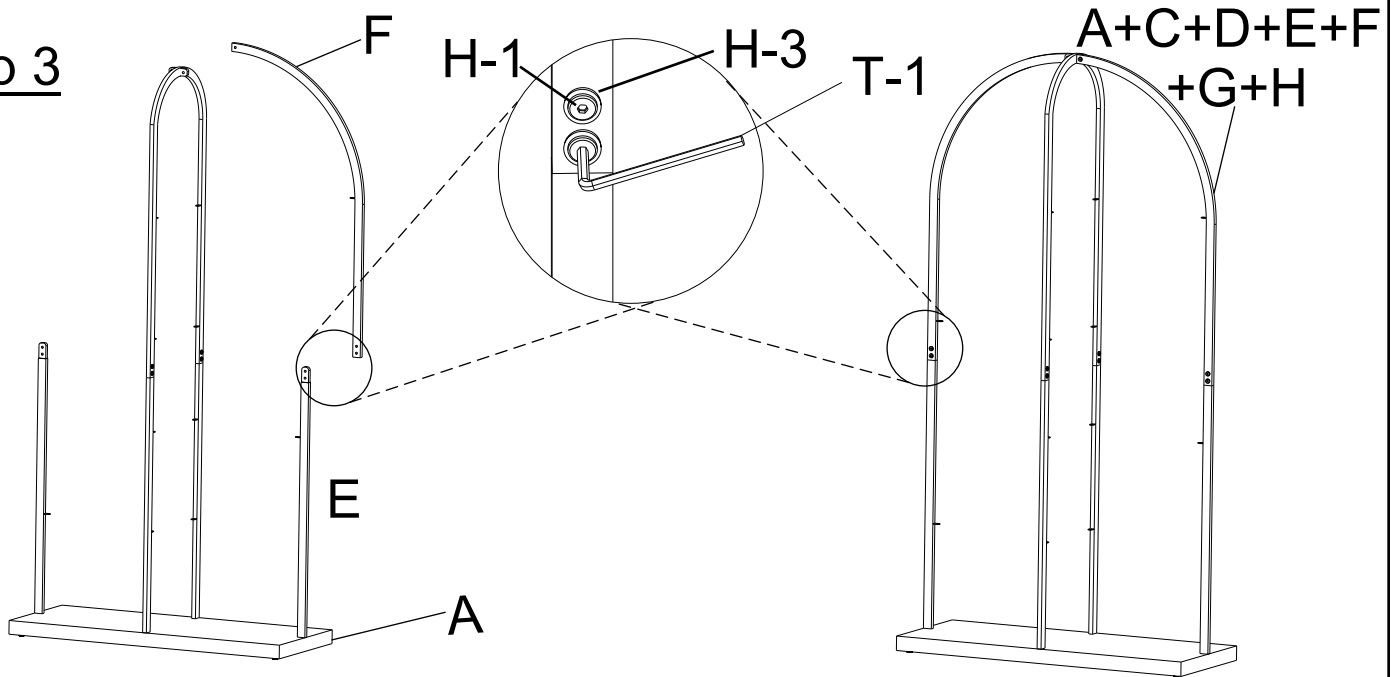


Position Right Frame R2 (F) onto both Right Post R1 (E) and Middle Frame M2 (G), aligning the holes in each component. Loosely secure connection with Short Allen Bolts (H-1) and Flat Washers (H-3) using Provided Allen Key (T-1), stacking the hardware in the order as shown. Do not yet fully tighten. Repeat the same steps to assemble Left Frame L2 (D).

 Step 4

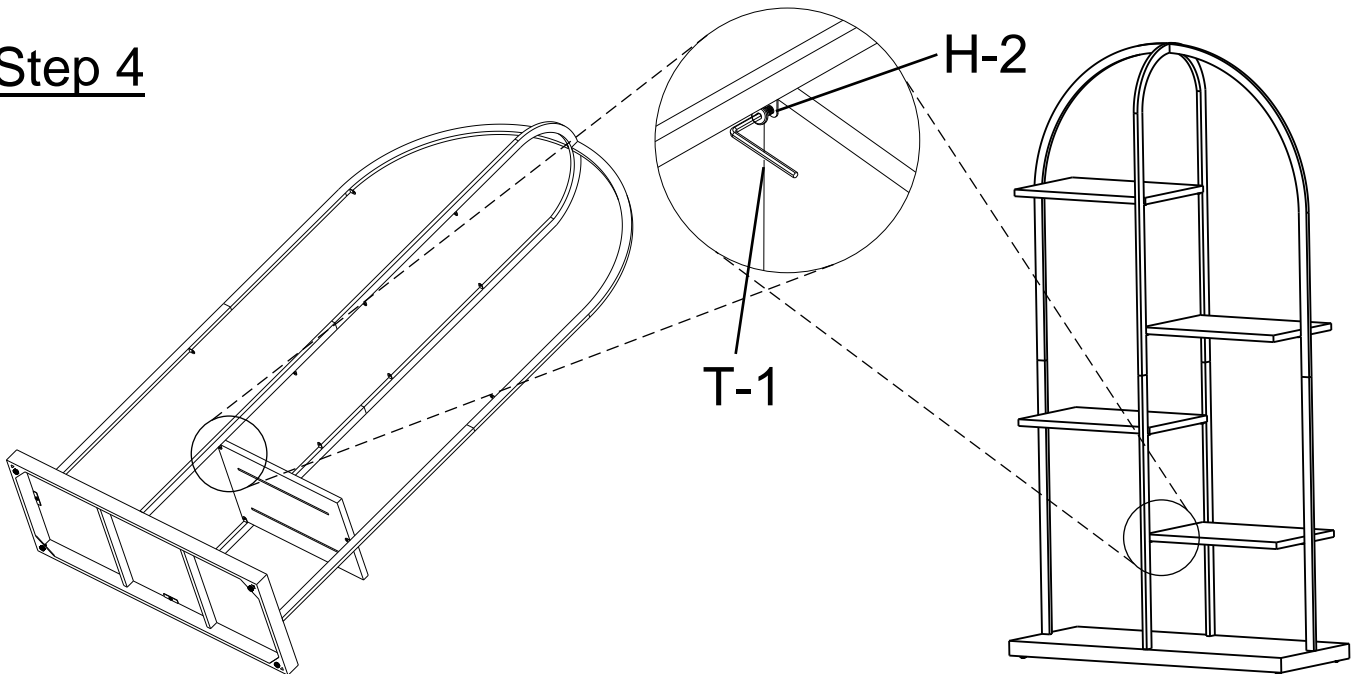

Lay assembly down onto a padded, non-marring surface. Align the holes of the Wooden Shelf (B) with the pre-drilled hole in the metal frames. Loosely Secure connection with Long Allen Bolts (H-2) using provided Allen Key (T-1). Do not yet fully tighten. Repeat the same steps to secure the remaining Wood Shelves (B). Now fully tighten all hardware from Steps 1 to 4 with the provided Allen Key (T-1). Do not over tighten.

 Step 5

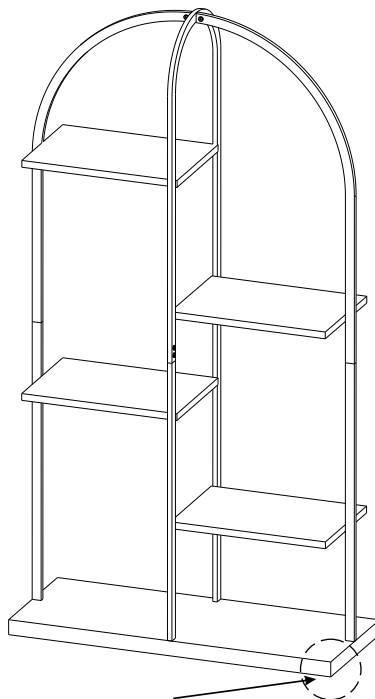

NOTE- Levellers are using for adjustment if needed.

Using a second person to assist you, carefully turn the product into upright position. Ensure the product sits evenly and all hardware from step 1 to 5 have been fully tightened. Assembly is complete and the product is ready to use.

Anti- Tip Kit

"Warning: Serious or fatal injuries can occur from furniture tip-over. To help prevent furniture tip-over.

- Use provided mounting hardware to secure furniture to the wall. This may reduce but not eliminate the risk of furniture tip-over.
- Do not allow children to climb on furniture.
- Keep remote controls, toys, and other items that might attract children off of this product.
- Unless specifically designed to accommodate, do not set televisions or other heavy objects on top of this product."

Warning - Children may be injured by tipping of furniture and the use of the Anti-Tip Kit is highly recommended. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit MUST be installed into the wall using proper mounting hardware OR into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

 
Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the width of the unit and roughly 1 inch below the top of the unit. Where possible, mark a drill hole position on the wall where there is a stud and use a drill or screwdriver (NOT INCLUDED) to attach wall Brackets (A) to the wall using Long Screws (B) in the location of the wall studs.

In a case where there is no wall stud, hold Brackets (A) on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a drill with a drill bit roughly the diameter of the plastic Wall Plugs (E), drill pilot holes in marked positions. Insert the plastic Wall Plugs (E) into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws (B) through Brackets (A) and into the corresponding holes in the wall using a phillips head screwdriver (NOT INCLUDED).

Next, attach remaining 2 Brackets (A) to the back of the piece using Short Screws (C) so they align with Brackets installed on the wall. Loop Straps (D) through Brackets (A) on the furniture piece, then through Brackets (A) on the wall and tighten until snug. Installation is now complete.

IMPORTANT: Check that the Wall Bracket is firmly screwed into the wall and the Cable Tie is snug. If there is any hesitation, please consult a professional or your local hardware store.

A 1 Wall Bracket







B 2 Screw







    
C 1 Cable Tie

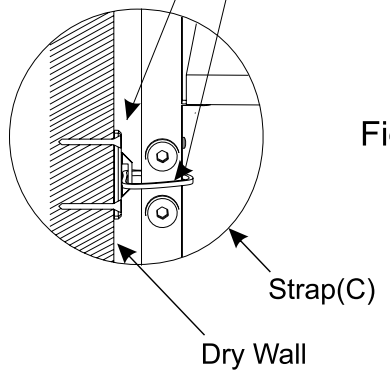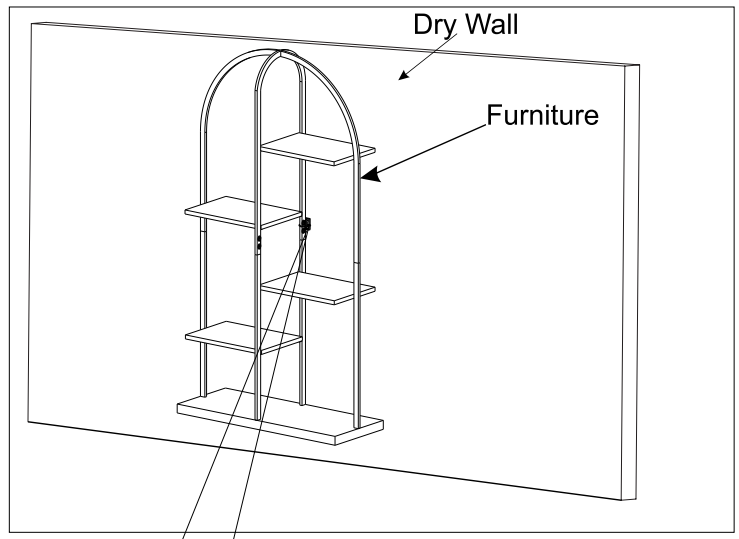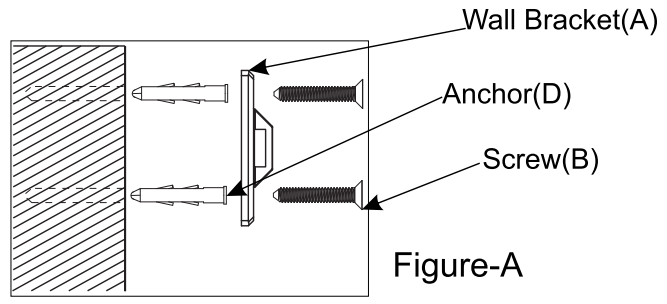


D 2 Anchor



Care & Maintenance

-  • Do not put hot items directly on furniture surface.
 -  • Do not clean furniture with harsh cleansers or polish.
 -  • Do not place furniture near heating or cooling vents.
 -  • Do not write on furniture without a padded barrier to protect the surface.
 -  • All products sold at World Market are not for commercial use and are intended for residential use only.
-

-  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

- Note**
- Recommend using coasters to protect table top. Wipe spills immediately with a soft, dry cloth.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of purchase. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.

(INDOOR FURNITURE 1LW_v1.5_051122)