
ASSEMBLY INSTRUCTION

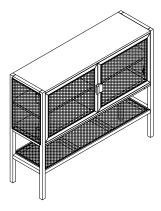



Product Name: GEMNI HIGHBOARD - LARGE - BLACK


PART LIST Before you begin, please layout all parts and ensure you have the correct count.			
PART	DESCRIPTION	QUANTITY	ILLUSTRATION
1	TOP PANEL	1	
2	BOTTOM PANEL ASSY	1	
3	RIGHT SIDE FRAME ASSY	1	
4	LEFT SIDE FRAME ASSY	1	
5	MIDDLE PANEL	1	
6	ADJUSTABLE SHELF PANEL	2	


PART LIST Before you begin, please layout all parts and ensure you have the correct count. **QUANTITY ILLUSTRATION PART DESCRIPTION** 7 **RIGHT DOOR ASSY** 1 1 **LEFT DOOR ASSY** 8 9 **SHELF FRAME ASSY** 1 **BACK PANEL** 1 10 2 **DOOR HANDLE** 11 Α MINIFIX HOUSING 12 12 В **MINIFIX BOLT** 16 C WOOD DOWEL (Ø8X30)


PART LIST Before you begin, please layout all parts and ensure you have the correct count. **ILLUSTRATION PART DESCRIPTION** QUANTITY JCBC (M6 x 40MM) D 4 4 **SPOON HINGE** Ε JF SCREW (Ø6X16MM) F 16 4 G JP SCREW (Ø8 X 25MM) **PIN SHELF** Н 8 JP SCREW (Ø6X12MM) 24 I **MAGNETIC CATCHES** J 2 K **PLAT CATCHES** 2 JP SCREW (Ø6X16MM) dunul) L 4 and the second M JF SCREW (Ø6X12MM) 4 Ν 1 **ALLEN KEY M4 TIPPING HARDWARE** 2 0 Р **FISCHER** 2

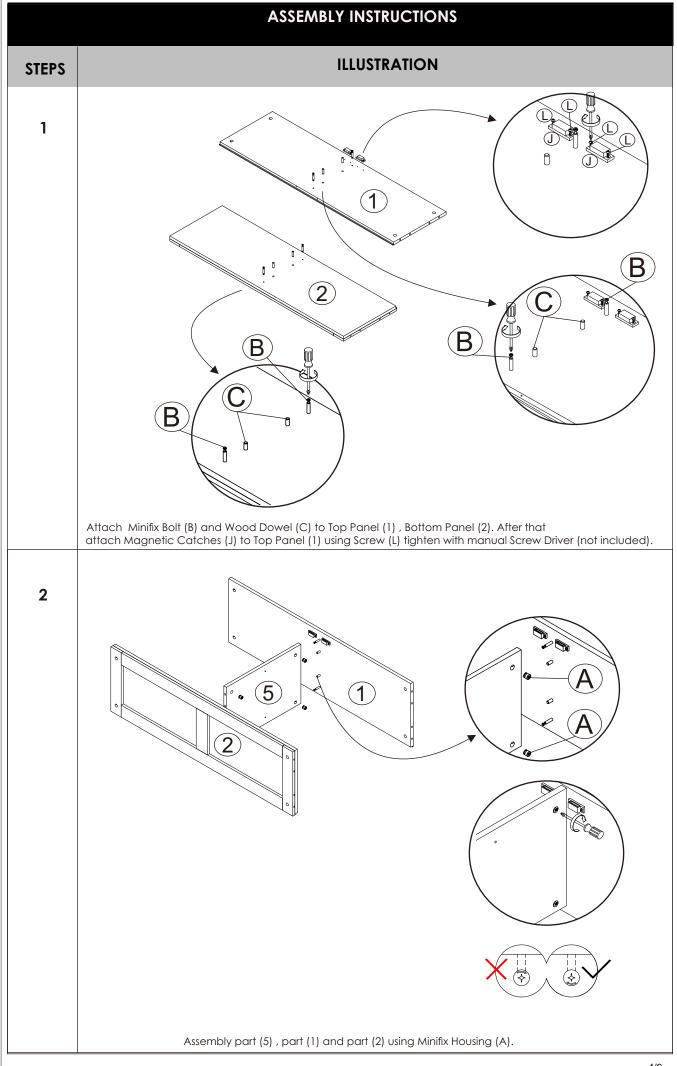


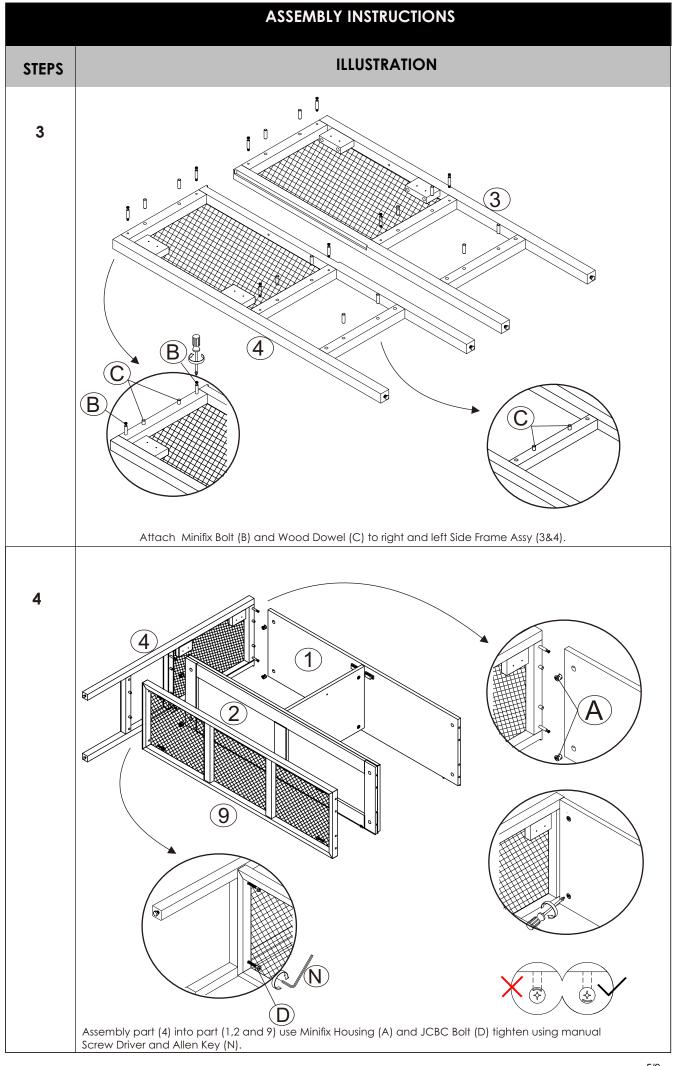

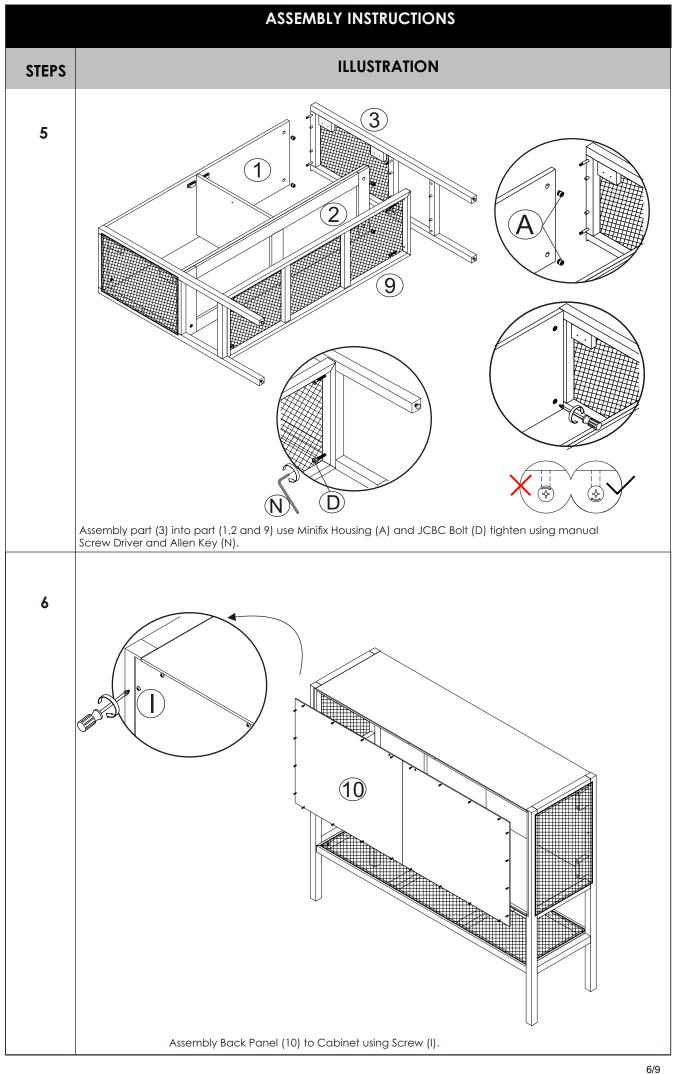

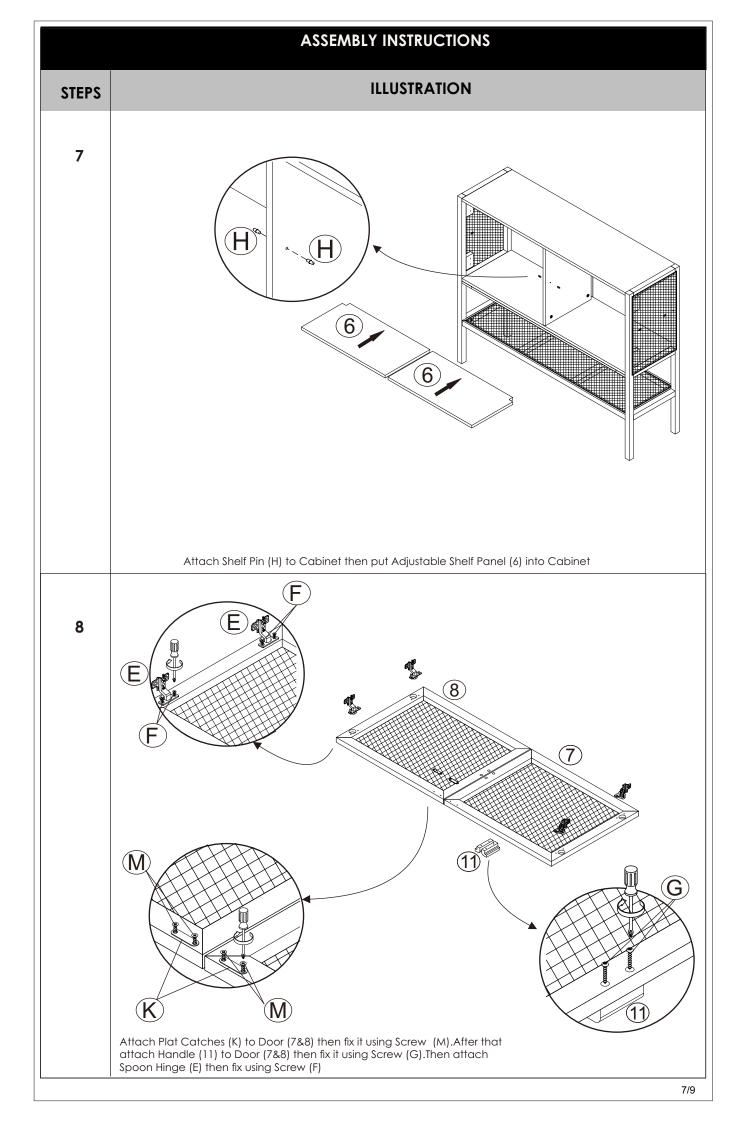

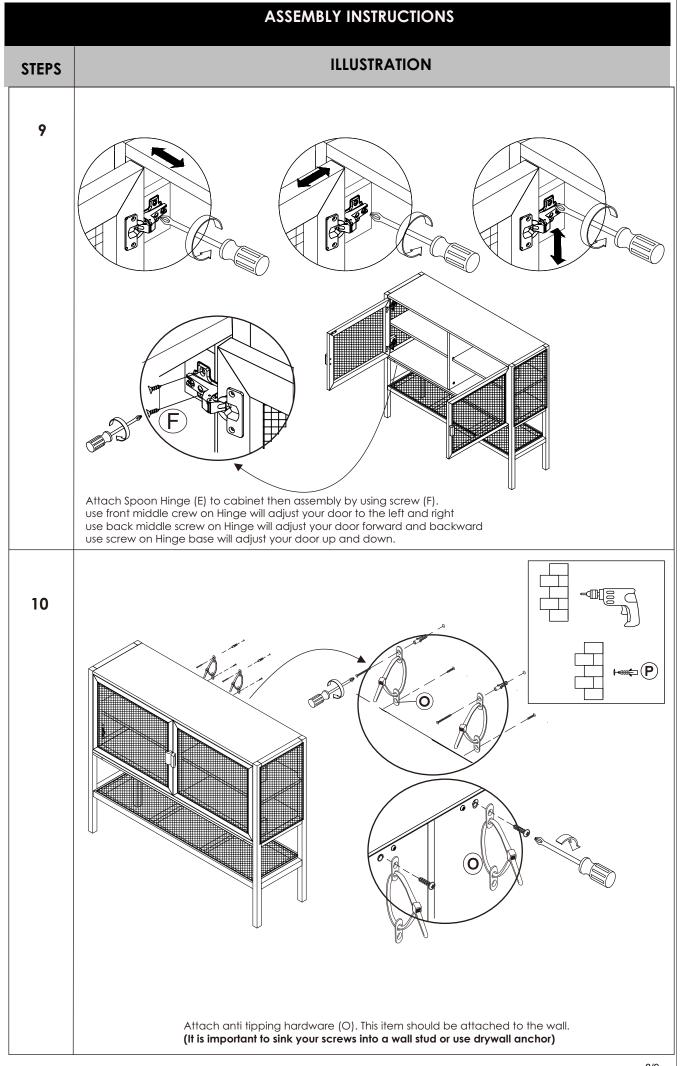

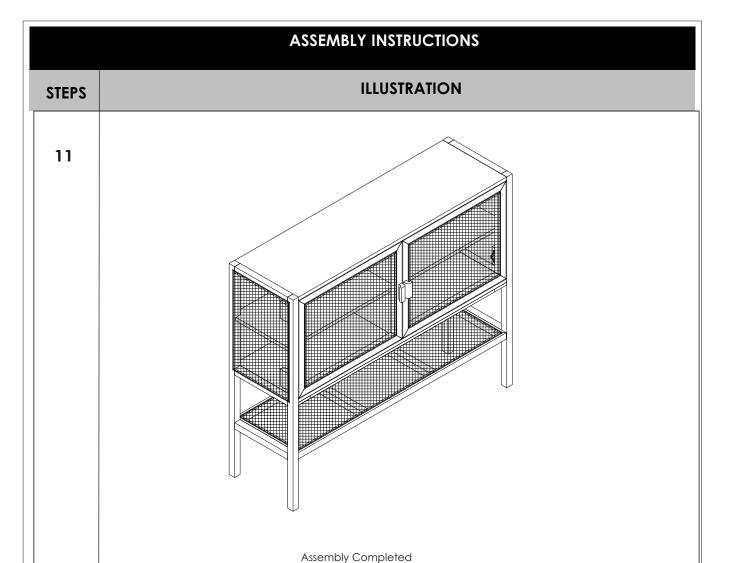

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

 $Do \ not \ expose \ your \ furniture \ to \ direct \ sunlight, \ dampness \ or \ any \ heat, \ like \ a \ hot \ cup \ of \ coffee \ or \ tea. \ Always \ use \ a \ coaster.$

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.