ASSEMBLY INSTRUCTION



Product Name: ADEL DINING TABLE

PARTS LIST Before you begin, please layout all parts and ensure you have the correct count.				
NO.	DESCRIPTION	QUANTITY	ILLUSTRATION	
1	Table Top	1		
2	Table Leg	4		
3	Center Support Block	1		
4	Center Block Cover	1		
А	JCBC M6 x 70mm + S/W M6 + F/W M6 x 13mm	4		
В	Allen Key M4	1		
с	Hex Nut 5/16"	8		
D	Spring Washer 5/16"	8	Ø	
E	Flat Washer 5/16"	8	\bigcirc	
F	Spanner 12.8	1		
G	FH Screw #8 x 32mm	4	< <u></u> (#)	

ASSEMBLY INSTRUCTIONS				
STEP	DESCRIPTION	ILLUSTRATION		
]	Slot in Table Leg (2) into Center Support Block (3) as shown. Fix the table leg with Hex Nut (C), Spring Washer (D) and Flat Washer (E). Please do not fully tighten the hex nut.	DO NOT FULLY TIGHTEN THE HEX NUT		
2	Repeat Step 1 for next legs. Do not fully tighten yet.	2 DO NOT FULLY TIGHTEN THE HEX NUT		
3	Place the Table Top (1) upside down on a soft covered surface. Attach table legs to each Leg Mount as shown. Fix the Table Leg with JCBC Bolt (A) and tighten with Allen Key (B). Do not fully tighten the bolts .	DO NOT FULLY TIGHTEN THE BOLT		
4	Step 4.a : Tighten the Hex Nut (C) with Spanner (F) as shown. Step 4.b : Tighten the JCBC Bolt (A) with Allen Key (B). Step 4.c : Fix the Leg Support with FH Screw (G) and tighten with screwdriver (not provided). Fully tighten all the hardwares now.	Image: Second		

5	With two people turn over the table carefully. Fix the Center Block Cover (4) at the centre as shown.	
6	Turn clockwise or anti- clockwise to adjust leg leveller. Assembly completed.	
7	Assembly completed.	

ASSEMBLY TIPS:

Please checks parts and hardware before assembling. Follow each instruction step by step. Place a protective pad or piece of cardboard on the floor while assembling your item on top of it. Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list. Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basis steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster. Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.