


Style Number: K8566

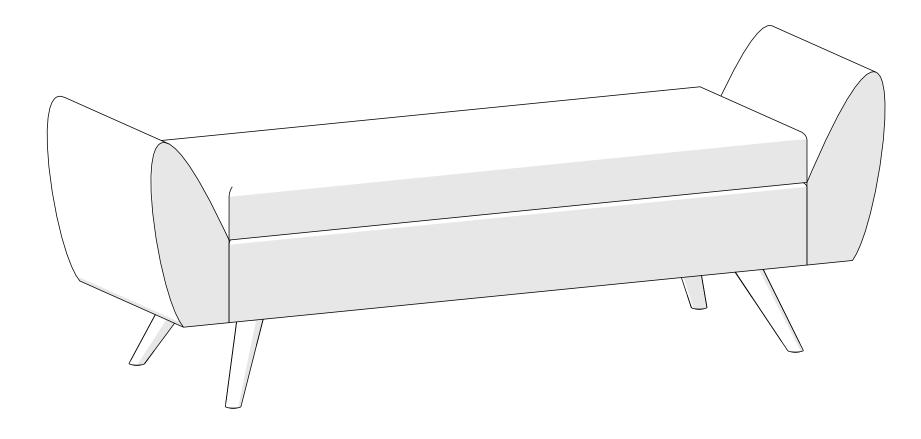

#### Congratulations on your latest HomePop purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck—though we're confident you won't need it.

#### before you begin

- 1. If the item arrived damaged, please contact your original vendor before your return window expires.
- 2. Check for missing parts. Customers can visit www.homepop.com/parts to request missing parts.
- 3. Use the carton as a working surface to prevent product damage during assembly.
- 4. Gather all tools prior to assembly.

# introduction 2 hardware 4 parts list 5 assembly 6-8

### hardware

 


3/16" Ball end Hex wrench





5/16" x 45mm round hex screw






Φ8mm lock washer





 Φ 22mm flat washer




(E) x 1

5/32" Ball end Hex wrench



(F) x 16

 
1/4" x 20 mm round hex screw



1 box 1


2 armrest 2

<u>3</u> leg 4

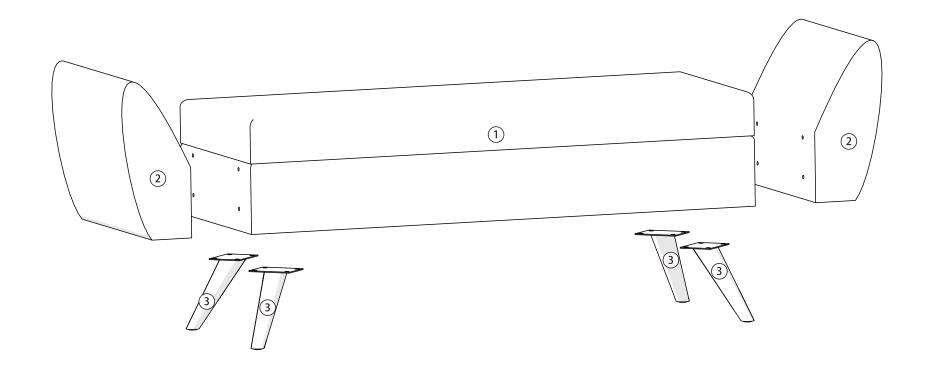

## step 1.

1

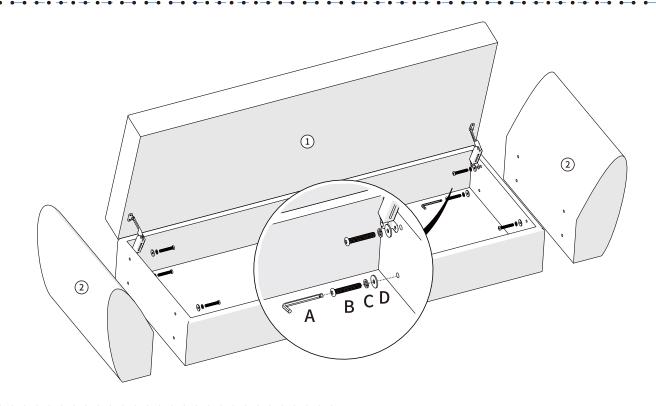

(A) x 1

3/16" Ball end Hex wrench



(B) x 8

5/16'"x 45mm round hex screw



 
(C) x 8

Φ8mm lock washer




(D) x 8

Φ 22mm flat washer



# step 2.

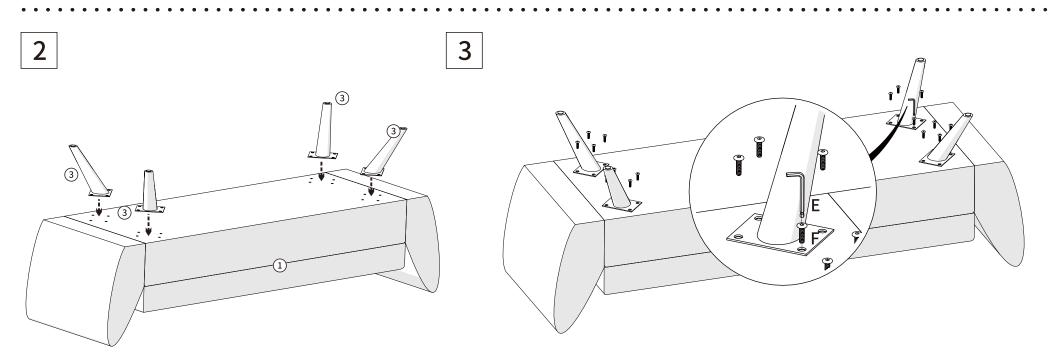


(E) x 1

5/32" Ball end Hex wrench



(F) x 16

 1/4" x 20 mm round hex screw



Please do not assemble with power tools

### step 3.


A friendly reminder from us:



Please keep the Allen wrench.

After a period of time, there may be a chance the KD furniture may become loose, please use an Allen wrench to tighten the loose bolts.

Put the chair right and check whether the chair has been well assembled. If it is not assembled, loosen the screw and tighten it on the ground.

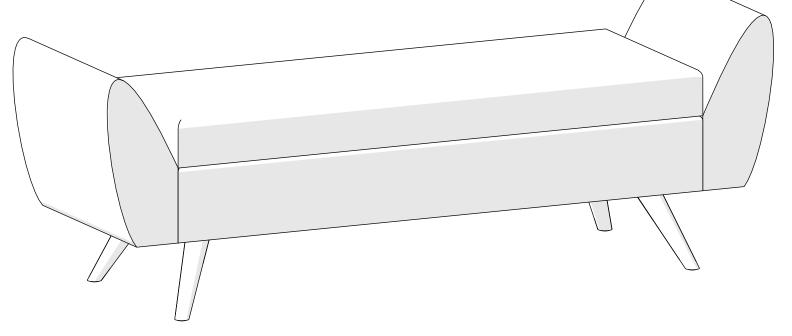

Level the furniture, use leveling feet if needed.