 


WORLD MARKET®

Assembly Instructions

 
 
 


 
 

 
 
Gustav 48" Cane Door Bookcase SKU - 618184

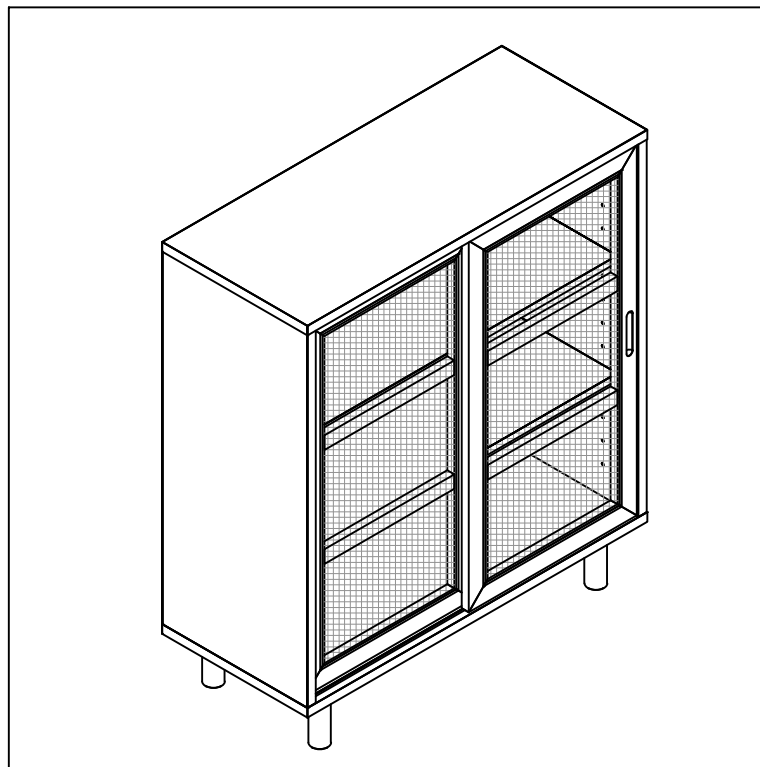


 
 


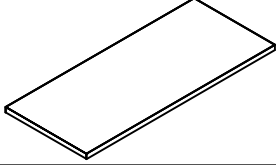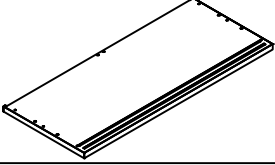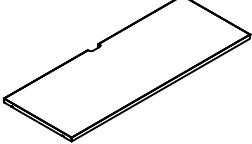

THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS
PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT
THE NEAREST WORLD MARKET STORE
IF YOU ARE NOT NEAR A STORE PLEASE CALL OUR CUSTOMER SERVICE CALL
CENTER TOLL FREE AT 877-967-5362 FOR ASSISTANCE.

All products sold at World Market are not for commercial use and are intended for residential use only.


 
Component List

LABEL	PICTURE	DESCRIPTION	Q.TY
A		Top Frame	1
B		Bottom Frame	1
C		Shelf	2
D		Leg	4
E-1		Left Side Frame	1
E-2		Right Side Frame	1
F		Back Panel	2
G		Vertical Rail	1
H-1		Left Door	1
H-2		Right Door	1

Hardware List


LABEL	PICTURE	DESCRIPTION	Q.TY
H-1		Cam lock Ø15 mm	4
H-2		Cam Screw	4
H-3		Connecting Screw M7 x 50 mm	6
H-4		Wood Screw M4 x 30 mm	2
H-5		Shelf Pin Ø6	10
H-6		Pan Head Screw M3.5 x 15 mm	40
H-7		Anti Tip-kit	1

Tool List

LABEL	PICTURE	DESCRIPTION	QTY
T-1		Allen Key 4 x 110 x 30 mm	1
T-2		Phillips Screwdriver (Not Included)	1


Assembly Steps

 Step 1

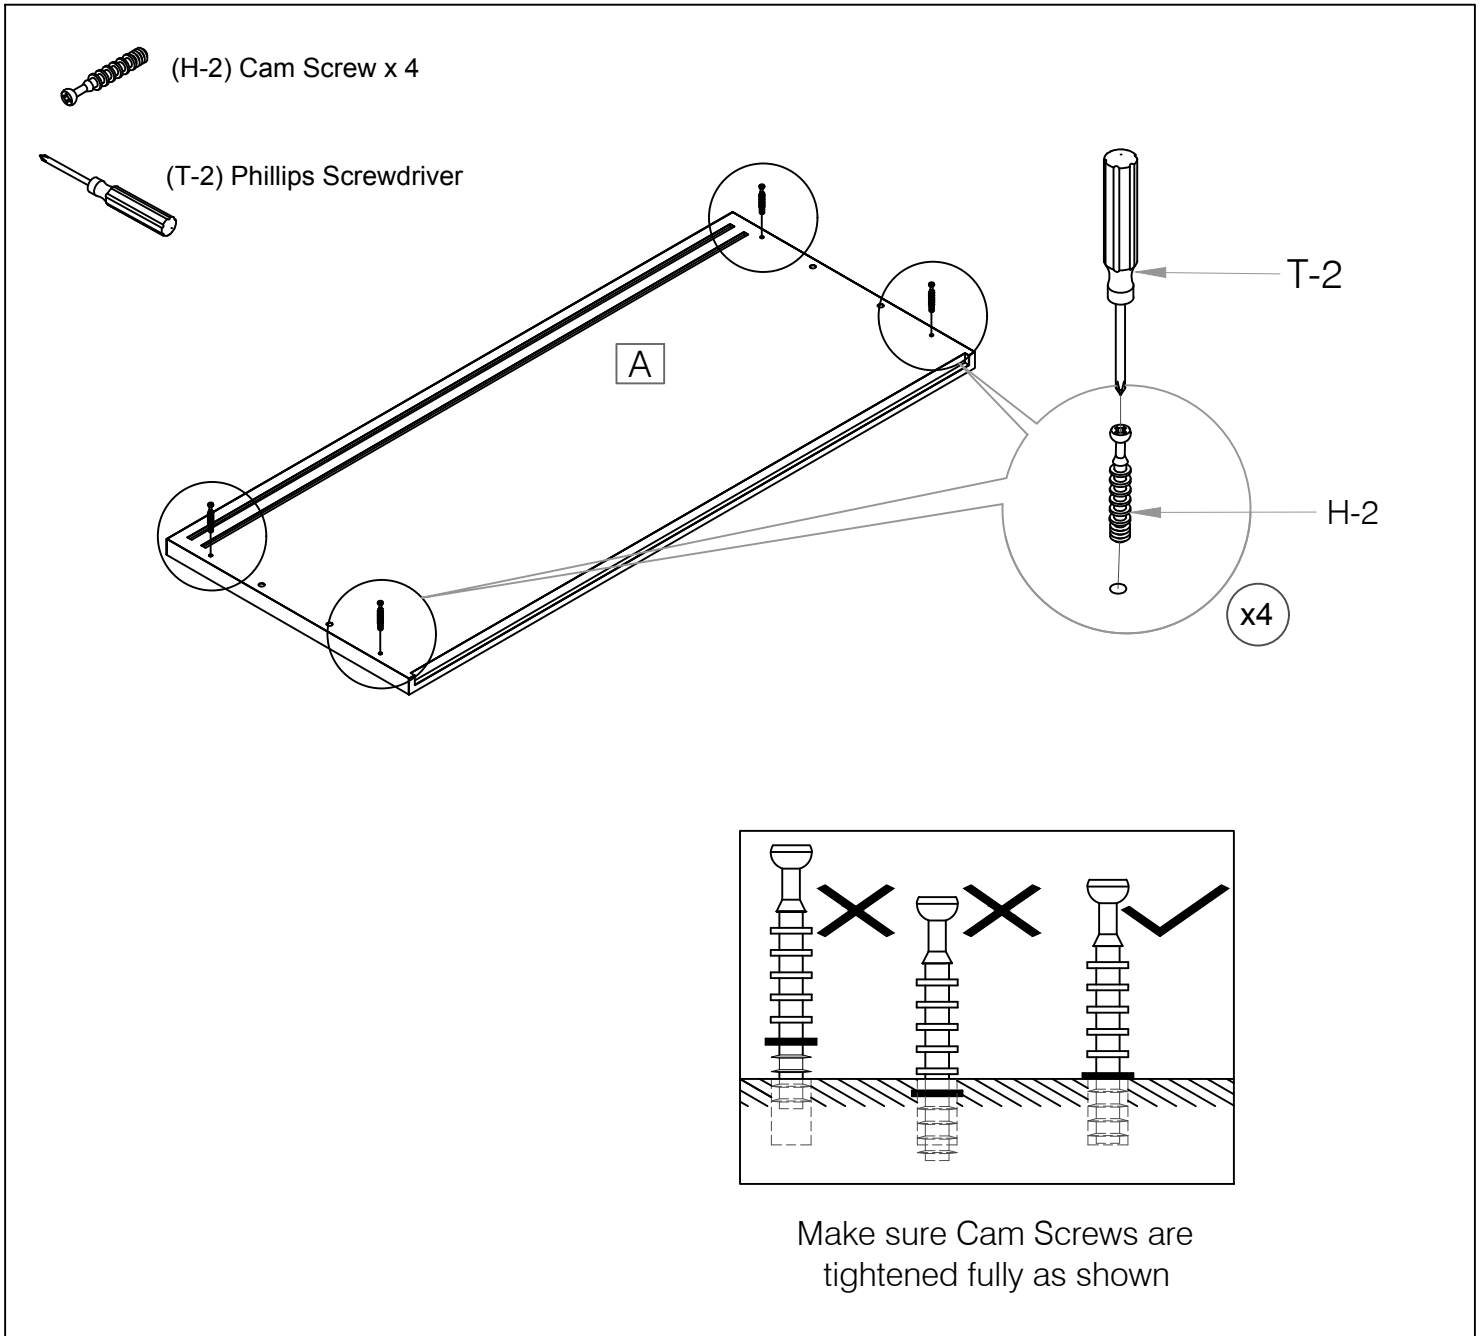


Place Top Frame (A) upside down onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top Frame (A) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above.

 Step 2

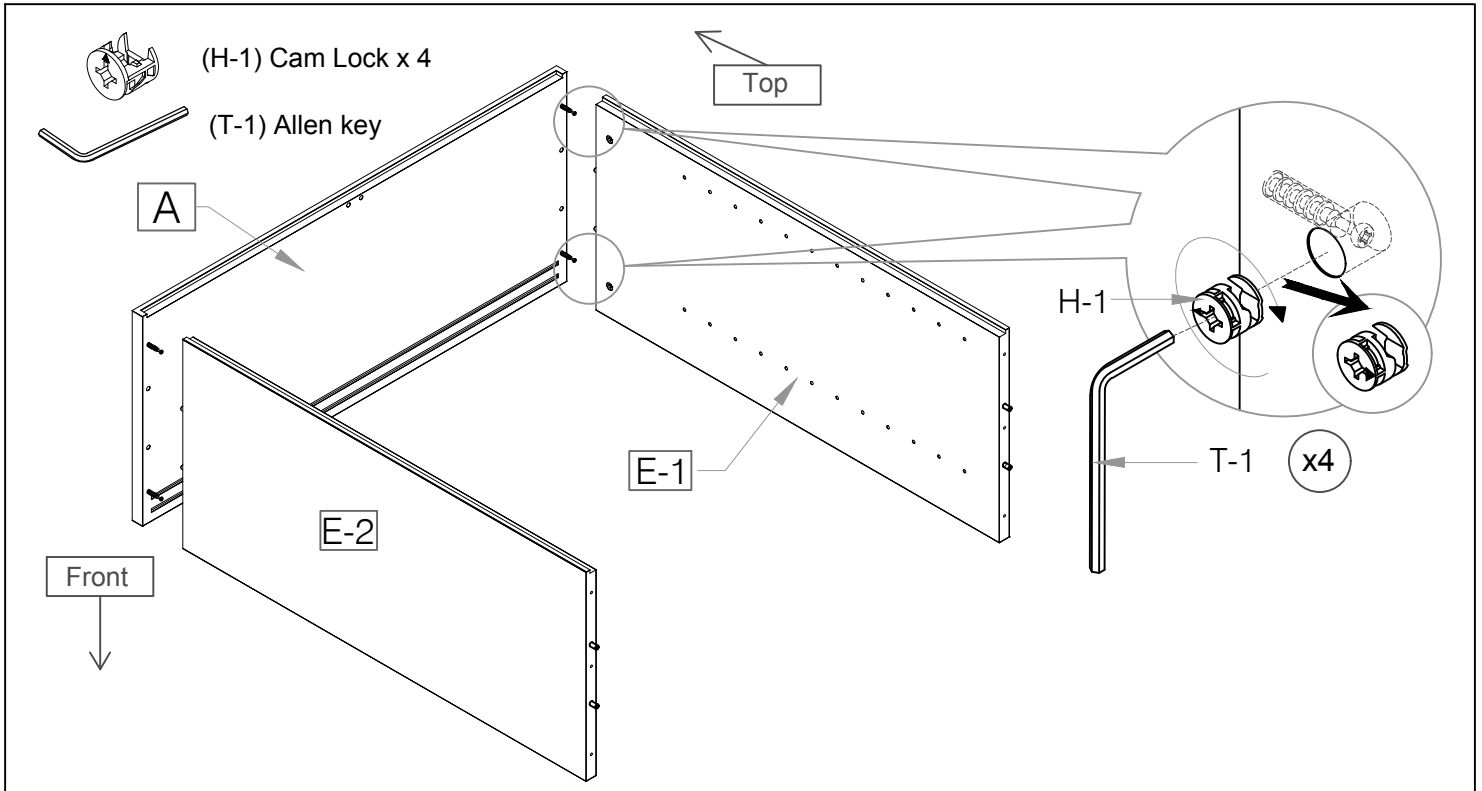


Attach Top Frame (A) to Left/ Right Side Frame (E-1/E-2) by inserting previously installed Cam Screws (H-2) into receiving holes. Install Cam Locks (H-1) into the corresponding holes inside upper sides of Left/ Right Side Frame (E-1/ E-2) as illustrated. Make sure arrows on Cam Locks point to the screw upon insertion. Secure all Cam Locks (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVERTIGHTEN** the Cam Locks.

 Step 3

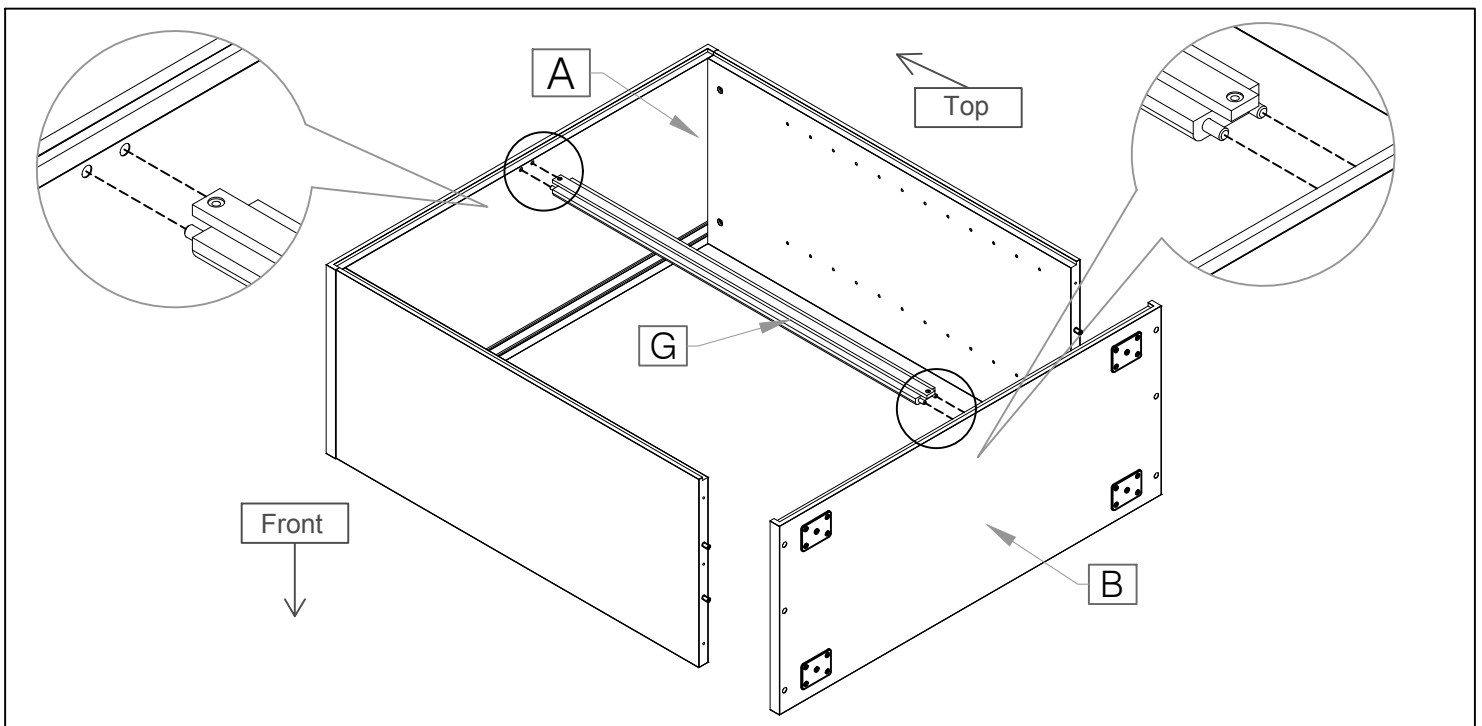


Insert the TOP end of Vertical Rail (G) into the corresponding holes on Top Frame (A). Next, attach Bottom Frame (B) to the BOTTOM end of the Vertical Rail (G), Left Side Frame (E-1) and Right Side Frame (E-2) by inserting dowels into corresponding holes. After this step, entire assembly should be able to stand on its own.

 Step 4

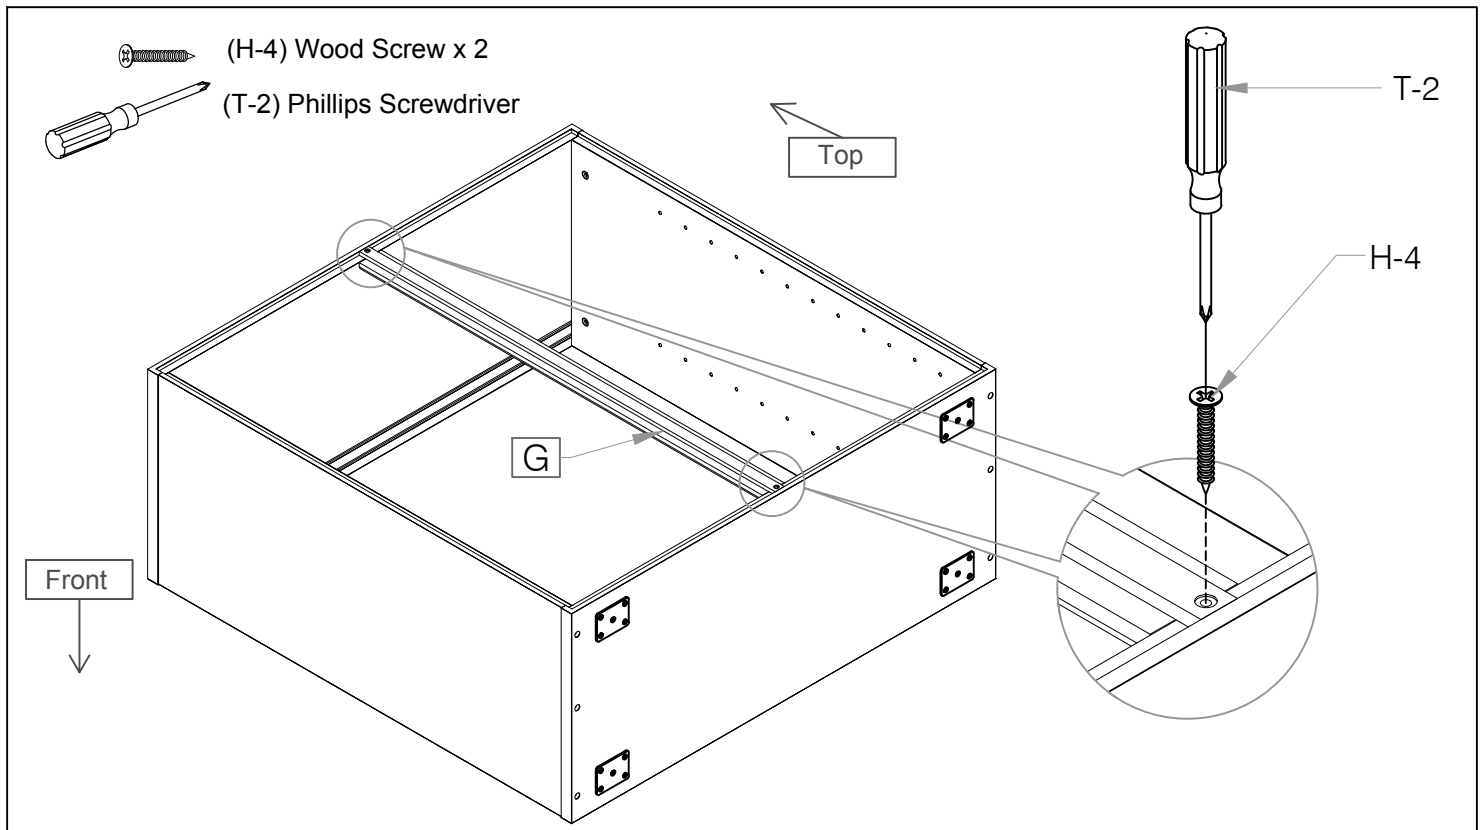


Secure the Vertical Rail (G) using Wood Screws (H-4) and a Phillips Screwdriver (T-2) (not included).

 Step 5

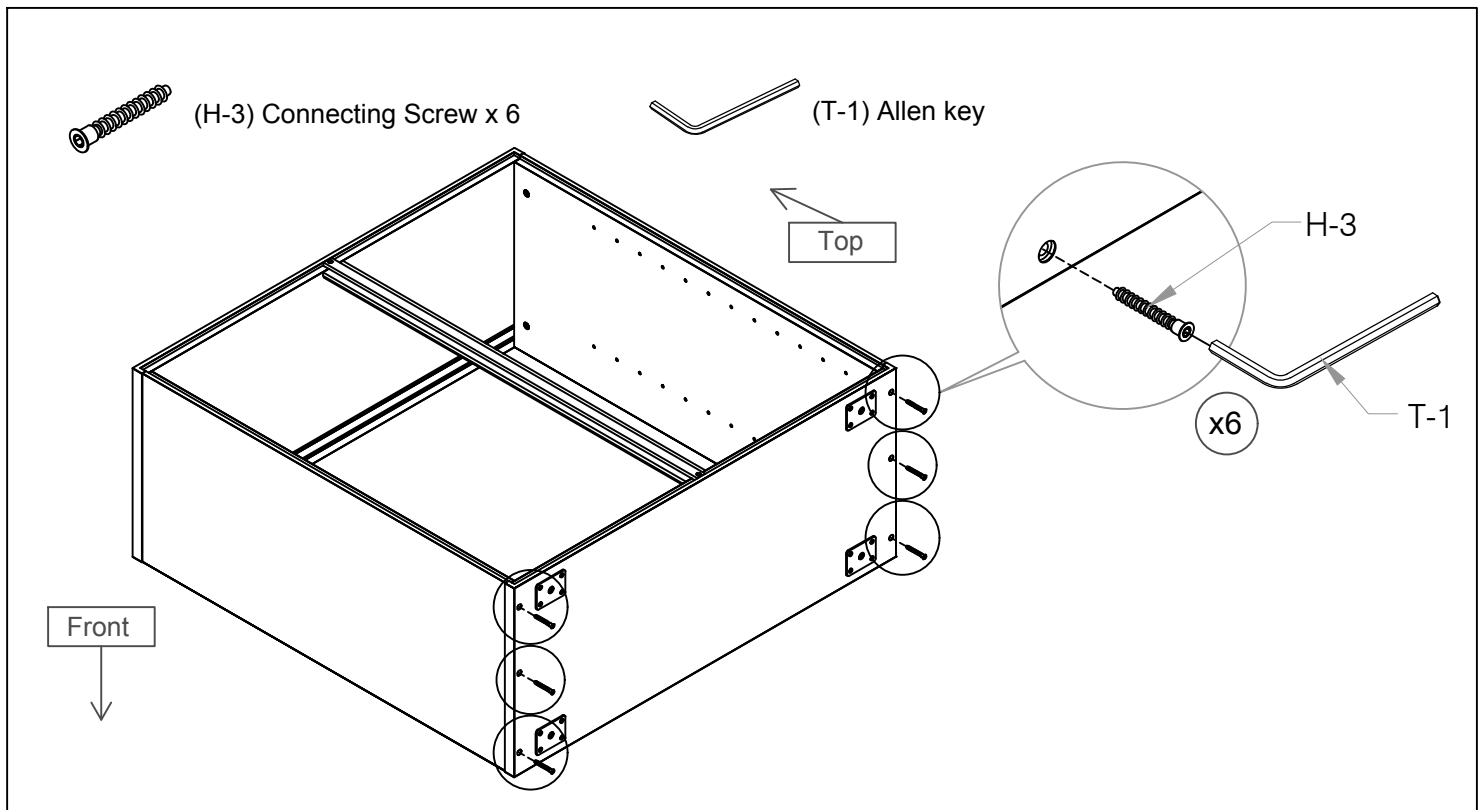


Secure Bottom Frame (B) to Left Side Frame (E-1) and Right Side Frame (E-2) using Connecting Screws (H-3). Engage all screws before fully tightening using Allen Key (T-1).

 Step 6

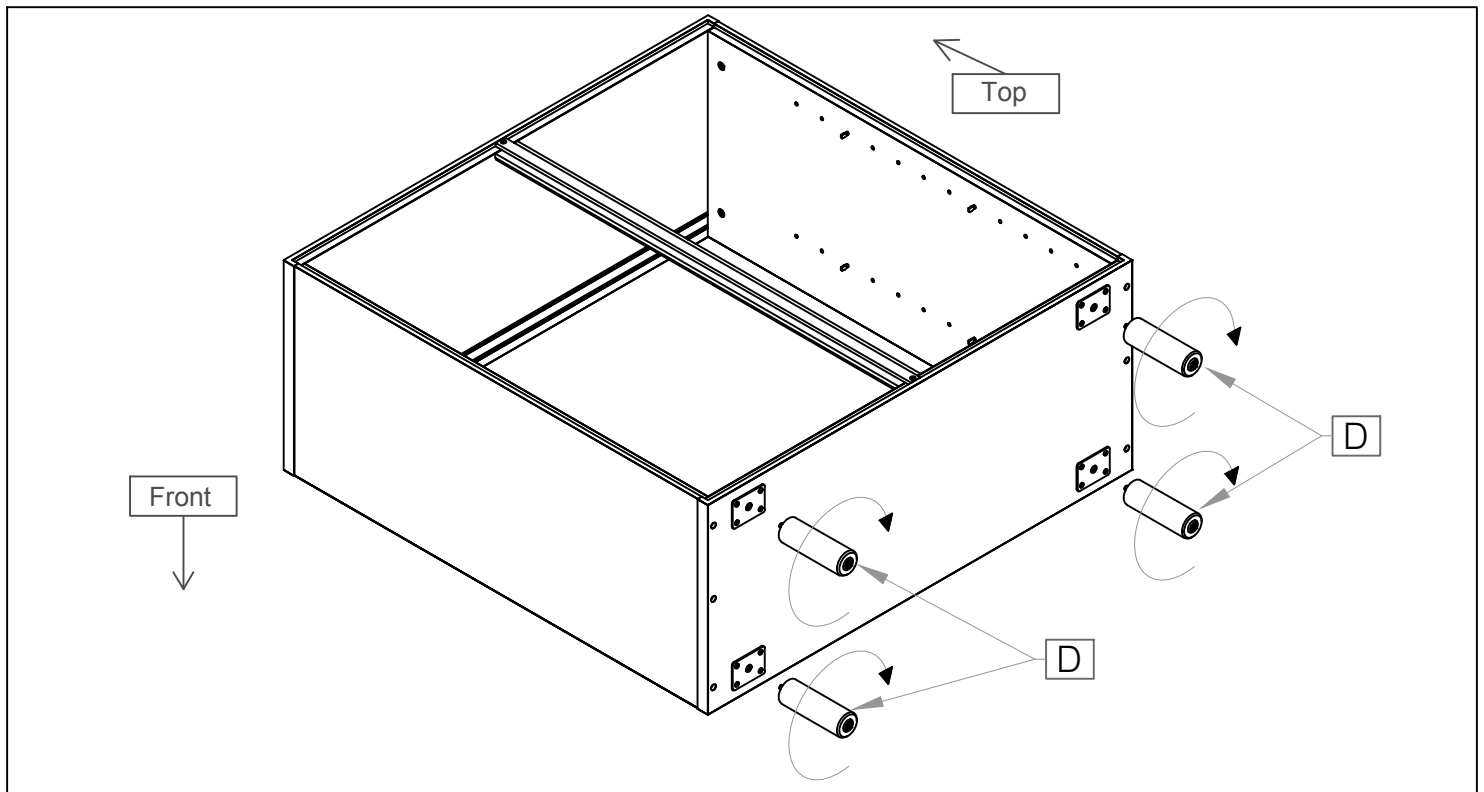


Position and secure Legs (D) to each metal threaded plate at the corners of Bottom Frame (B) as shown. Secure each leg by threading the stud clockwise until it is snug against the metal plate. **DO NOT OVER TIGHTEN LEGS.**

 Step 7

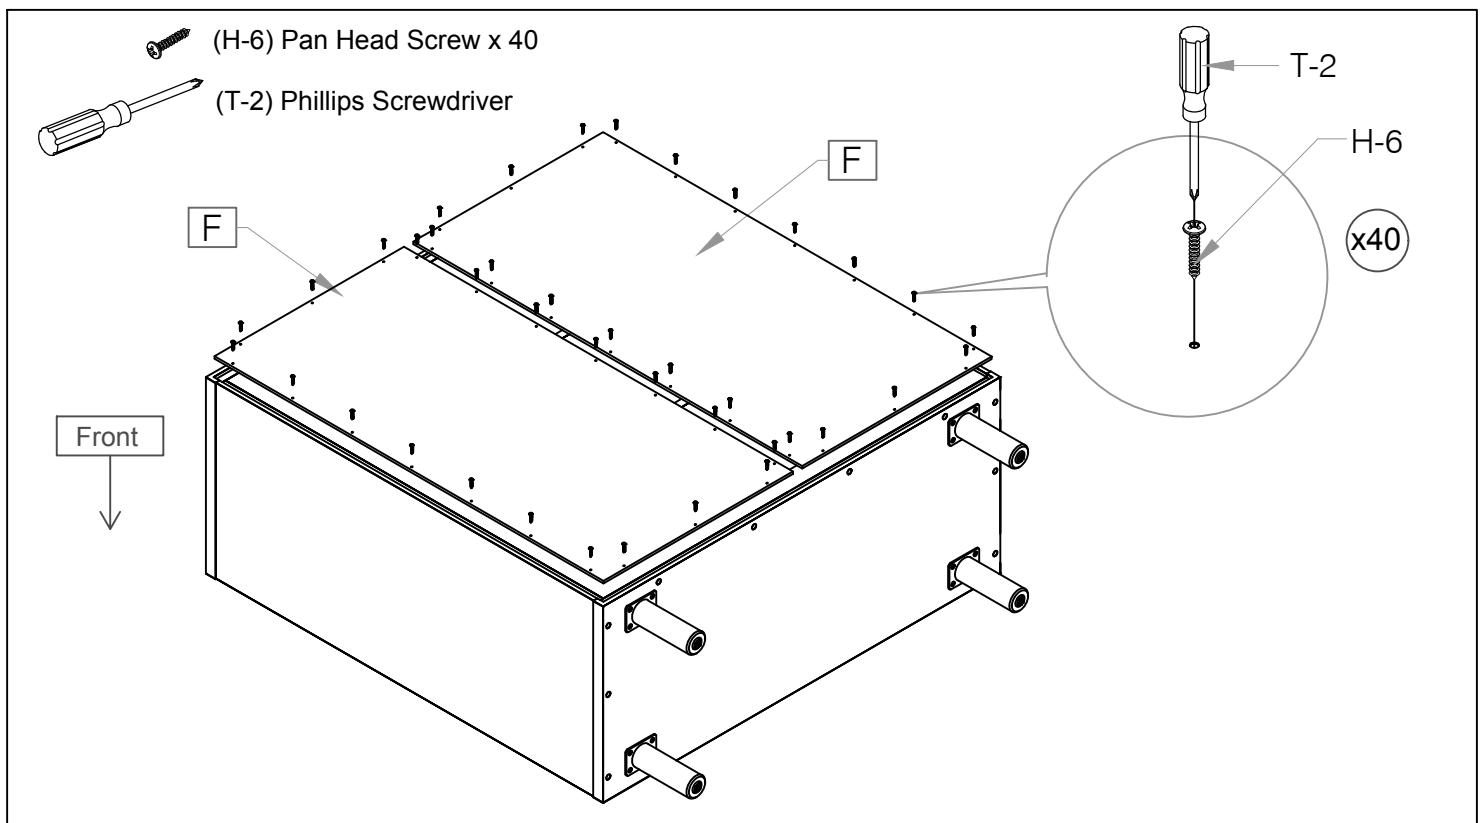


Attach Back Panels (F) to the back of the storage assembly as shown. Secure the panels using Pan Head Screws (H-6). Tighten but do not over-tighten the screws using a Phillips Screwdriver (T-2).

 Step 8

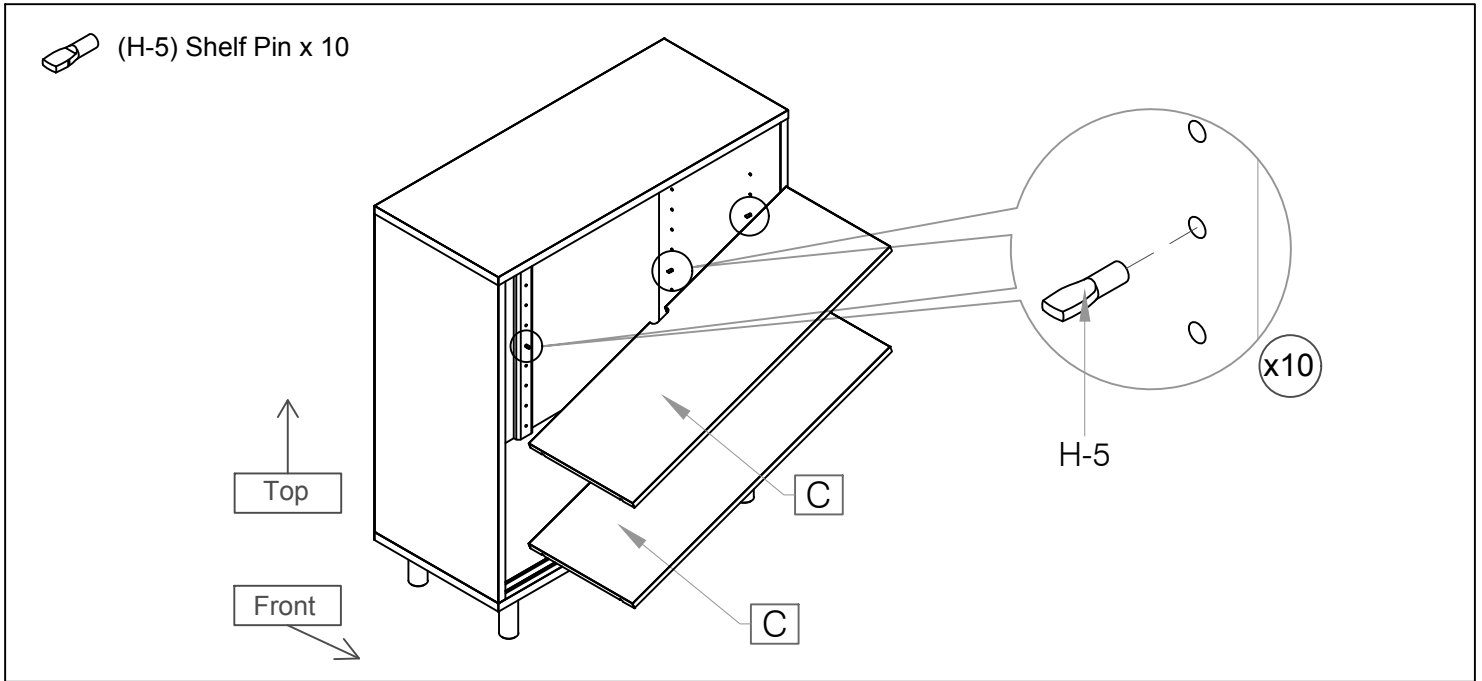

Using a second person to assist you, turn assembly upright onto Legs (D). Insert Shelf Pins (H-5) into the desired hole locations on Left Side Frame (E-1), Right Side Frames (E-2) and Vertical Rail (G). Turn Shelves (C) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-5).

 Step 9

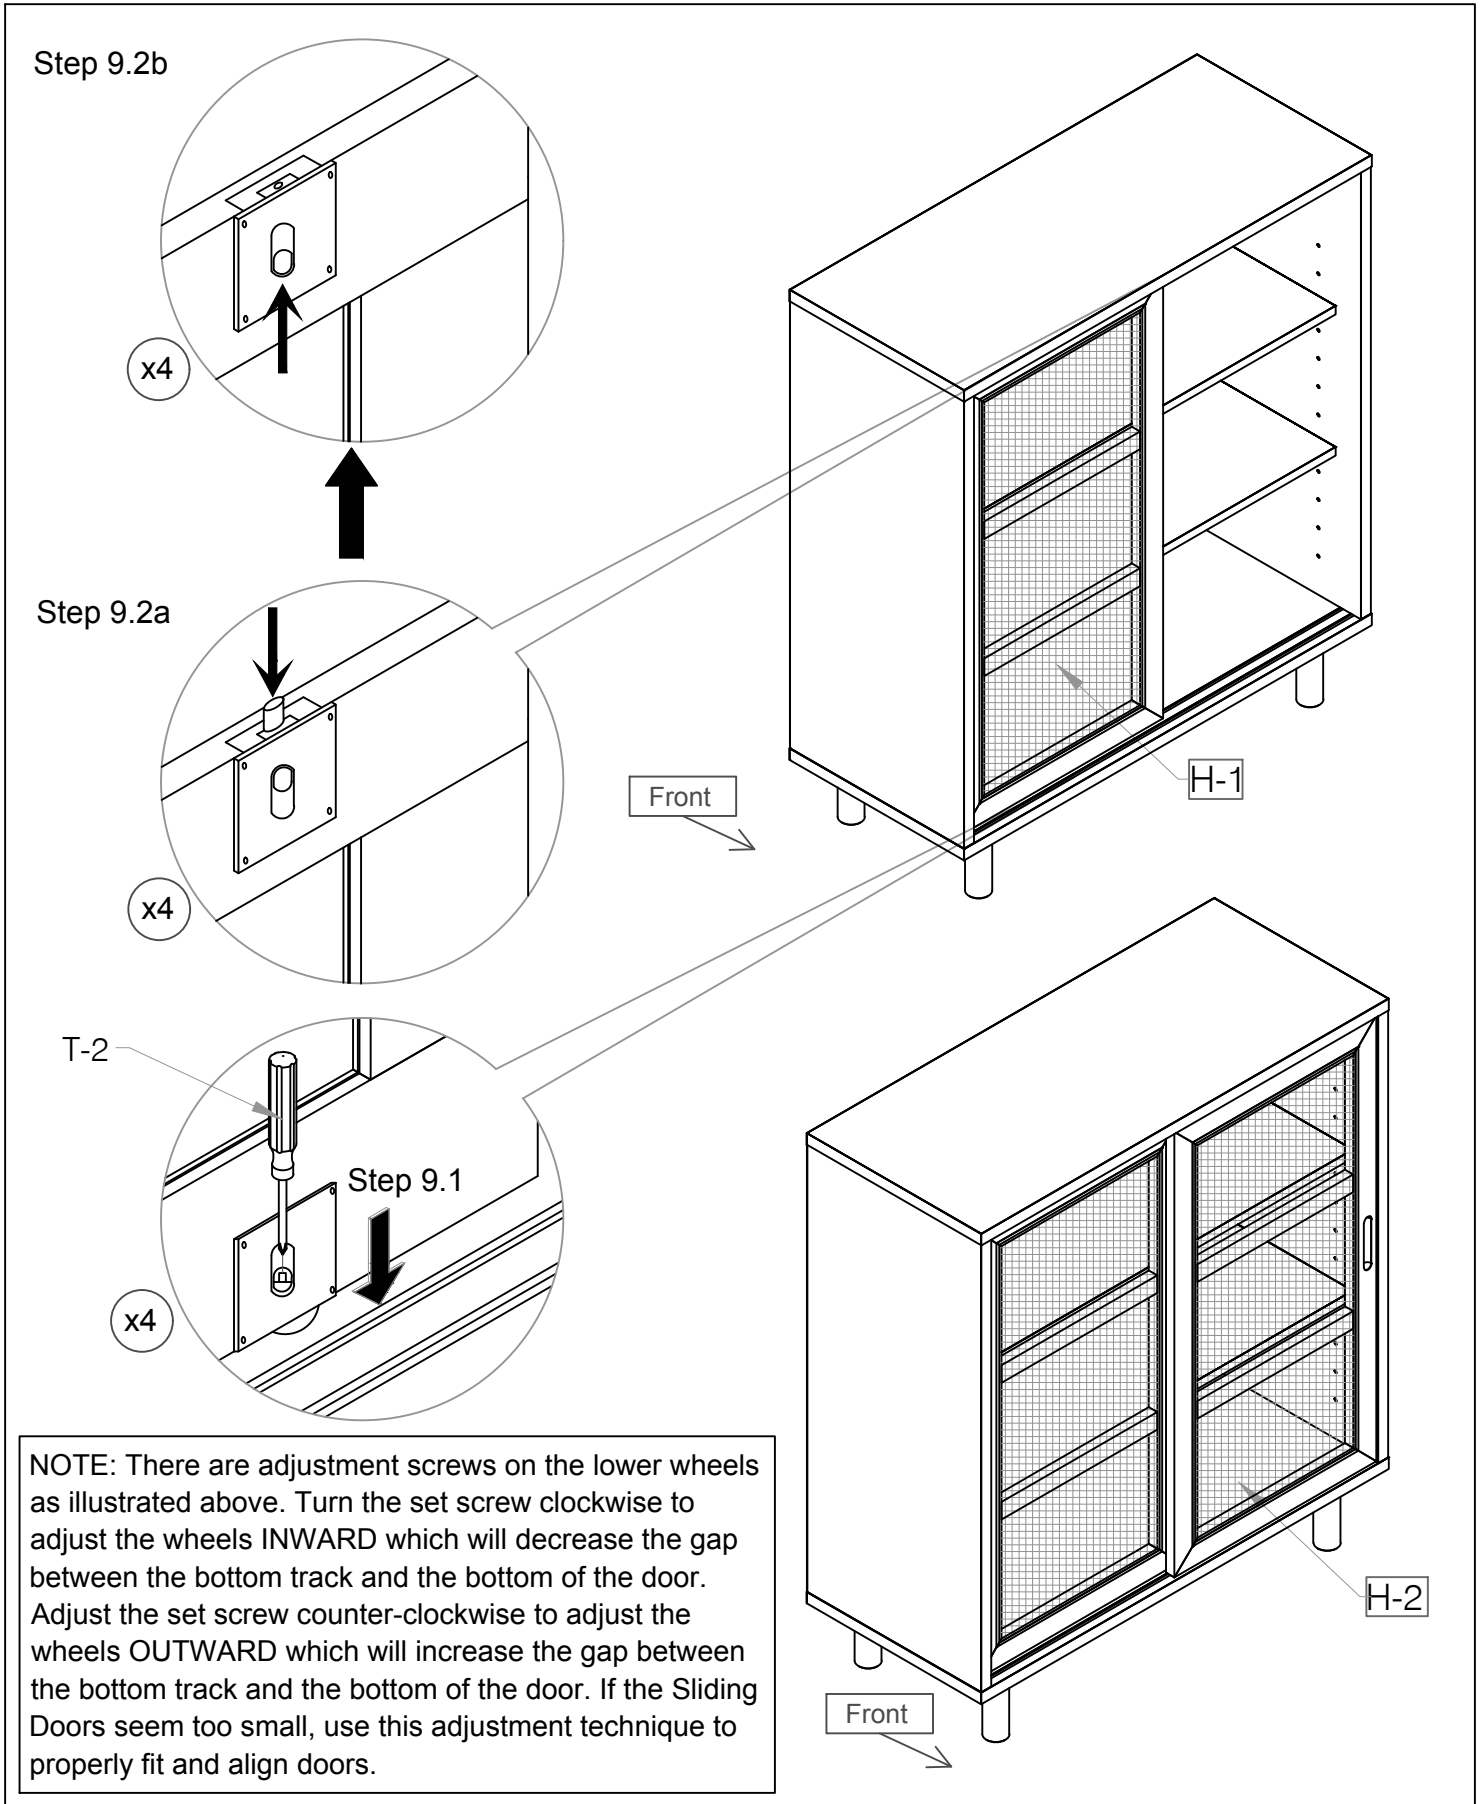


Step 9.1: Insert the bottom wheel of the Left Sliding Door (H-1) into the outer groove located on the front edge of the Bottom Frame (B).


Step 9.2a: Push and lock the button located above the latch at the top of the Left Sliding Door (H-1) in place.

Step 9.2b: Position the Left Sliding Door (H-1) into the top track and release the latch button to the outside track. Repeat the same steps to install the Right Sliding Door (H-2) in inner tracks.

 Step 10

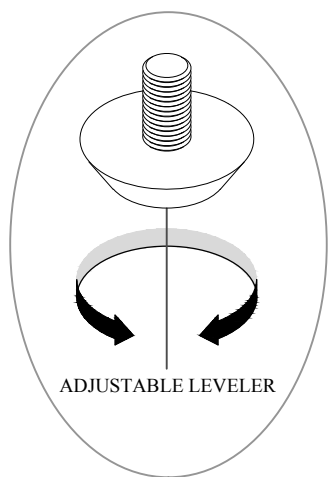

 NOTE: Levelers can be used for adjustment if needed.

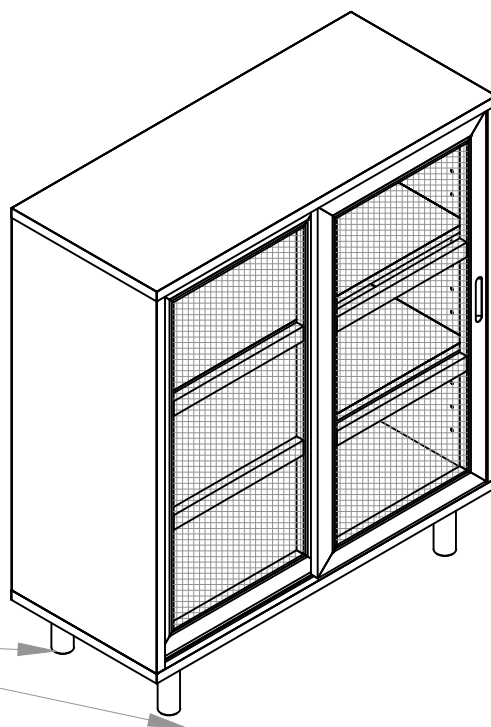

Ensure that all bolts have been fully tightened.

Assembly is now complete and the Gustav 48" Cane Door Bookcase is ready for use.

NOTE: Levelers can be adjusted for additional stability if needed.

Care & Maintenance



 
- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture in direct sunlight.



- Do not place furniture near heating or cooling vents.



 
- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside. For indoor use only.




- All products sold at World Market are not for commercial use and are intended for residential use only.




- Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.

Anti-Tip Measures

  Warning - Children may be injured by tipping of furniture and the use of the Anti-Tip Kit is highly recommended. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assumes no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit MUST be installed into the wall using proper mounting hardware OR into a wall stud using appropriate screws. Position of the Anti-tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc,...).

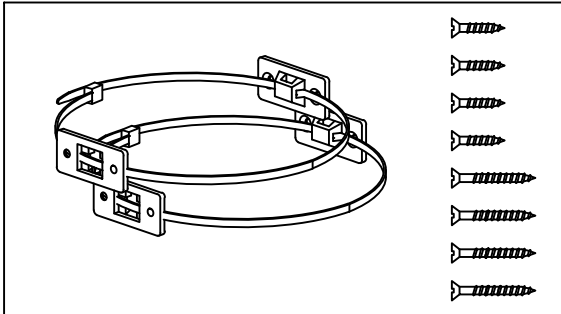
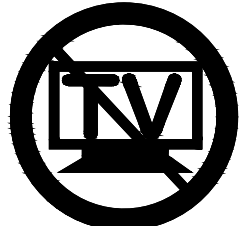 


Anti-Tip kit contents

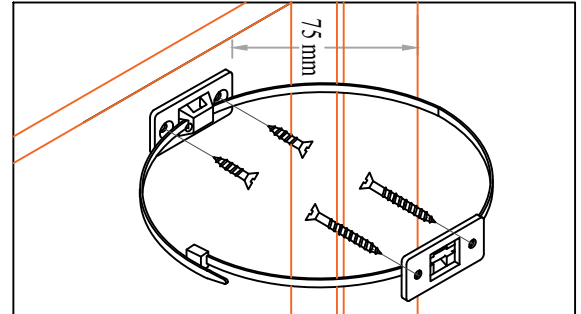

Anti-Tip kit installation

 
⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

***This is a permanent label.
Do not remove!***

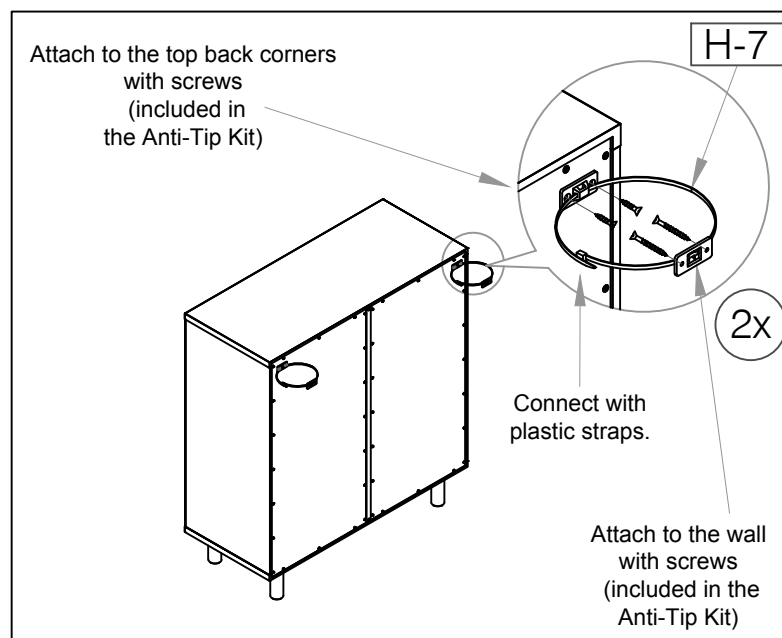

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of purchase. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.