

966-03/966-W-03/966WAL-03
966G-03/966BLK-03/999-03


DRESSER

966/999
SERIES

Assembly Instruction


STEP 1

UNSCREW HANDLE

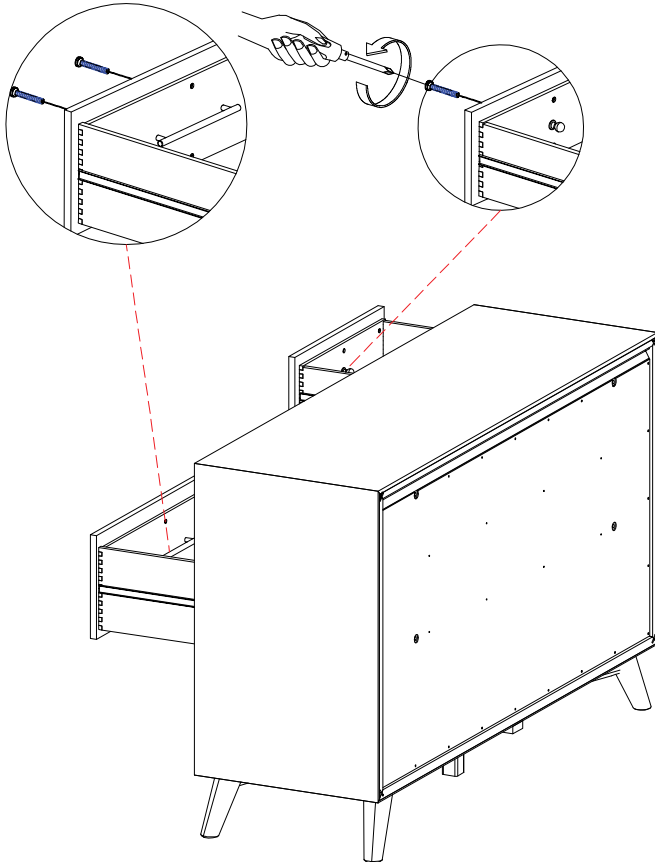

STEP 2

RE-SCREW ON REVERSE SIDE

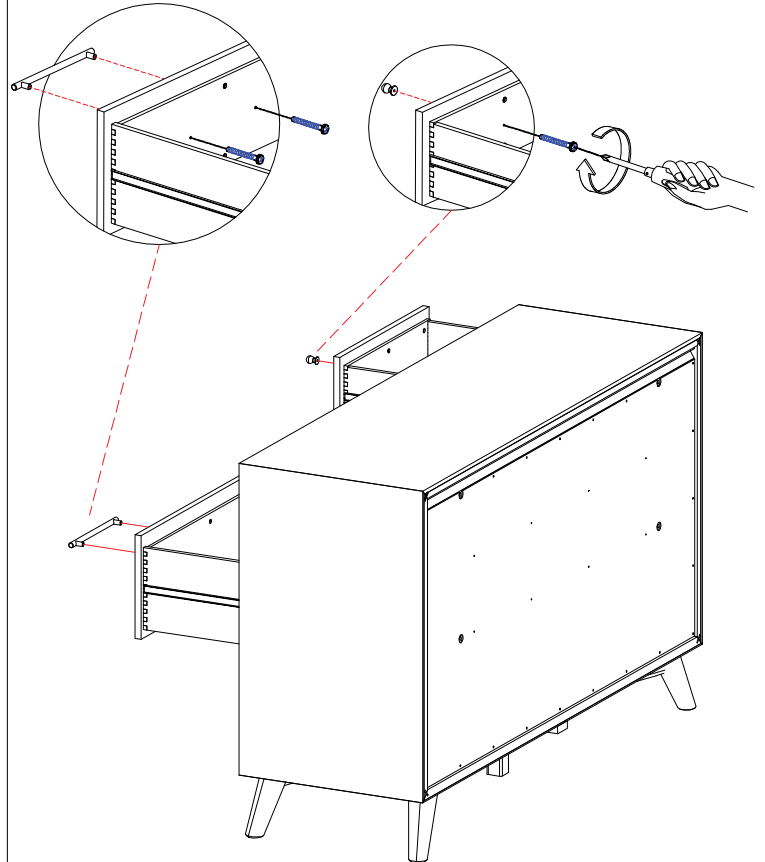

FINISH

