


Part List

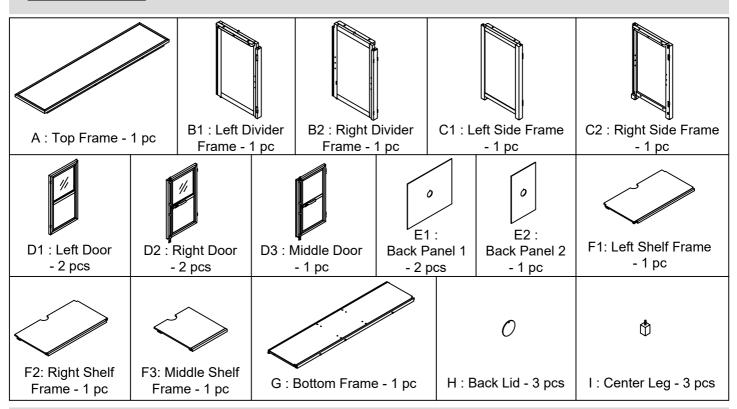


Hardware List

Label	Picture	Description	Size	Qty
H-1	() mm	Allen Bolt	Ø6x40 mm	8
H-2	(c) Junior Market	Allen Bolt	Ø6x55 mm	8
H-3	Q	Lock Washer	Ø6xØ10.5xT2 mm	16
H-4	0	Flat Washer	Ø6xØ16xT2 mm	16
H-5	Ø	Shelf Pin		12
H-6	ø	Connector Bolt	Ø6x10 mm	3
H-7	S.	Allen Bolt	Ø6x13 mm	3
H-8	0	Flat Washer	Ø10xØ20xT2 mm	3
H-9	I	Anti-Tip Kit		1


Tool List

Label	Picture	Description	Size	Qty
T-1		Allen Key	4 mm	2
T-2		Triangle		1
T-3		Straight Wood Bar		1
T-4		Phillips Screwdriver (Not provided)		1

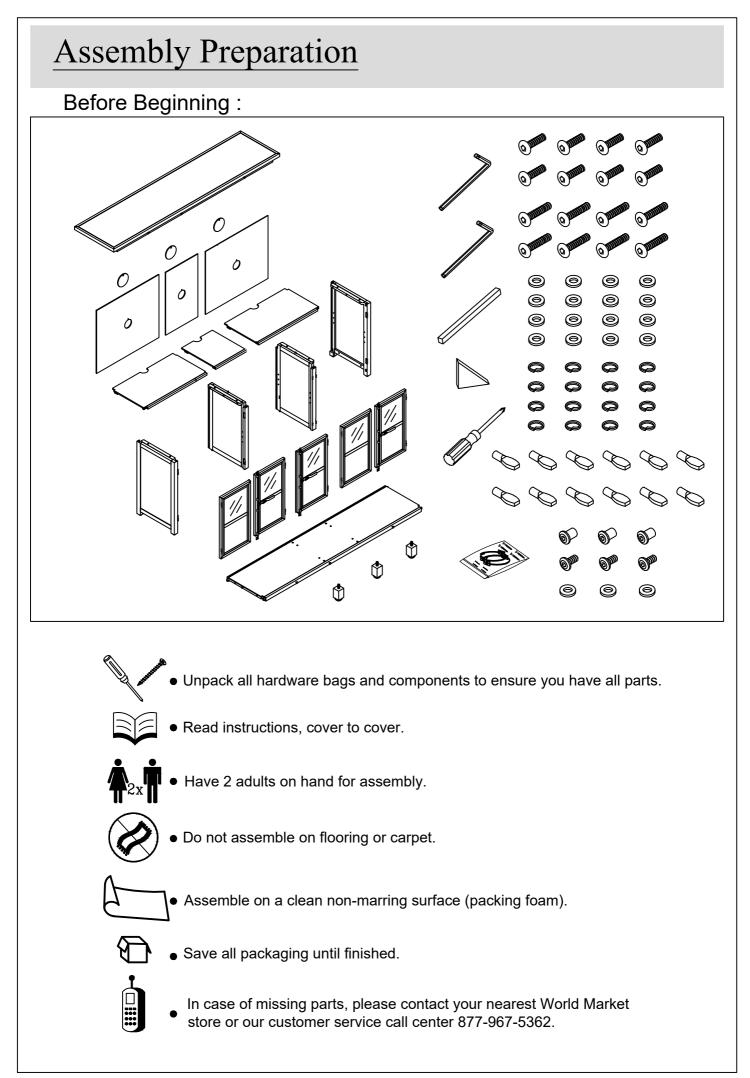


Assembly Steps

Step 1

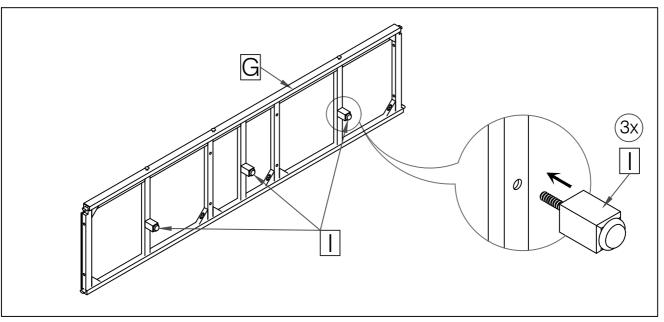


On a non-marring surface, position and secure Center Legs (I) to Bottom Frame (G) by using screw on Center Legs (I).

Step 2

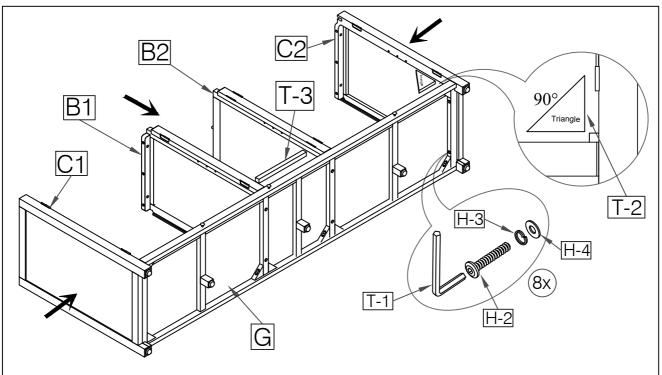


On a non-marring surface, position and secure Left Side Frame (C1), Right Side Frame (C2), Left Divider Frame (B1) and Right Divider Frame (B2) to Bottom Frame (G) with Flat Washers (H-4), Lock Washers (H-3) and Long Allen Bolts (H-2) by using the Allen Key (T-1). Then, use the Straight Wood Bar (T-3) as a tool to check the distance between dividers. Last, use the provided 90° Triangle (T-2) and adjust the corners to make sure the Side Frames and Dividers are square. Fully tighten Allen Bolts.

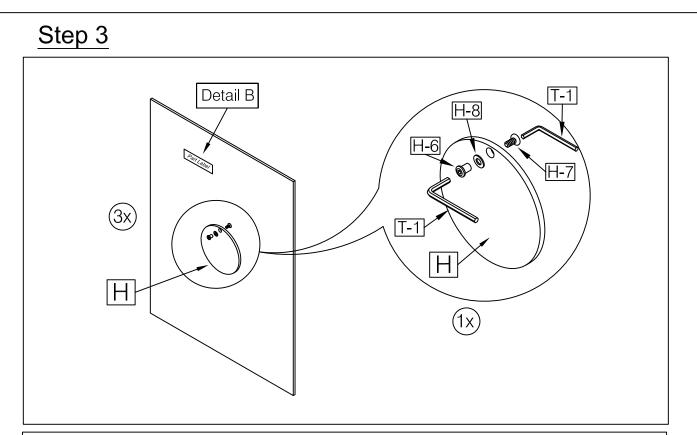


Position and secure Back Lids (H) to Back Panels 1 (E1) and Back panel 2 (E2) with Connector Bolts (H-6), Flat Washers (H-8) and Small Allen Bolts (H-7) by using the Allen Keys (T-1). Do not over tighten Allen Bolts.

Step 4

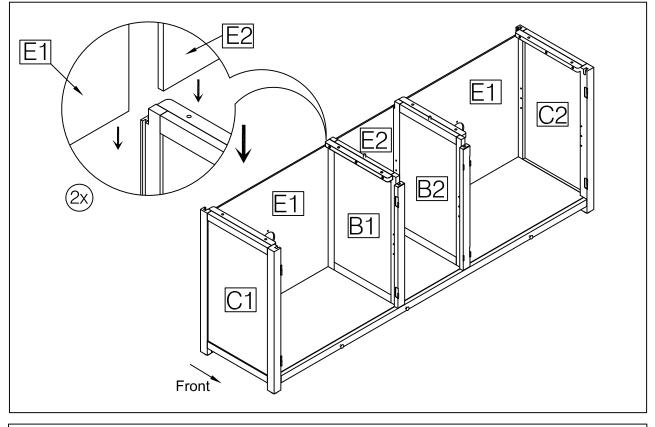


Turn assembled unit upright. Insert Back Panels (E1) into Left Side Frame (C1) and Left Divider Frame (B1) then Right Side Frame (C2) and Right Divider Frame (B2). Insert Back Panel (E2) into Left Divider Frame (E1) and Right Divider Frame (E2)

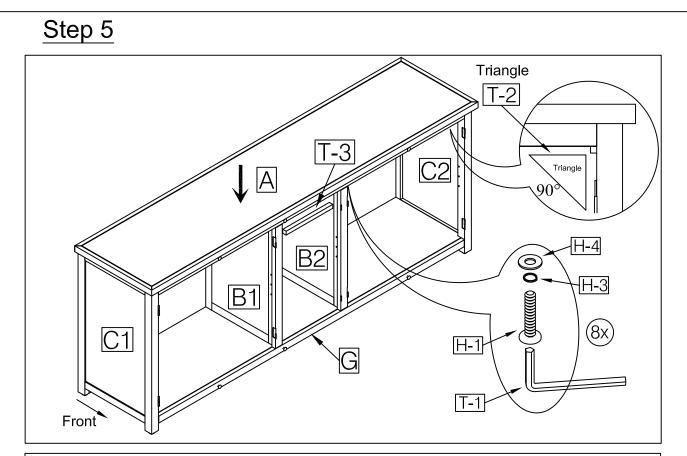


Position and secure Top Frame (A) to Side Frames (C1 & C2) and Divider Frame (B1 & B2) with Flat Washers (H-4), Lock Washers (H-3) and Short Allen Bolts (H-1) by using the Allen Key (T-1).

Then, use the Straight Wood Bar (T-3) as a tool to check the distance between dividers. Last, use the provided 90° Triangle (T-2) and adjust the corners to make sure the Storage Cabinet is square. Fully tighten Allen Bolts.


<u>Step 6</u>

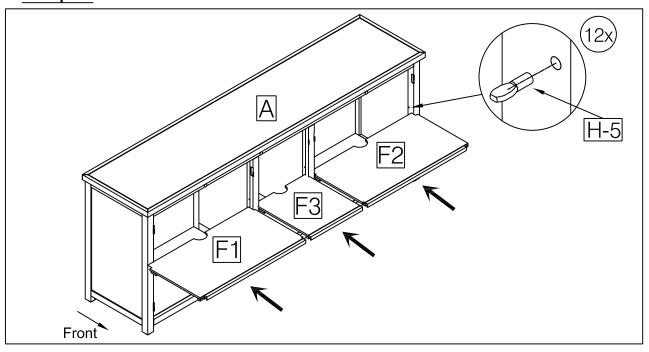

Insert Shelf Pins (H-5) into the pre-drilled holes at desired height location on the Side Frames (C1 & C2) and Divider Frame (B1 & B2). Place Shelf Frames (F1, F2 & F3) onto the Shelf Pins (H-5).

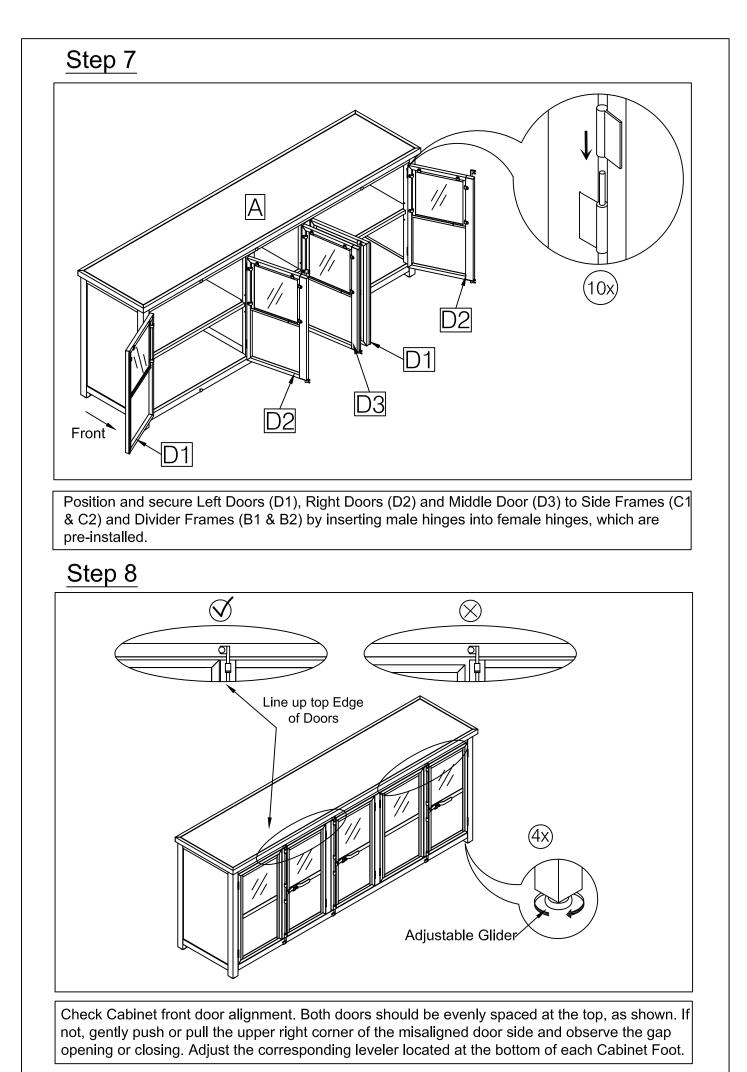

Page 7

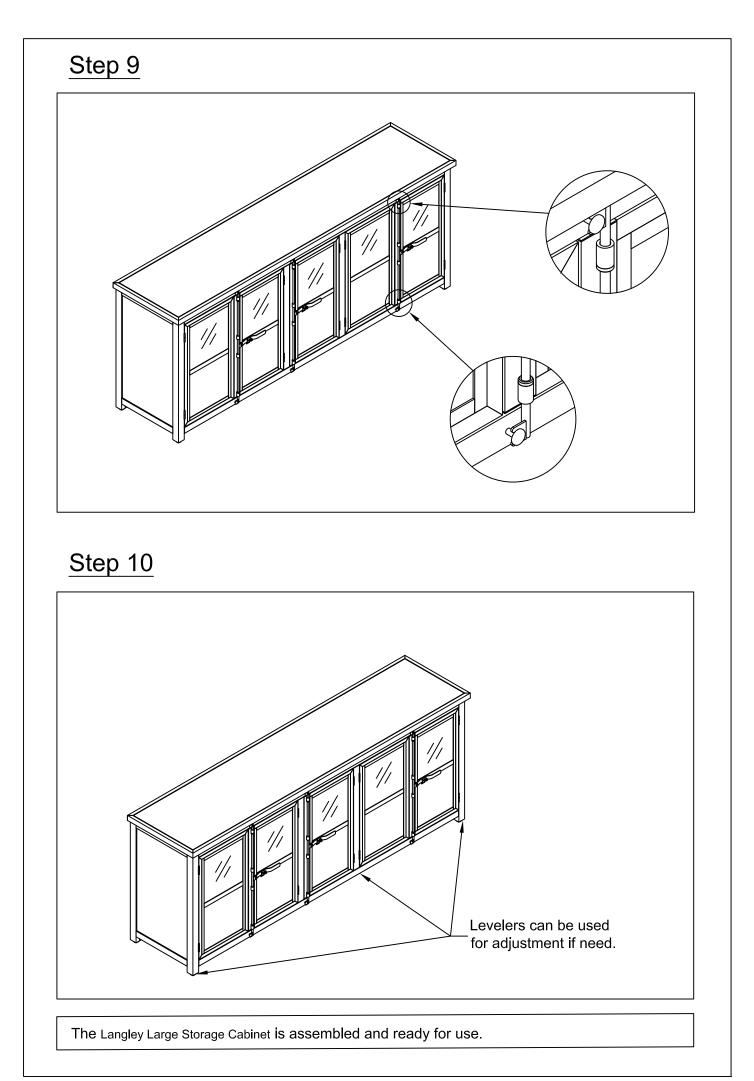

Care & Maintenance





• Do not clean furniture with harsh cleansers or polish.





Do not place furniture in direct sunlight.



• Do not place furniture near heating or cooling vents.



• Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside. For indoor use only.



Not for commercial use. For residential use only.




• Dust and pick-up spills using a clean,non-colored, lint-free cloth.


Anti-Tip Measures

WARNING - Children may be injured by tipping furniture and the use of the Anti-Tip Kit is highly recommended.

This Anti-Tip Kit (H-9) is only a precaution. It is not a substitute for proper adult supervision. Manufacturer or retailer assumes no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture.

This Anti-Tip Kit MUST be installed into a wall stud using the proper mounting hardware. (Position of Anti-tip Kit on product depends on wall stud locations).

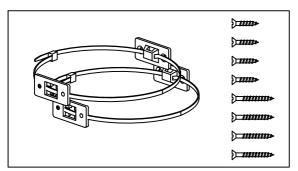

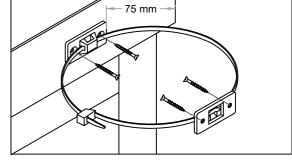

Anti-Tip kit contents

Anti-Tip kit installation

