
966-04/966-W-04/966WAL-04 966G-04/966BLK-04/999-04

SMALL CHEST 966/999 **SERIES**

Assembly Instruction


STEP 1

UNSCREW HANDLE

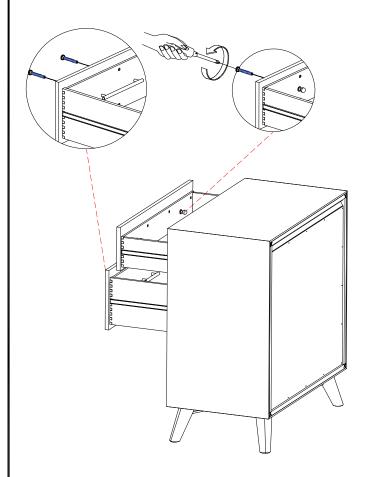

STEP 2

RE-SCREW ON REVERSE SIDE

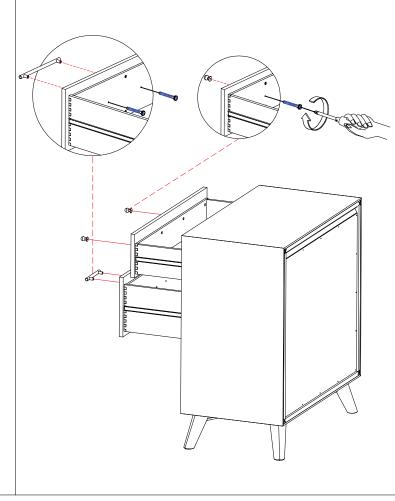

FINISH

